


Service
Service
Service

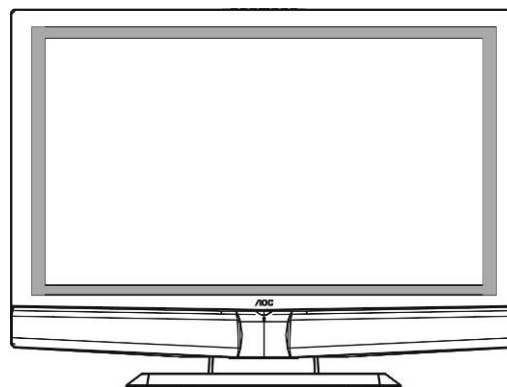

Service Manual

Horizontal Frequency
31.5-48.36 KHz

TABLE OF CONTENTS

Description	Page	Description	Page
Table Of Contents.....	1	7. PCB Layout	30
Revision List.....	2	7.1. Main Board.....	30
Important Safety Notice.....	3	7.2. Power Board.....	33
1. General Specification.....	4	7.3. Audio Board.....	36
2. Operating Instructions.....	5	7.4.Tuner Board.....	37
2.1. The Use Of Remote Control.....	5	7.5.Key Board.....	38
2.2. Front Panel Control Knobs.....	6	7.6.IR Board.....	38
2.3. To Use The Menu.....	7	8 Block Diagram.....	39
2.4. How To Connect.....	13	9. Schematic.....	40
3. Input/Output Specification.....	16	9.1 Main Board.....	40
3.1.Input Signal Connector.....	16	9.2. Power Board.....	51
3.2.Factory Preset Display Modes.....	17	9.3. Tuner Board.....	52
4. White-Balance, Luminance Adjustment.....	18	9.4. Audio Board.....	56
5. Mechanical Instructions.....	22	10. Exploded View.....	57
6. Repair Flow Chart	25	11. BOM List.....	59

SAFETY NOTICE

ANY PERSON ATTEMPTING TO SERVICE THIS CHASSIS MUST FAMILIARIZE HIMSELF WITH THE CHASSIS AND BE AWARE OF THE NECESSARY SAFETY PRECAUTIONS TO BE USED WHEN SERVICING ELECTRONIC EQUIPMENT CONTAINING HIGH VOLTAGES.

CAUTION: USE A SEPARATE ISOLATION TRANSFORMER FOR THIS UNIT WHEN SERVICING

Revision List

[illegible]

Important Safety Notice

Proper service and repair is important to the safe, reliable operation of all AOC Company Equipment. The service procedures recommended by AOC and described in this service manual are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It is also important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. AOC could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, AOC has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by AOC must first satisfy himself thoroughly that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

Hereafter throughout this manual, AOC Company will be referred to as AOC.

WARNING

Use of substitute replacement parts, which do not have the same, specified safety characteristics might create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from AOC. AOC assumes no liability, express or implied, arising out of any unauthorized modification of design.

Servicer assumes all liability.

FOR PRODUCTS CONTAINING LASER:

DANGER-Invisible laser radiations when open AVOID DIRECT EXPOSURE TO BEAM.

CAUTION-Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION -The use of optical instruments with this product will increase eye hazard.

TO ENSURE THE CONTINUED RELIABILITY OF THIS PRODUCT, USE ONLY ORIGINAL MANUFACTURER'S REPLACEMENT PARTS, WHICH ARE LISTED WITH THEIR PART NUMBERS IN THE PARTS LIST SECTION OF THIS SERVICE MANUAL.

Take care during handling the LCD module with backlight unit

- Must mount the module using mounting holes arranged in four corners.
- Do not press on the panel, edge of the frame strongly or electric shock as this will result in damage to the screen.
- Do not scratch or press on the panel with any sharp objects, such as pencil or pen as this may result in damage to the panel.
- Protect the module from the ESD as it may damage the electronic circuit (C-MOS).
- Make certain that treatment person's body is grounded through wristband.
- Do not leave the module in high temperature and in areas of high humidity for a long time.
- Avoid contact with water as it may a short circuit within the module.
- If the surface of panel becomes dirty, please wipe it off with a soft material. (Cleaning with a dirty or rough cloth may damage the panel.)

1. General Specification

Items		Specification
LCD Panel	Panel Type	37" CMO T370XW01 V1 panel
	Driver Element	A-SI TFT active matrix
	Aspect Ratio	16: 9
	Resolution (Native)	1366 x 768 WXGA
	Pixel Number	0.6 (H) x 0.6 (V) mm
	Active Display Area H x V	819.6 (H) x 460.8 (V) mm
	Pixel Pitch	0.4365mm(H) x 0.4365mm(V)
	Contrast Ratio	700:1 (type)
	Brightness	450 nits (Typical)
	Response Time	8ms
	View Angle (CR≥10)	H: 170°/V: 170° (CR>10)
	Display colors	16.7M colors (8-bits colors)
	Lamp Type/Life	60000 hr (at 4.5mA)
	Color Temperature	Cool / Warm
Frequency Range	Horizontal: 31.5-48.36 KHz, Vertical: 60-75 Hz	
TV System	PAL B/G,D/K,I, NTSC M	
Audio Output	Audio Output: L / R	Headphone Mini-jack for stereo (3.5ø)
OSD language (default)	English, Simplified Chinese	
Table Stand	Included	
Wall Mount	VESA 100 x 100 mm	
Power	Power Supply	AC100V~240V, 47-60 Hz ±3Hz
	Power Consumption	Normal: <220 W Standby: < 7W Suspend: < 7W Power Off < 5W
Environment	Operating Tem.	+ 0 °C ~ + 40 °C
	Storage Tem.	-25°C to 60°C
	Operating humidity	10% ~ 85%
	Storage humidity	5% ~ 85%

2. Operations Instructions

2.1 The Use Of Remote Control

POWER

Press to turn on/off the TV.

Video/S-Video

Select your input source to VIDEO or S-VIDEO.

COMP/T-LINE

Select your input source to Component or HDMI(T-LINE).

VGA

Select your input source to VGA.

(This type couldn't support DVI function.)

TV

Select your input source to TV.

0~9/100 Digit buttons

To select a TV channel.

SLEEP

With this key you can set a time period after which the TV should switch itself to standby. Press the key repeatedly to select the number of minutes. The counter runs from 15,30,45,60,90,120 minutes.

PIP

Press to Open or Close PIP&PAP.

VOL

Press + or - to adjust the volume.

CH

Press + or - to change TV channels number.

MENU

Press to open or exit main menu

NICAM

When NICAM menu activated,press the key repeatedly to select MONO/DUAL1/DUAL2 /DUAL 1+2/STEREO.



OK

Press the button to confirm selection.

< > button

use this button to confirm selection or adjust the desired parameter; otherwise, to increase/decrease the volume.

DISPLAY

- (1) Display Channel number when use RF input.
- (2) Display input source when use other input except TV RF input.

MUTE

Temporarily interrupt the sound or restore it.

PRE-CH

To display the previously selected TV channel.

WIDE

Includes 6 modes: Press repeatedly to select 4:3 /14:9 / 16:9 ZOOM 16:9 ZOOM UP / CINERAMA/ALL SCREEN.

EFFECT

You can choose your prefer mode of NEWS/MOVIE/MUSIC/BBE ViVA/CUSTOM/STEREO.

SWAP

Press this key can select PIP main source and sub source exchange.


SOURCE

Press this button to display selected source, press ^ V button to select.

^ V button

When in menu mode, use this button to select to the up/down; otherwise, to change TV channels.

2.2 Front Panel Control Knobs

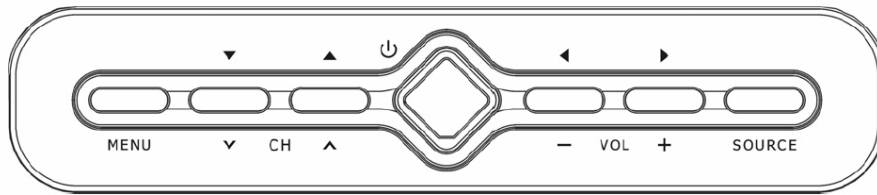

Power : Press this button to turn on the TV or allow the TV to enter standby mode. It is located on the lower right corner of the TV.

If the TV is in standby mode, the indicator at the front will illuminate amber.

MENU : Press this button to display or exit the OSD menu..

CH(▲▼) : When the OSD menu appears, press these two buttons to elect the item you want to execute; when no OSD menu appears, use to change channels in TV mode.

VOL.(+/-) : When the OSD menu appears, press these two buttons to confirm the selected item; when no OSD menu appears, use to adjust the volume.

SOURCE : Press this button to display selected source, press ▲▼button to select.

2.3 OSD Operations

To use the menus

1. Press the Menu button to display or exit the Main Menu.
2. Use the Up or Down buttons to select the function to be adjusted. The function where the cursor is located is the selected one.
3. Use the Left or Right buttons to enter into the submenu, or to enable or adjust the selected function. The function where the cursor is located is the one that can be adjusted.
4. Press the Menu button to exit the menu.

Adjust menu screen in TV/AV mode

(Note: In different modes, the functions that can be adjusted are different. A grey menu indicates that the function cannot be adjusted.)



Press the MENU button to enter into the OSD MAIN MENU. Items adjustable include : **VIDEO SETTING, SOUND SETTING, PIP SETTING, OPTIONS SETTING, CHANNEL SETTING**


VIDEO SETTING:



1. **PICTURE:** User can select PERSONAL, VIVID, STANDARD, MILD, if selected except PERSONAL item, Contrast, brightness, Saturation, Sharpness, NR, Backlight can't adjust.
2. **CONTRAST:** Adjust black and white level, suitable contrast can make picture more lightly. adjustment range is from 0 to 100.
3. **BRIGHTNESS :** Adjust background brightness, user can collocation it with contrast adjustment range is from 0 to 100.
4. **SATURATION:** Adjust color saturation, range is from 0 to 100.
5. **SHARPNESS:** adjustment picture sharpness, range is from 0 to 100.
6. **TINT:** When the TV uses the NTSC system, you can adjust to the TINT you prefer. The adjustment range is from -50 to +50
7. **NR:** : When the signal is poor, you can turn on the noise reduction function.
8. **BACKLIGHT:** The adjustment range of **Black Level** is from 0 to 10.

You can adjust contrast, brightness, Saturation, Sharpness to your prefer level .

SOUND SETTING

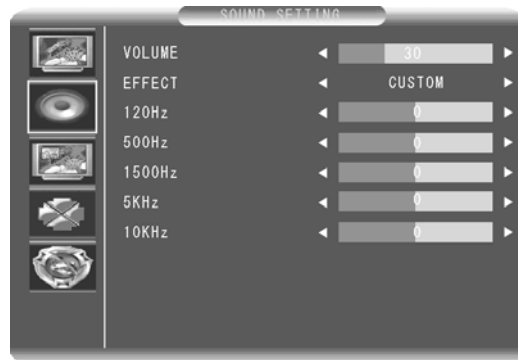

1.VOLUME : The **Volume** adjustment range is from 0 to 100


You can adjust the Volume of the picture to the level you prefer.



2.EFFECT: You can choice your prefer mode of CUSTOM, STEREO, NEWS, MOVIE、 MUSIC、BBE ViVA; Default is CUSTOM mode.

3.120Hz、 500Hz、 1500Hz、 5KHz; 10KHz: Choice the prefer frequency to increase or decrease

PIP SETTING

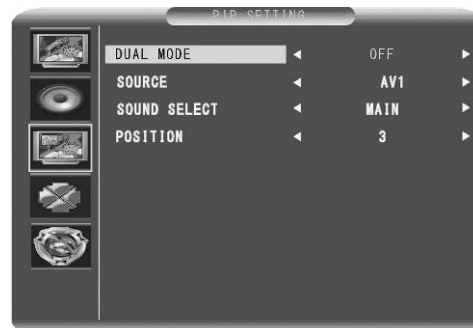

1. DUAL MODE : Can select OFF、 **PIP**、 **PAP status** .
2. POSITION: change small picture position.
3. SOURCE: choose video source from TV/AV1/AV2/S-video.
4. SOUND SELECT: choose sound source from MAIN/SUB.

OPTIONS SETTING:



1.MENU LANGUAGE: This indicates the different languages available for the OSD menu, including Simplified

Chinese, English and traditional Chinese. The default is Traditional Chinese .

2.MENU TIMEOUT: OSD stay timer .

3.MENU BACKGROUND: User can select Opaque or transparency with Menu background.

4.SLEEP TIMER: Use this button to set a time period after which the TV will enter into stand by mode. The time period can be 0>15>30>45 > 60 > 90 > 120 minutes.


The timer will begin to count down from the selected number of minutes after the OSD menu disappears.

Note: To check the remaining time, press the SLEEP button. To cancel the sleep timing, press the SLEEP button repeatedly until 0 appears. If you turn off the TV after you set the sleep timing, the setting will be cleared. You will need to set it again.

5. BLUE SCREEN : When there is no signal input in TV, AV, S-Video and HDTV modes, the screen will become blue. If set to On, the screen will become blue. If set to Off, the screen will display a snowy picture when in TV signal mode and become black in other signal modes. The default is On.

5. RESET : Used to resume the TV's default settings.

CHANNEL SETTING

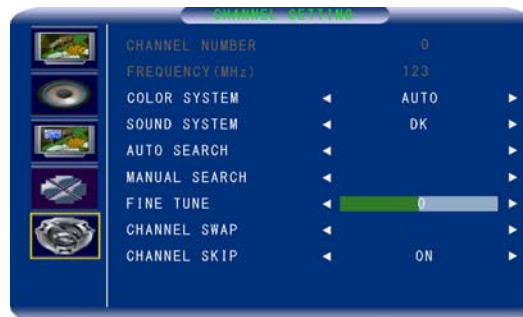

1. COLOR SYSTEM: Auto select TV broadcast system , AUTO/NTSC/PAL.

Note: when user finish auto search , user can change system .

2. SOUND SYSTEM: Select the sound system for a TV broadcast system.BG system shall be selected for most areas of Indonesia.

3. AUTO SEARCH: Used to scan all the TV channels and save to memory.

The TV's total number of channels is 125 (1-125). If you use the remote control to select a number out of the range of 1-125, it will automatically skip to the channel number you previously watched.

4. MANUAL SEARCH: Used to scan the TV channels one at a time. When you scan a channel and press MENU, the last channel will be automatically saved.

5.FINE TUNE: Fine-tunes the frequency of a channel to obtain better image quality.

6. CHANNEL SWAP : Swap current channel with others.

7. CHANNEL SKIP : If set to "On", this channel will be shielded. When you press the Channel Up/Down buttons, you cannot enter this channel. But when you press the digit buttons, you can enter it. To regain full access this channel, set this item to Off.

Adjust menu screen in VGA mode:

The TV has a VGA analog interface, which can be switched using the VGA button on the remote control.



Press the MENU button to enter into the OSD Main Menu. Adjustable items include: **VIDEO SETTING** 、 **SOUND SETTING** 、 **OPTIONS SETTING**、 **VGA SETTING** .

VIDEO SETTING

1. **PICTURE**: Can't adjust in VGA mode .
2. **CONTRAST**: Adjust black and white level ,suitable contrast can make picture more lightly. adjustment range is from 0 to 100.
3. **BRIGHTNESS** : Adjust background brightness, user can collocation it with contrast adjustment range is from 0 to 100.
4. **SATURATION**: Can't adjust in VGA mode.
5. **SHARPNESS** : Can't adjust in VGA mode.
6. **TINT**: Can't adjust in VGA mode.
7. **NR**: Can't adjust in VGA mode.
8. **BACKLIGHT**: Can't adjust in VGA mode.



- 1.**MENU LANGUAGE:** This indicates the different languages available for the OSD menu, including Simplified Chinese, English and traditional Chinese. The default is English.
- 2.**MENU TIMEOUT:** OSD stay timer.
- 3.**MENU BACKGROUND:** User can select Opaque or transparency with Menu background.
- 4.**SLEEP TIMER:** Can't adjust in VGA mode.
5. **BLUE SCREEN** : Can't adjust in VGA mode.
- 6.**RESET** : Used to resume the TV's default settings.

VGA SETTING



1. **H.POSITION:** change horizontal position on screen .
2. **V.POSITION** : change vertical position on screen.
3. **CLOCK:** change picture horizontal width.
4. **FOCUS** : Adjust ADC(Analog Digital Converter) focus.
5. **AUTO ADJUST:** To make optimal video image.
6. **COLOR TEMP.:** Select video color temperature mode, total 3 mode: Warm、Cool、Personal.
7. **PERSONAL:** When “color temp” is under “Personal” , Can edit RGB value.
8. **RESET** :Recall to default.

Tips**Screen Protection**

To avoid permanent damage to the screen, do not use anything abrasive to scratch the display. Unplug the appliance before you clean the screen. Use a clean, soft cloth to wipe the screen and the enclosure to remove the dust from the TV. If you want the screen to be cleaner, you can use a clean, wet cloth to wipe. A cleanser especially designed for LCD screens is recommended. Do not use liquid or spray cleaner.

Warning for Mobile Phones

Since the electromagnetic wave of mobile phones may cause the picture and the sound to become distorted, please keep away from the TV when using a mobile phone.

Waste Disposal Instructions

We pay great attention to environmental protection. This appliance contains reusable materials. After you discard the appliance, professional companies can dismantle the discarded appliance to extract any recyclable materials and minimize the amount of material that has to be disposed of. Be sure to dispose of the old appliance according to the local regulations.


2.4 How To Connect

2.4.1 Power Connection

Plug one end of the power cord to the "AC POWER IN" jack in the rear of the TV, and the other end to the 220V power socket.

If you have not turned off the power and leave TV in standby mode, the TV will continue to consume a residual amount of power.


When unused for long periods of time, it is best to turn off the power switch on the side of the TV and unplug the power cord from the socket.

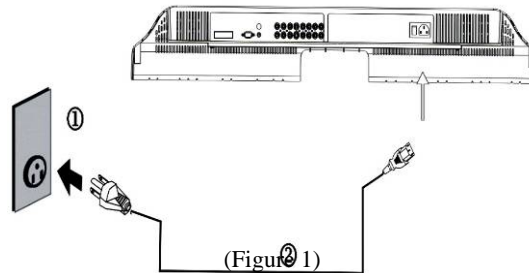

2.4.2 Signal source interface presentation from rear view :


You can connect numerous items of source equipment to your TV. The figure below shows you how to connect these.

Place the TV on a table with the LCD screen facing down to facilitate easy connection with the external equipment. Please take precautionary measures to avoid damaging the LCD screen.

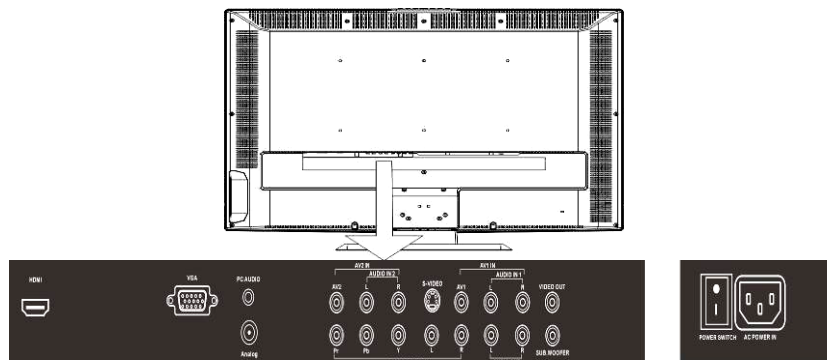

(Figure 2)

1. VGA Signal Input : Display PC host video signal.
2. PC AUDIO Input: Receive sound signal from PC host.

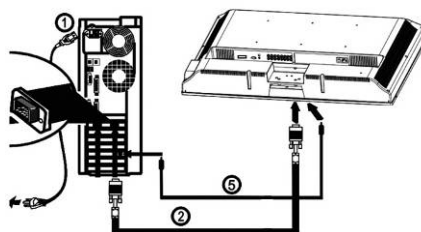


(Figure 3)

2.4.3 How to connect to the PC host.

VGA interface – Connect the one terminal of VGA signal cable to the VGA interface at the rear of the TV ,The other terminal connect to PC host.

as in Figure.

2.4.4 HDMI input

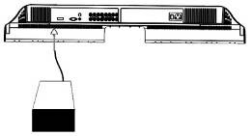

HDMI is the leading new standard for Digital video and audio interconnection. To the HDMI connector you can connect HDMI devices such as a Set Top Box or compatible DVD-R or DVD player with HDMI export. So you can display high-definition pictures on this TV in the digital form.

How to use HDMI:



1. Connect the HDMI cable to the "HDMI" port of this TV, and the other port to the device's interface with HDMI export. (as top-left figure).
2. Select the HDMI button in the Remote control (see bottom-left figure)
3. The HDMI connectors allow the following TV and monitor display mod:

SDTV 720x480i 60Hz/720 x576i 50Hz

EDTV 720x480p 60Hz/ 720x576p 50Hz

HDTV 1920x1080i 50/60Hz

1280x720p 50/60Hz

VGA 640x480 60Hz

Notes:


1. Your TV supports HDCP(High-bandwidth Digital Content Protection). This is a system for protecting DVD content. It provides a secure digital link between a video source (DVD, PC, etc.) and your TV. Content is encrypted at the source device to prevent unauthorized copies from being made.
2. Digital devices from different manufacturers have the possibility of differing output standards which may cause difficulties for the television to properly display.
3. In case no signal is detected from your HDMI device, turn off the HDMI device and then on again.
4. To get an optimal viewing, it is advised to turn your DVD player to one of the following TV display standards: 1280x720p 50Hz

2.4.5 Connect the audio cable

Connect the PC audio cable supplied with the TV to the TV's PC Audio Input as in Figure 1.

Note: If no signal is present on the VGA, the TV will enter into standby mode automatically after 1 minute.

1. **Analog (Antenna) Input:** Connect the antenna or CATV cable to this 75Ω coaxial cable input.

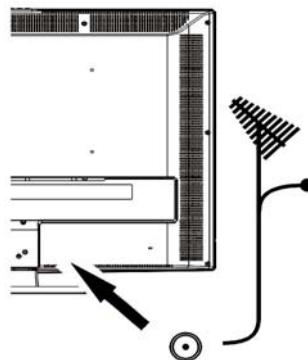

Note: When no TV signal input, TV set will enter standby status automatically within 10 minutes.

2. Audio/Video (AV) Input :

Audio 1 Input: Connect the audio signal source (PC, DVD player, Laser Disc player, videocassette recorder or camcorder) to the Audio Input ports (left and right).

Video 1 Input: Connect the video signal source (PC, DVD player, Laser Disc player, videocassette recorder or camcorder) to the Video 1 Input interface.

Audio 2 Input: Connect the audio signal source (PC, DVD player, Laser Disc player, videocassette recorder or camcorder) to the Audio Input ports (left and right).

Video 2 Input: Connect the video signal source (PC, DVD player, Laser Disc player, videocassette recorder or camcorder) to the Video 2 Input interface.

3. S-Video Input:

Connect the S-Video cable to DVD player, Laser Disc player, videocassette recorder or camcorder (Note: For S-Video, Audio and Video 2 are shared).

4. Component signal Y, Pb/Cb, Pr /Cr Input or HDTV Input:

Connect the component signal source of audio and video (DVD player, Laser Disc player, videocassette recorder or camcorder) to the Component Input port.

2.4.5 Connect signal cables:

1. User three component signal cables to Connect the high definition signal **Y**、**Pb**、**Pr** or the component signal **Y**、**Cb**、**Cr** the DVD player outputs to the high definition signal **Y**、**Pb**、**Pr** input of the TV.
2. Use the audio cable to connect the audio output of the DVD player to the TV's Component Input.


3. Input/Output Specification

3.1 Input Signal connector

This procedure gives you instructions for installing and using the LCD TV display.

Lay the display on the desired operation and plug the power cord into a convenient AC outlet. Three-wire power cord must be shielded and is provided as a safety precaution as it connects the chassis and cabinet to the electrical conduct ground. If the AC outlet in your location does not have provisions for the grounded type plug, the installer should attach the proper adapter to ensure a safe ground potential.

Connect the 15-pin D-SUB color display shielded signal cable to your signal system device and lock both screws on the connector to ensure firm grounding. The connector information is as follow:

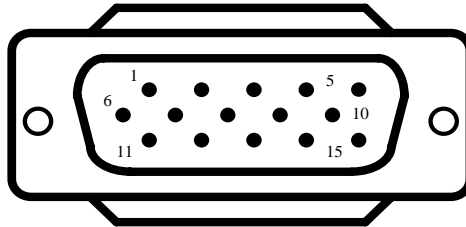

15 - Pin Color Display Signal Cable

Pin No.	Description
1	Red Video
2	Green Video
3	Blue Video
4	Not Used
5	GROUND
6	Red Video Ground
7	Green Video Ground
8	Blue Video Ground
9	Mandatory +5V Supply for PC Bypass
10	Sync. Ground
11	Not Used
12	Serial Data for DDC
13	Horizontal Sync.
14	Vertical Sync.
15	Data Clock for DDC

Apply power to the display by turning the power switch to the "ON" position and allow about ten seconds for Panel warm-up. The Power-On indicator lights "Green" when the display is on.

With proper signals feed to the display, a pattern or data should appear on the screen, adjust the brightness and contrast to the most pleasing display, or press auto-adjust to get the best picture-quality.

This TV (with PC function) has power saving function following the VESA DPMS. Be sure to connect the signal cable to the PC.

If your TV requires service, it must be returned with the power cord.

3.2 Factory Preset Display Modes:

Dots x Lines	Vertical Frequency (Hz)	Horizontal Frequency (kHz)	Sync Polarity		Presence		Screen Mode	
			Horizontal	Vertical	Horizontal	Vertical	Normal (4:3)	FULL (16:9)
720 x 400	70.1	31.5	NEG	POS	YES	YES	YES	NO
640 x 480	59.9	31.5	NEG	NEG	YES	YES	YES	NO
	75.0	37.5	NEG	NEG	YES	YES	YES	NO
800 x 600	60.0	37.9	POS	POS	YES	YES	YES	NO
	75.0	46.87	POS	POS	YES	YES	YES	NO
1024 x 768	60.0	48.36	NEG	NEG	YES	YES	YES	NO
1360 x 768	60.0	47.36	POS	NEG	YES	YES	NO	YES

4. White Balance, Luminance Adjustment

Instrument List:

Chroma 2225、VG848、Chroma 7120

Adjustment Process:

① Instrument Orientation

Connect LCD-TV、Chroma 2225 and VG848, and set Timing137、Pattern1 on Chroma2225. Chroma7120's lens must aim at the center of Pattern1 showed on the LCD-TV's screen. The distance of Chroma7120's lens and the center of screen is $20\text{cm} \pm 1\text{cm}$.

② ENTER FACTORY

After orientation OK, set Pattern104(black picture) on Chroma2225. Press 1-9-9-9 on remote to enter the menu on top left of the screen(refer to fig.1,this menu will show slowly), then from UP key(Δ) option to enter the menu (refer to fig.2).



Fig.1

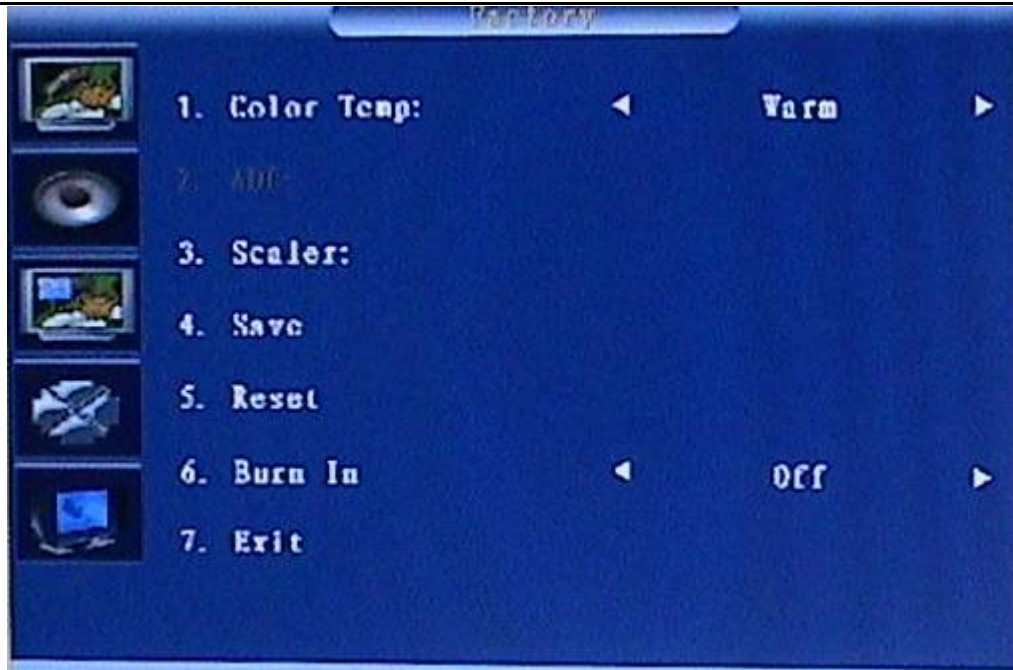


Fig.2

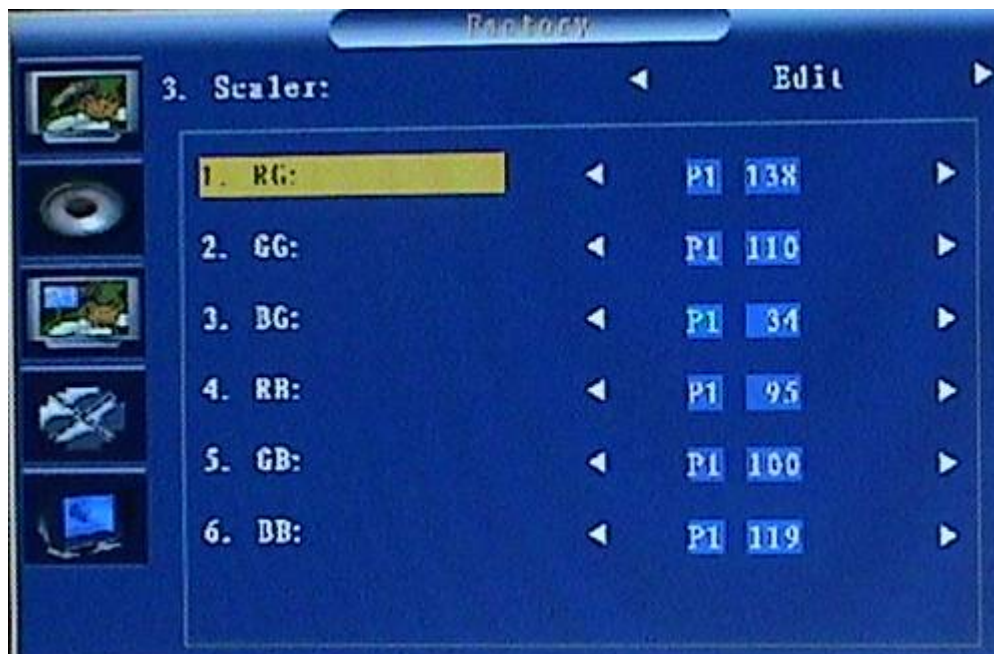


Fig.3

③ PC Mode White Balance Adjustment

Begin to adjust the W/B (White Balance) you should select the Color Temp(Warm and Cold) and enter the son menu from father menu "Scaler" refer to Fig.2 and Fig.3.

Set channel color temperature value and brightness on Chroma7120.Set 303 319 350(warm Temp) on CH3 and 278 289 350(cold Temp) on CH4.Press MODE key on Chroma7120 to switch xyY mode.

Use black sleeve on Chroma7120's lens to ensure no external ray. Set Pattern104 on Chroma2225.Adjust SCALAR RB、GB、BB value to make sure the brightness is the lowest, then set Pattern105 on Chroma2225 and adjust RG、GG、BG value to make the value displaying on Chroma7120 is about 100.Press "Save" to save. Switch to CH4, select cold Temp and then adjust it according to above method. Press "Save" to save.

④ AV MODE W/B ADJUSTMENT

Begin to adjust AV/COMPONENT YPbPr(480i/576i)/COMPONENT T-scaler(480P/720P/1080i) /HDMI W/B, their Color Temp modes refer to Fig.4/5/6/7

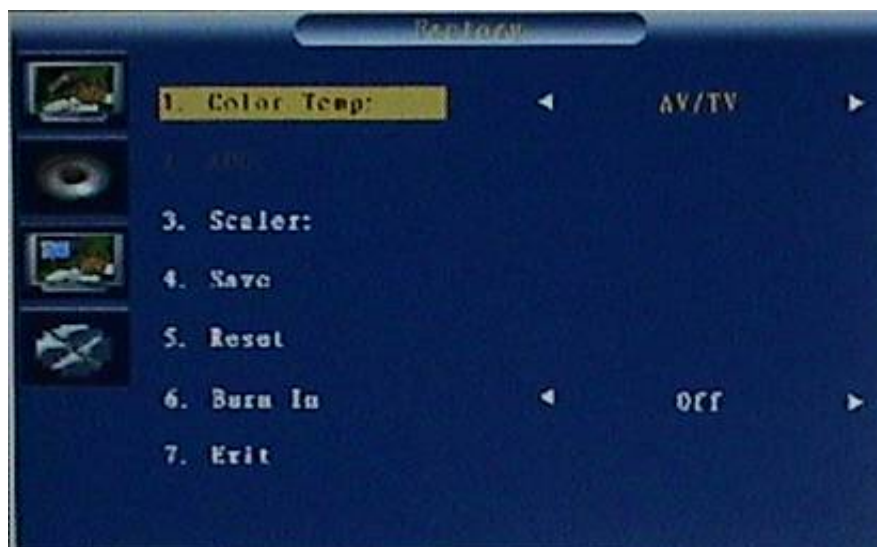


Fig.4



Fig.5

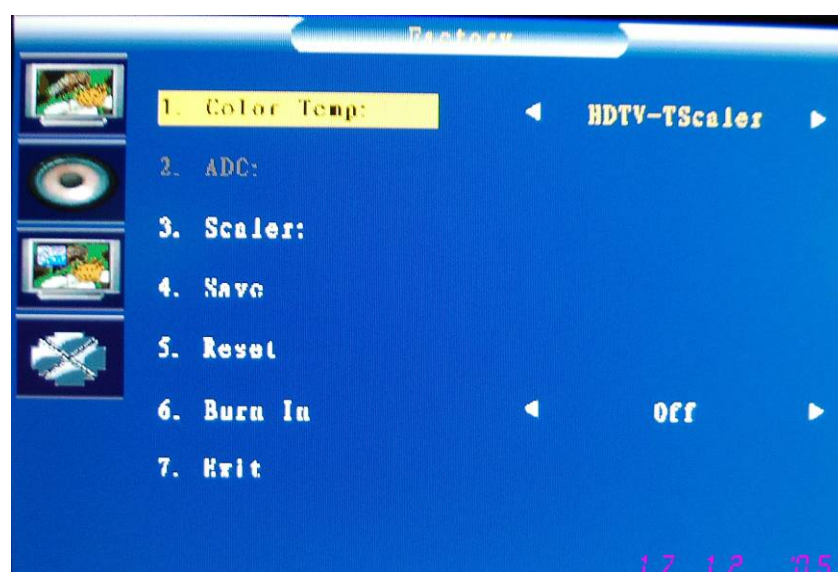


Fig.6

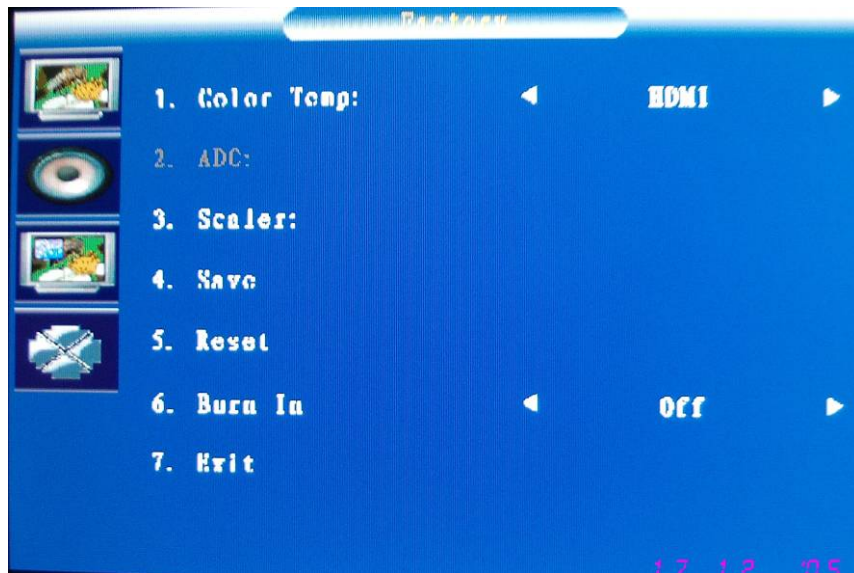


Fig.7

1.OFFSET(26%) W/B ADJUSTMENT(This is only for AV/TV): Change the input signal to 26% white level performance .Set the CHROMA7120 to 288 301 30 and MODE_RGB ,then adjust the TV's RB、GB、BB to make CHROMA7120 display to 100.

2.W/B ADJUSTMENT (100%): Change the input signal to 100% white level performance. Set the CHROMA7120 to 288 301 415 and MODE_RGB , then adjust the TV's RG、GG、BG to make CHROMA7120 display to 100.

3.Save the adjustment. Then change the input signal to 26% white level performance. Set the CHROMA7120 to MODE_RGB and CH3, check whether the color temperature was in SPEC (color spec is $x \pm 15; y \pm 15; Y \pm 15$). In this time, most of the TV is in SPEC, while the others should be adjusted twice or more to make its color temperature in SPEC.

4.CHECK CUT OFF: Change the input signal to 0% white level performance. Firstly, press the "brightness" from 50% to 0% and make sure the Y is not changed. Secondly, change the input signal to 32 GRAYS performance and make sure the grays is not connected at any position.(as the 5% level is between the first gray and the second gray. $5\% = (1/32) * 1.6$ 。)

1.The white color temperature in PC Mode should be app.7200K(CIE1931: $x=0.303, y=0.319, Y>350$), 10300K(CIE1931 : $x= 0.278, y= 0.289, Y>350$).

2.The white color temperature in AV/TV Mode should be app. 8700K(CIE1931: $x=0.288 \pm 15, Y=0.301 \pm 15, Y>370$). In this Mode,we should check the black balance,which level is 26% of the white level(1.0Vpp).




3. The white color temperature in HDTV/HDMI Mode should be app. 8700K(CIE1931: $x=0.288 \pm 15, Y=0.301 \pm 15, Y>370$)


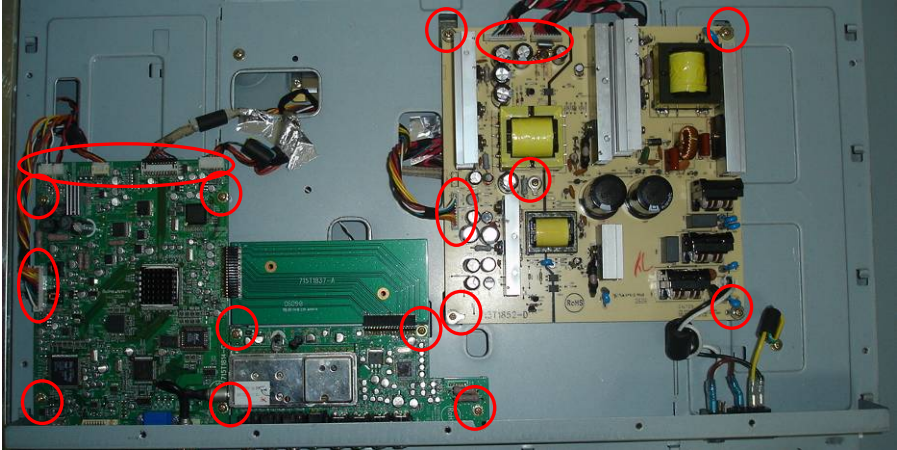
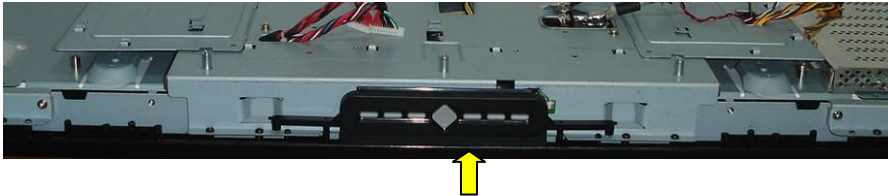
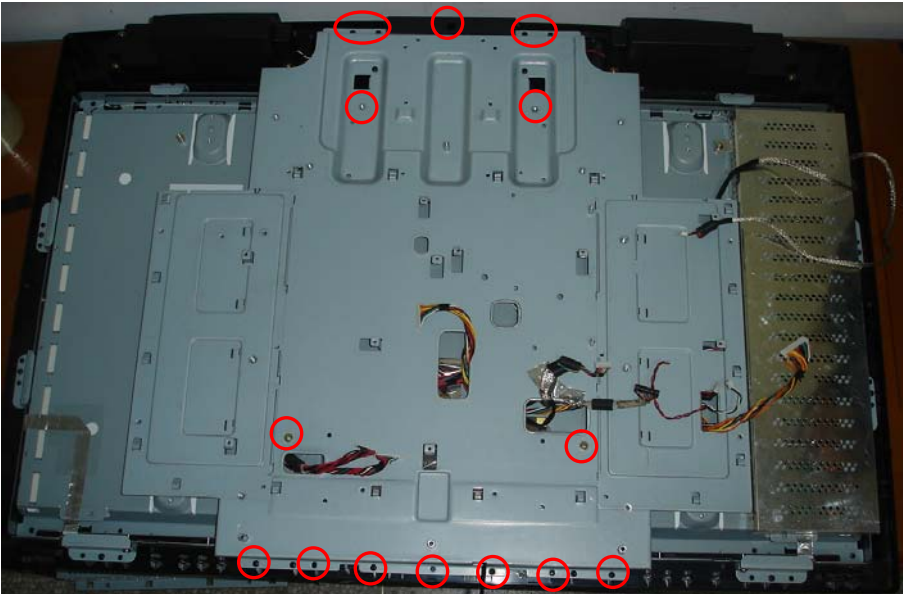
Those three channels should be factory preset and not be possible to be modified.

The measurement position is the center of the display(5) at brightness set to center and


Contrast set to max. . The tolerance of the color coordinates should be less than ± 0.015

5. Mechanical Instructions

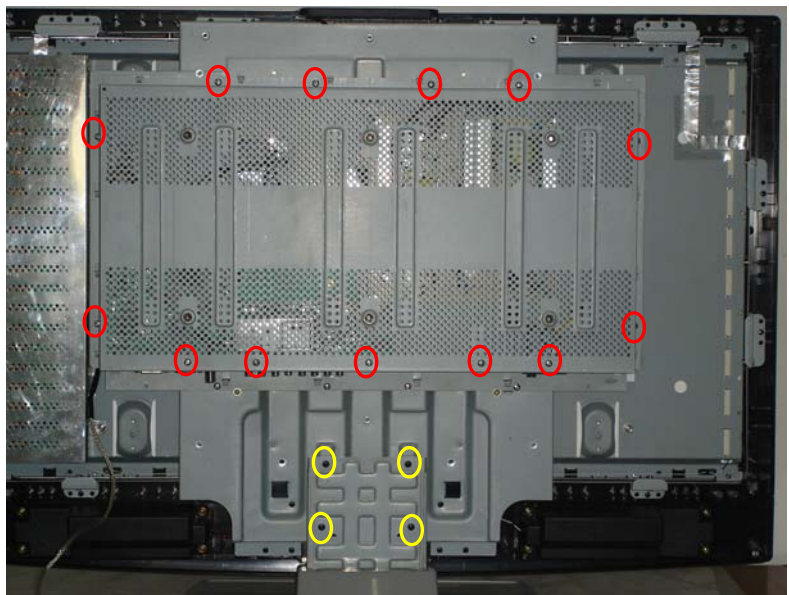Step	Figure	Description
Preparation		Lay the LCD-TV on a flat, soft and clean surface.
Remove the back cover		Remove the fourteen screws to remove the back cover.
Remove the shield and stand		Remove the 17 screws to remove the shield and stand

<p>Remove the shield</p>		<p>Remove the 10 screws to remove the shield.</p>
<p>Remove the main board & power board</p>		<p>Remove the 12 screws and 8 interfaces.</p>
<p>Remove the key pad</p>		<p>Remove the two screws to remove the key pad.</p>
<p>Remove the main frame</p>		<p>Remove the 16 screws to remove the main frame.</p>

Remove the bezel

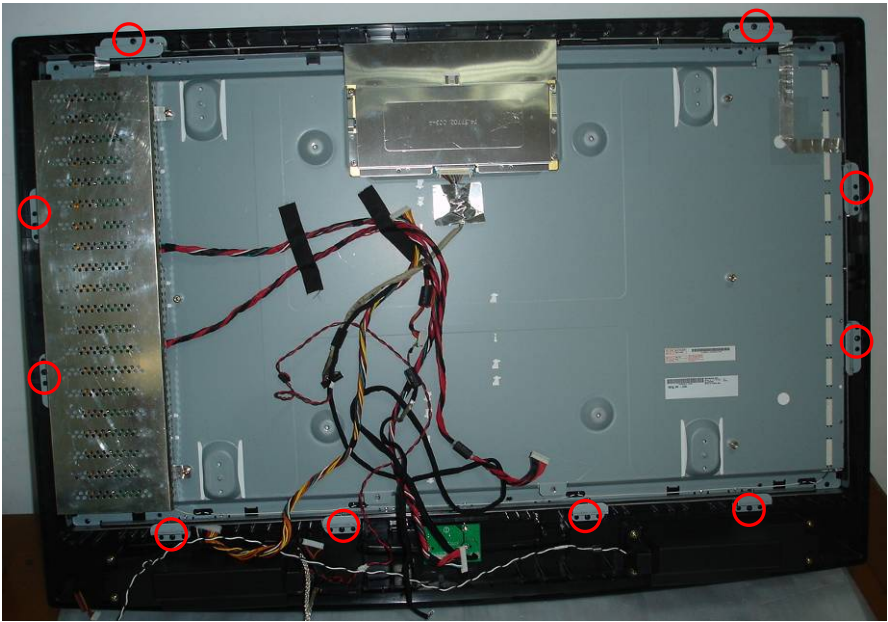


Remove the 10 screws to remove the bezel.


The panel




6. Repair Flow Chart


6.1 Can not start (LED indicator yellow)

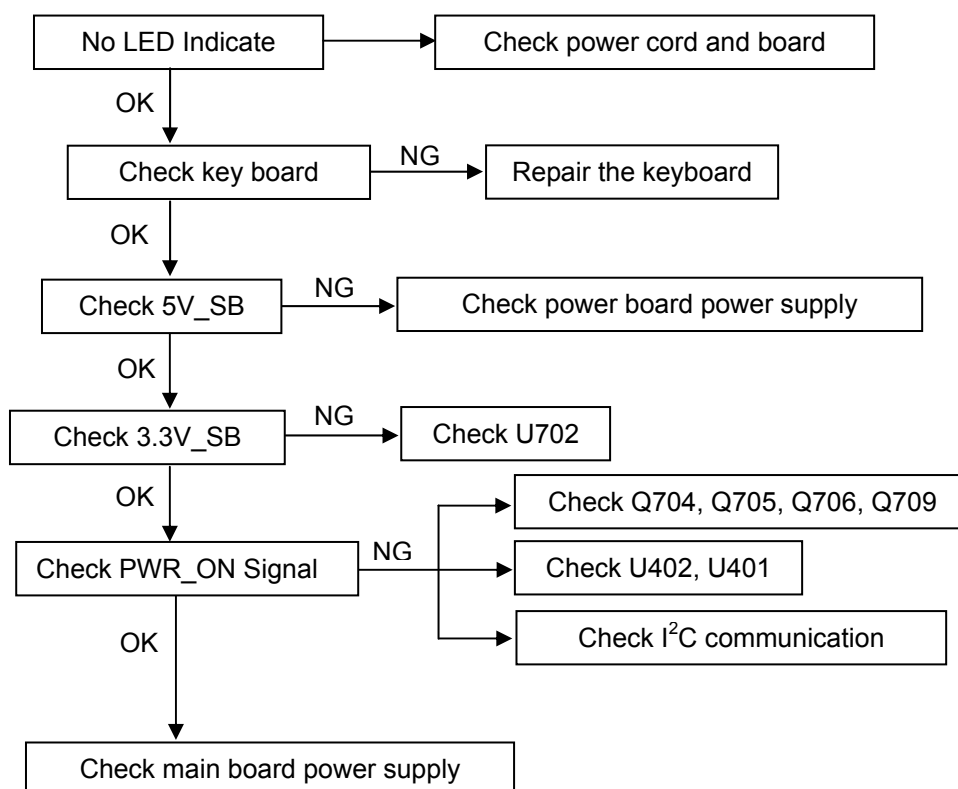


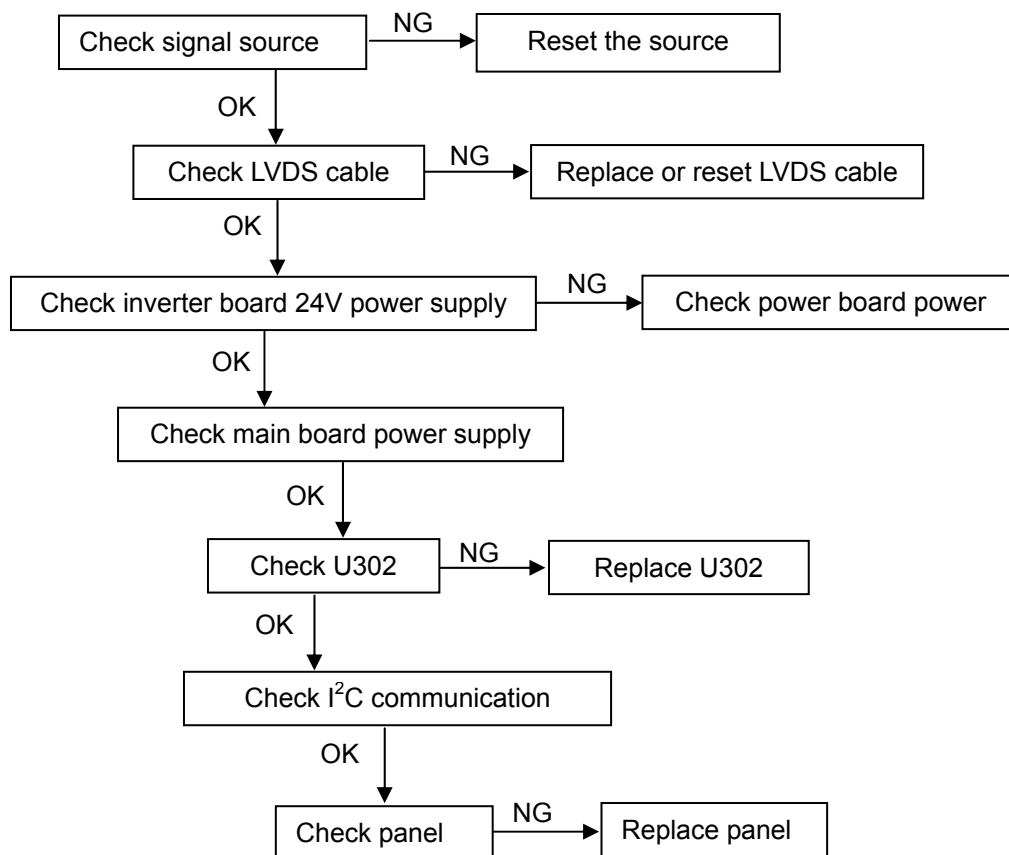6.2 No Display (LED indicator green)

6.3 Abnormal Display

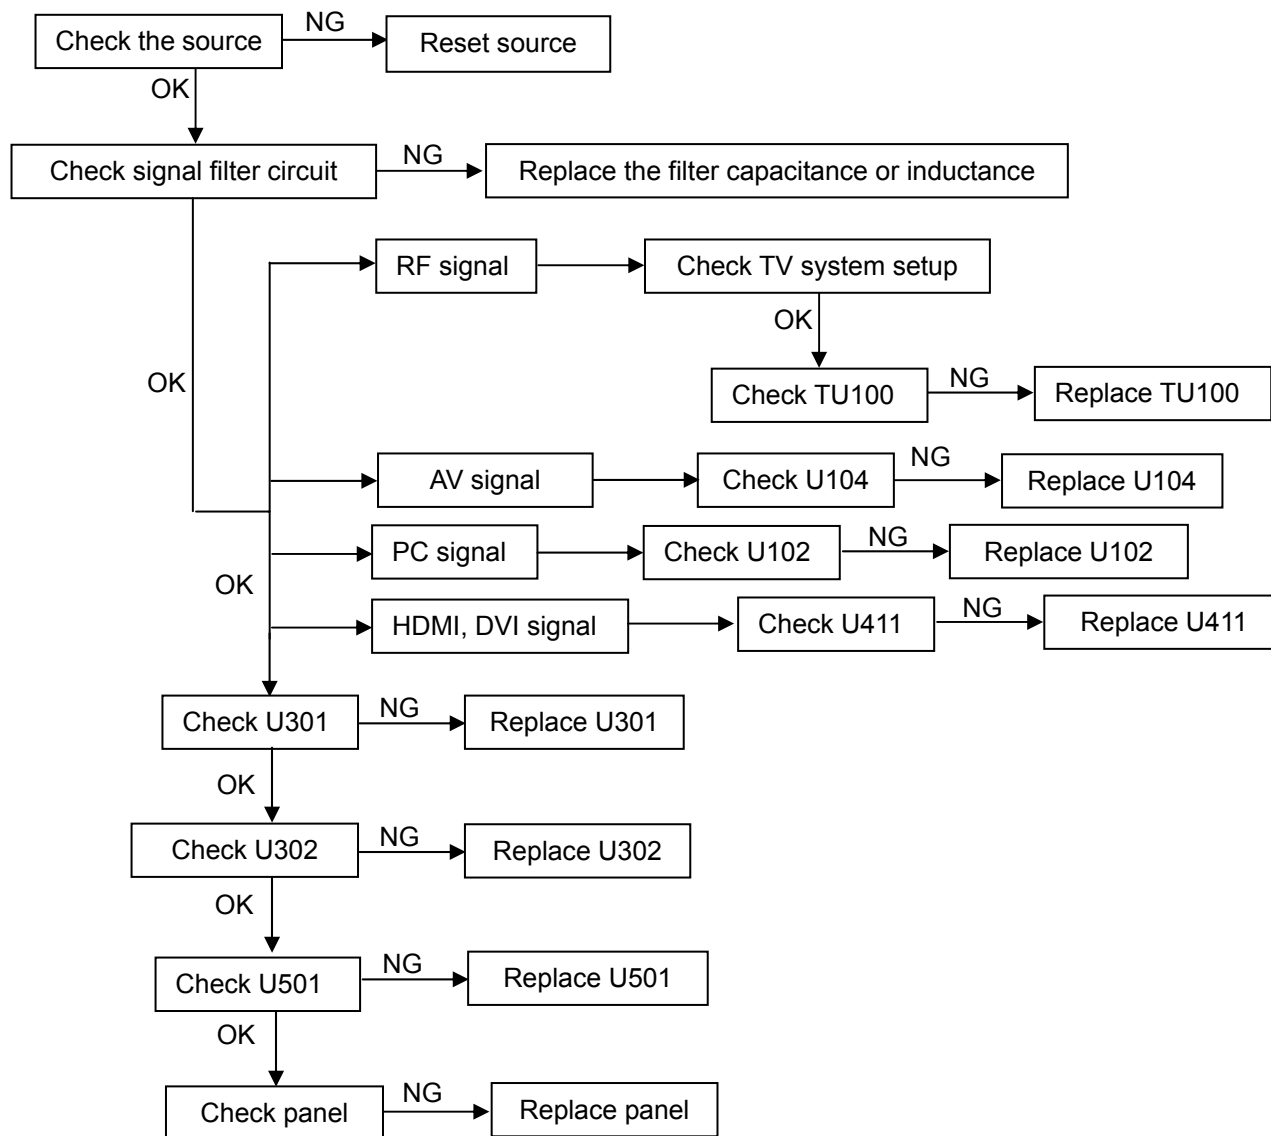

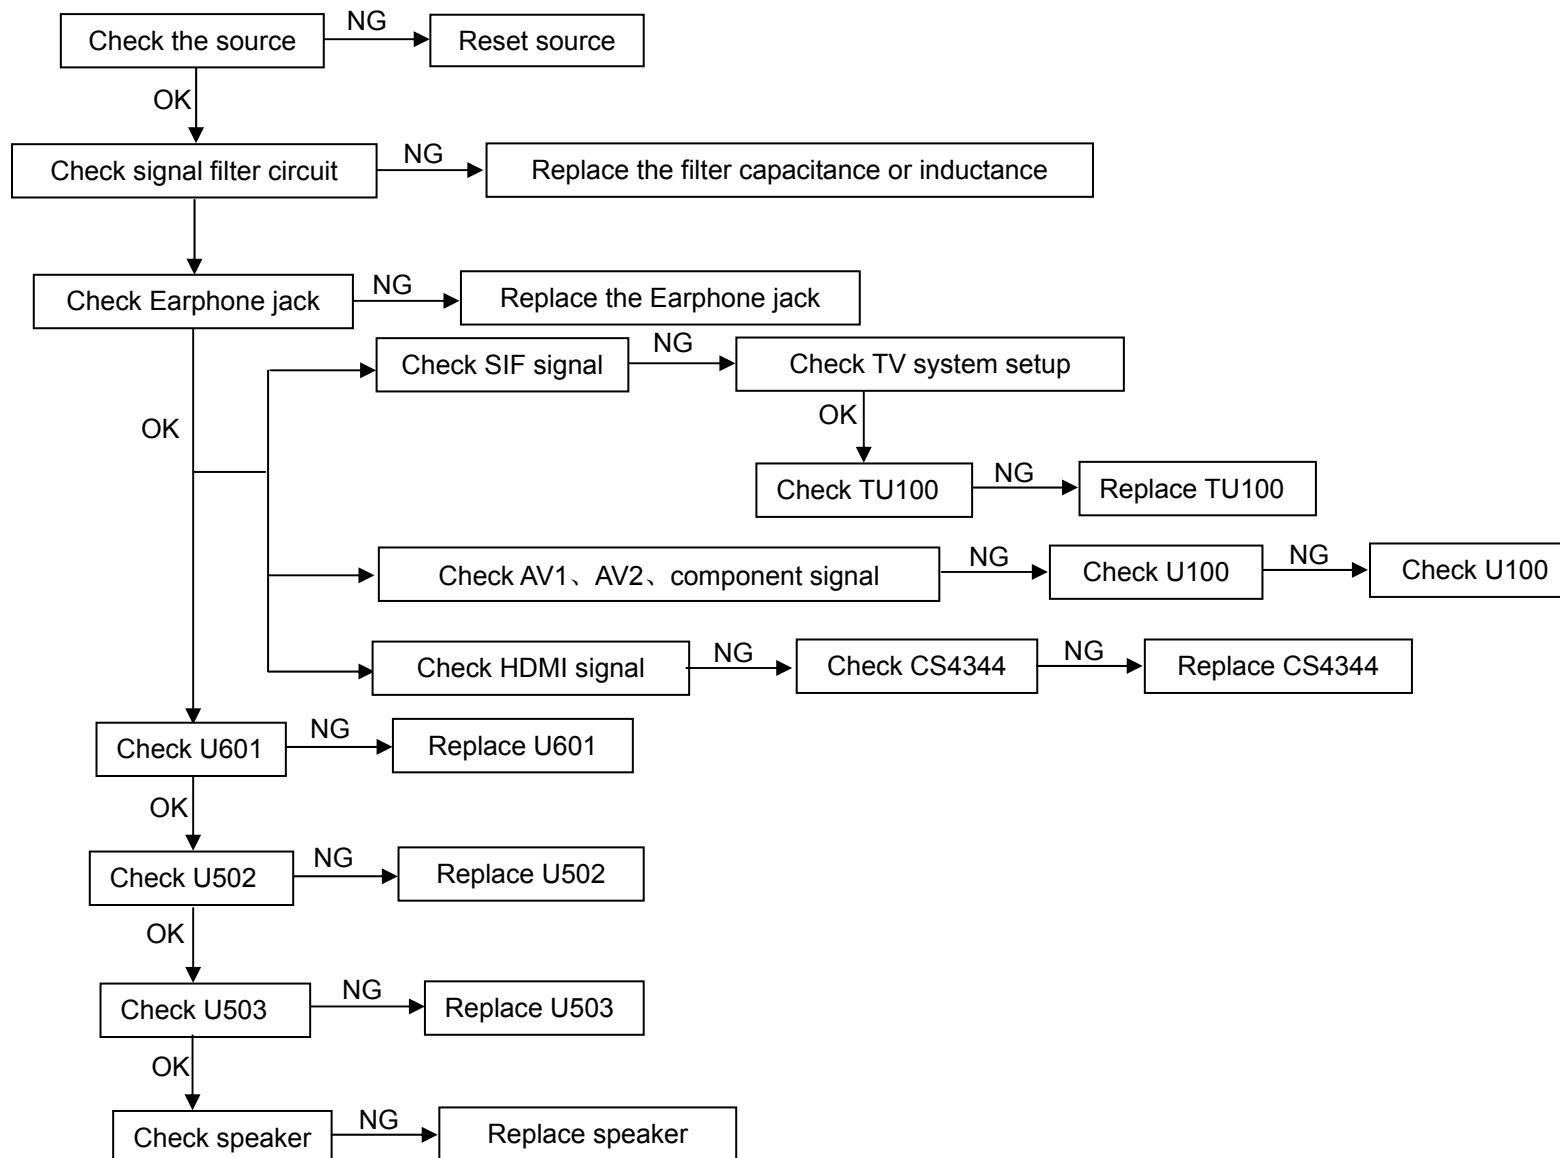


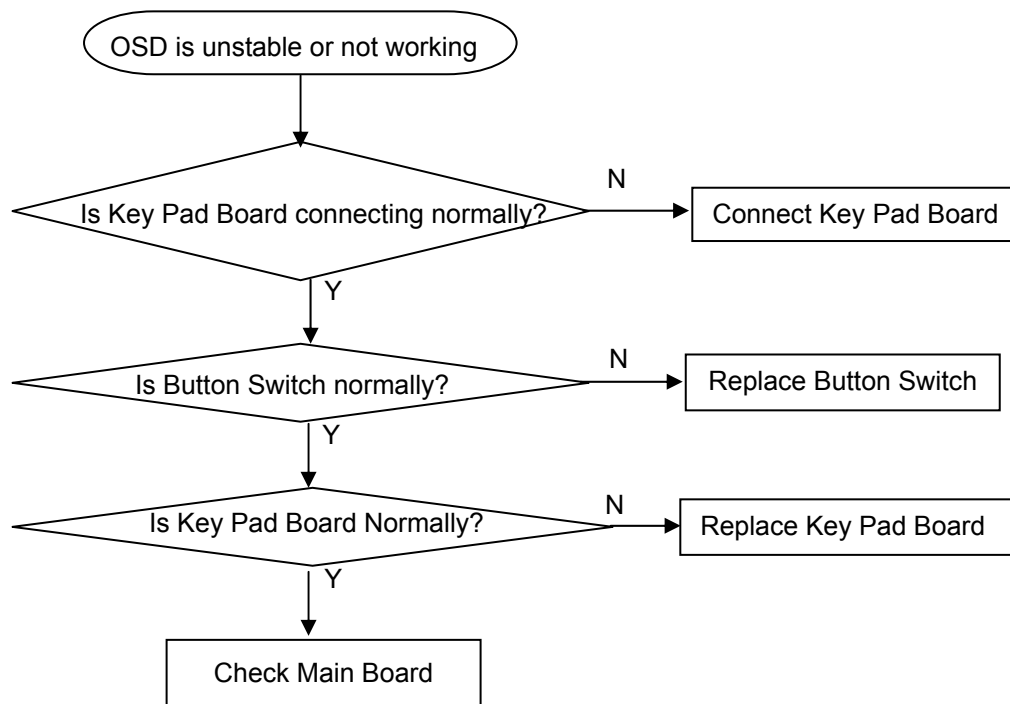



7. PCB Layout


7.1 Main Board


715T1814-1

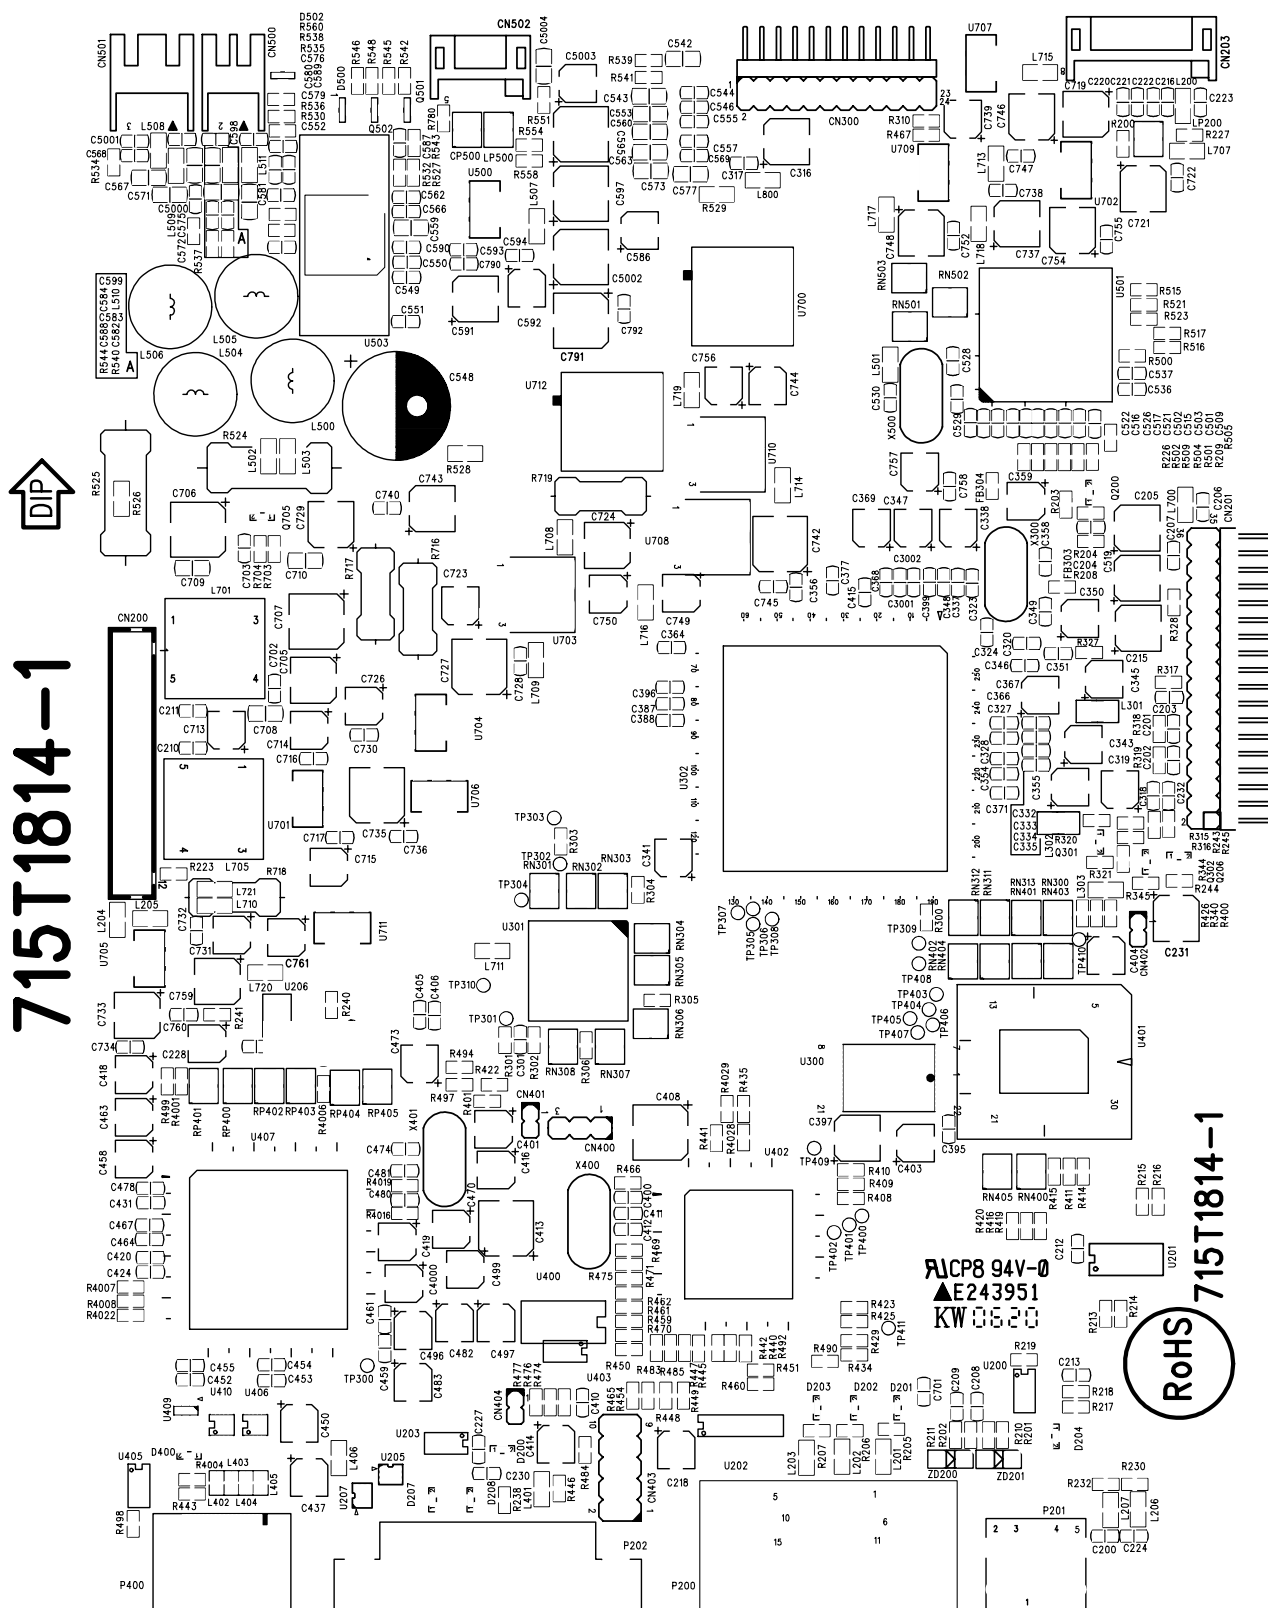

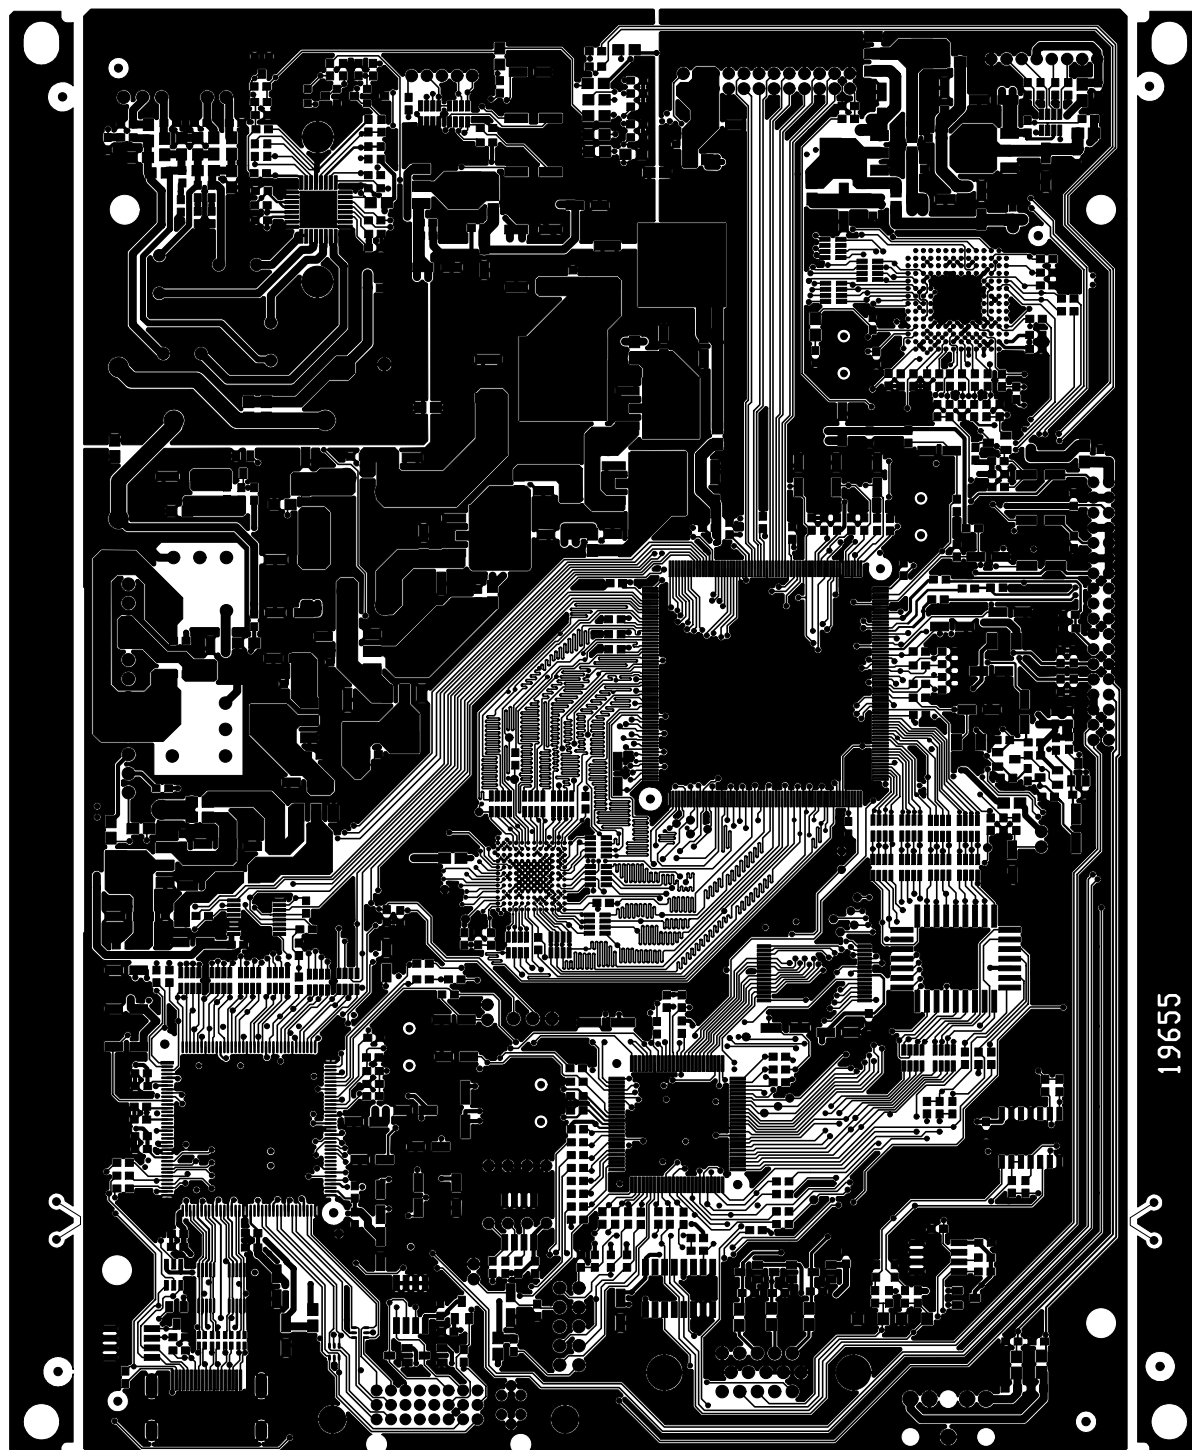


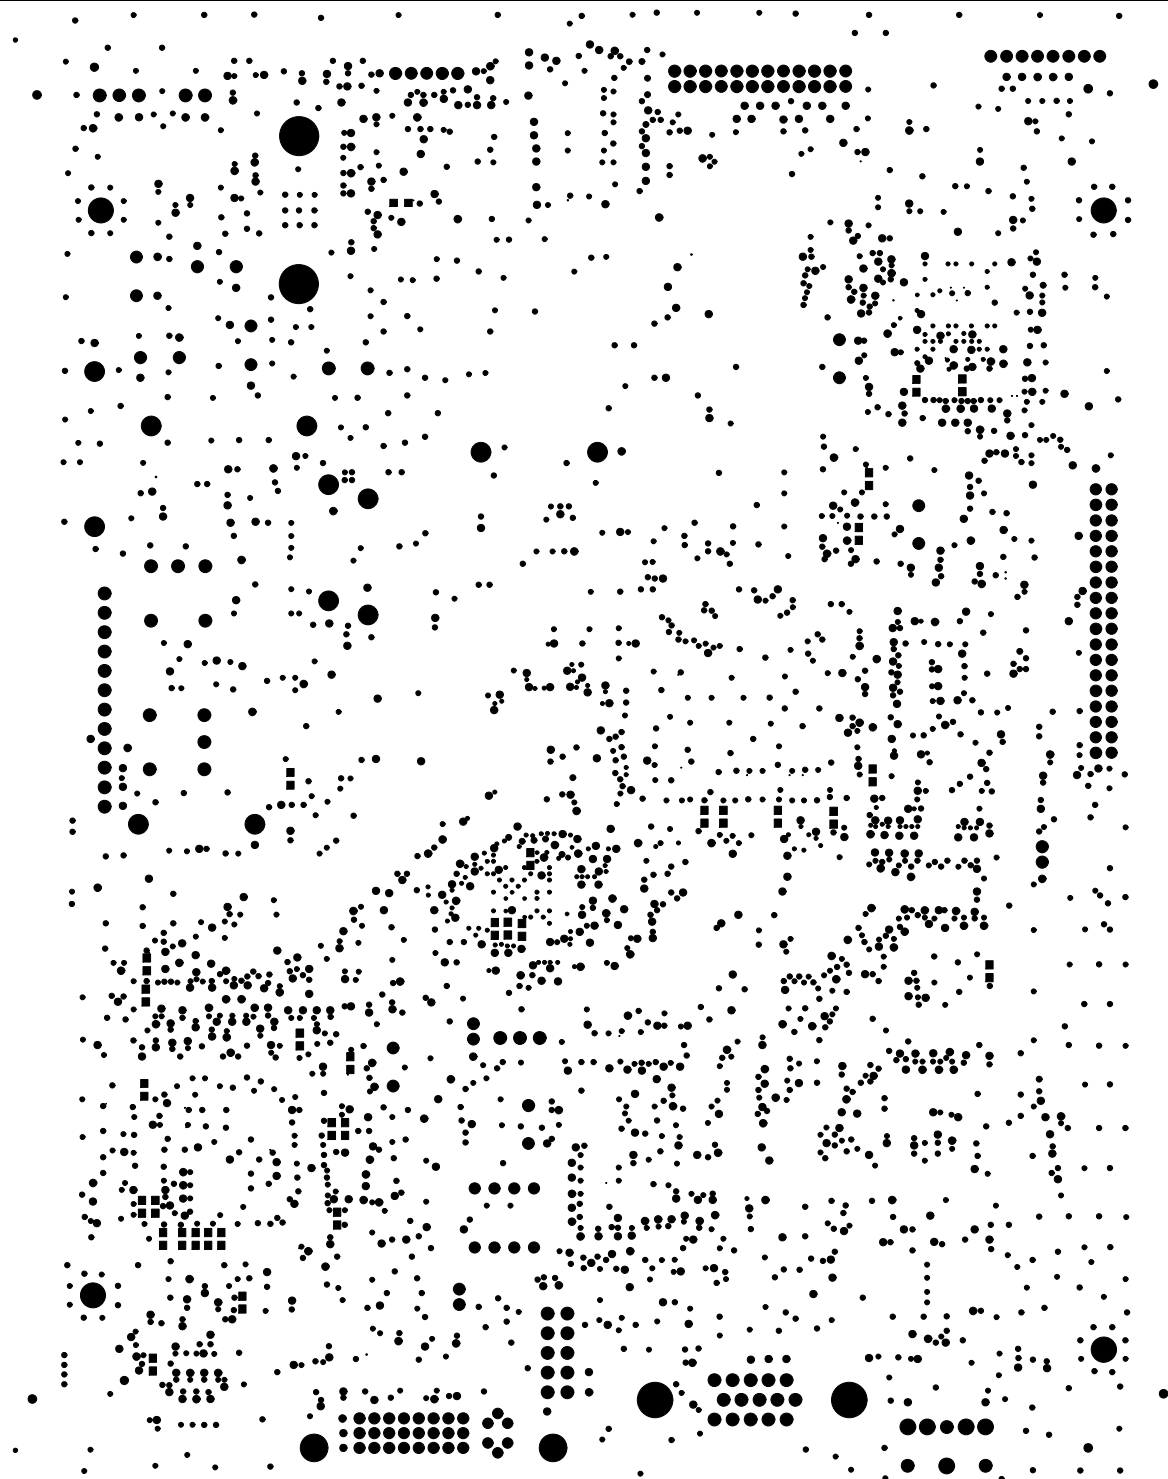



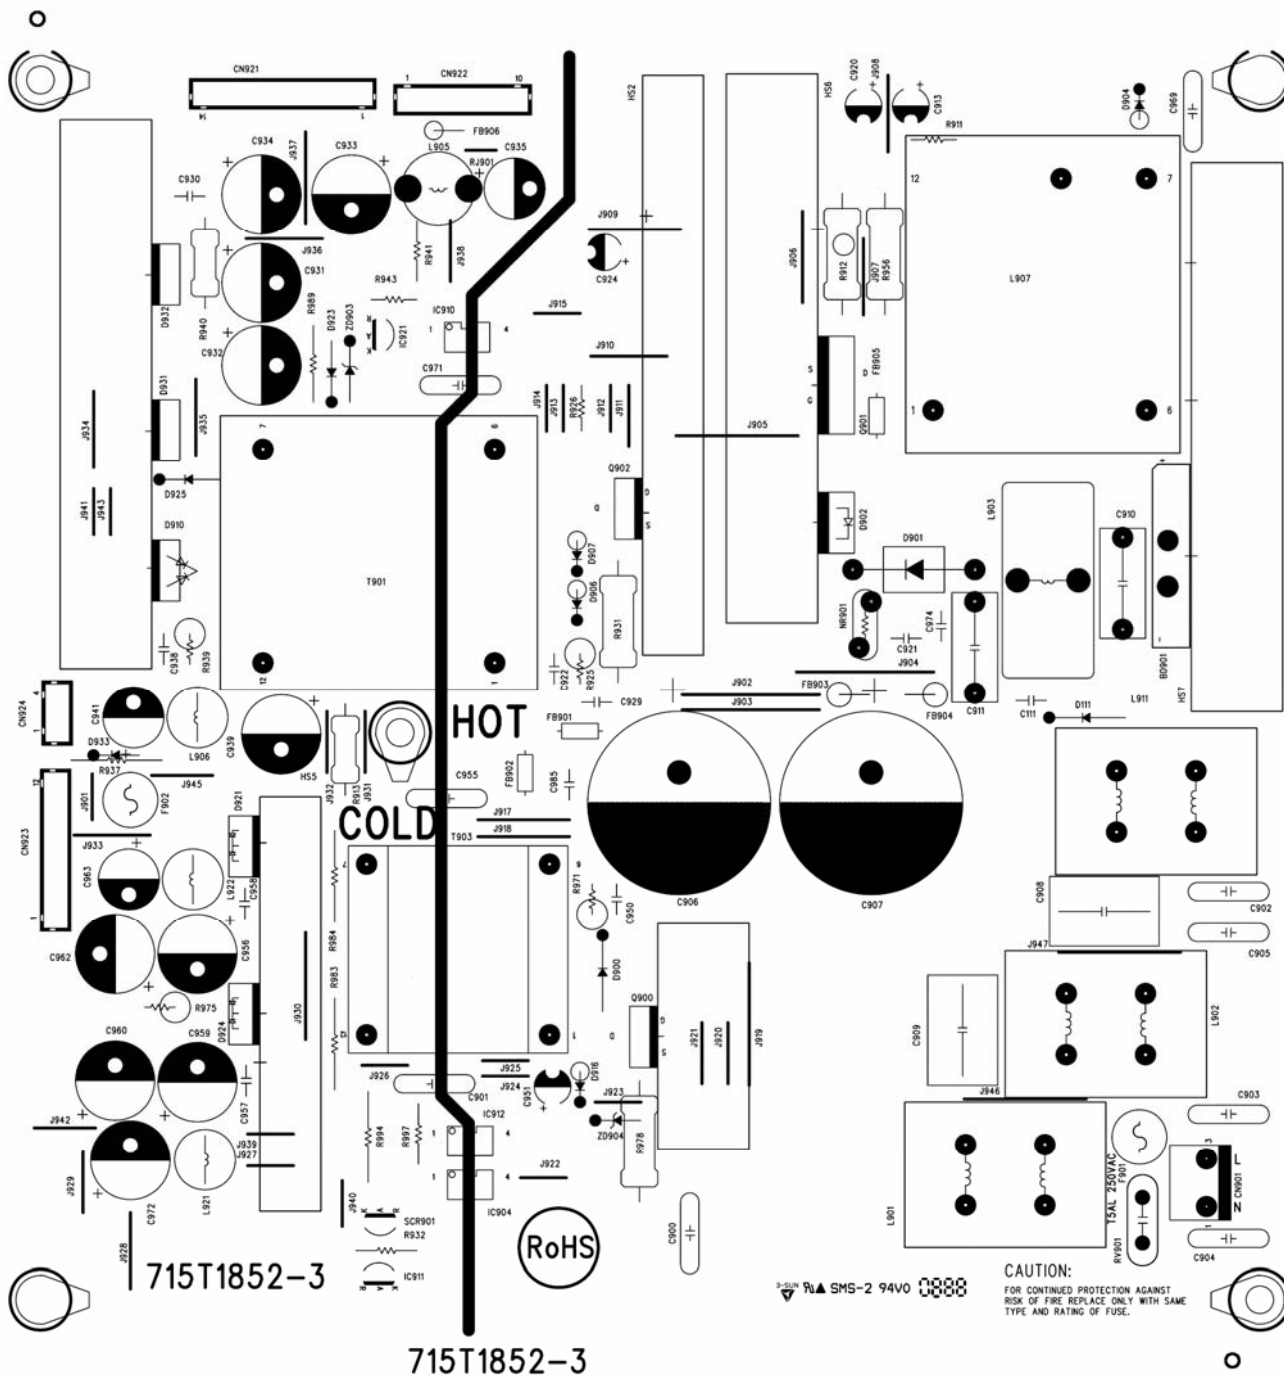




715T1852-3

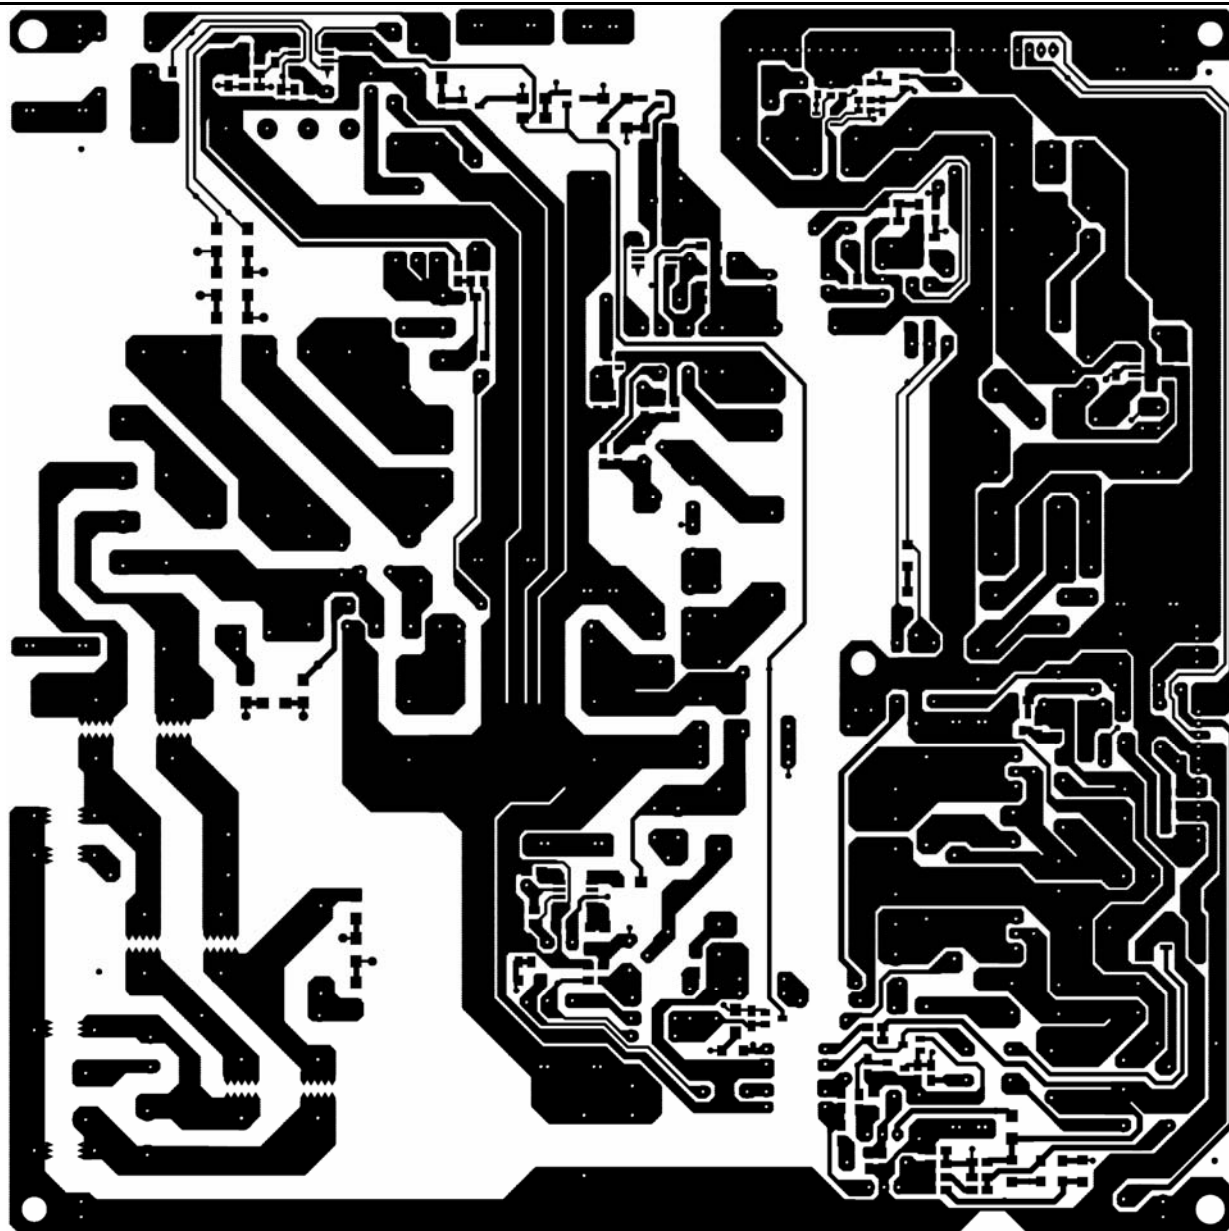


715T1635-3

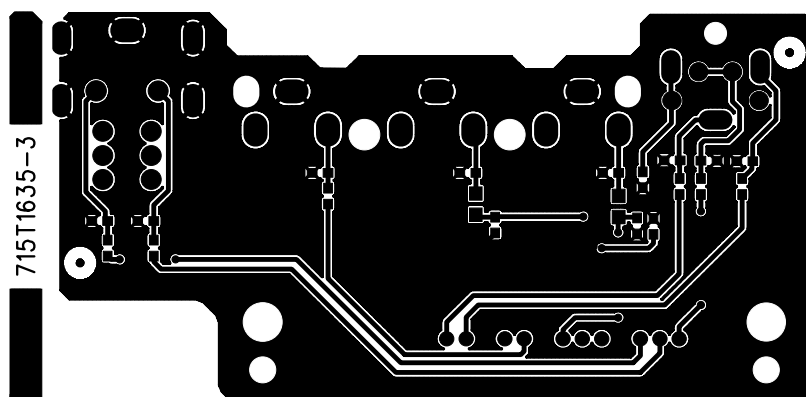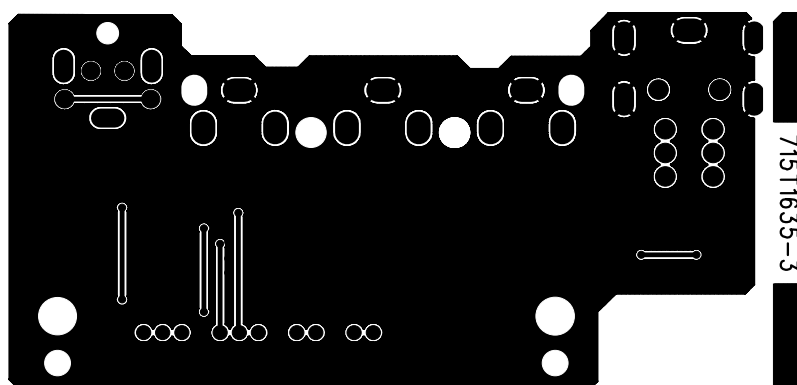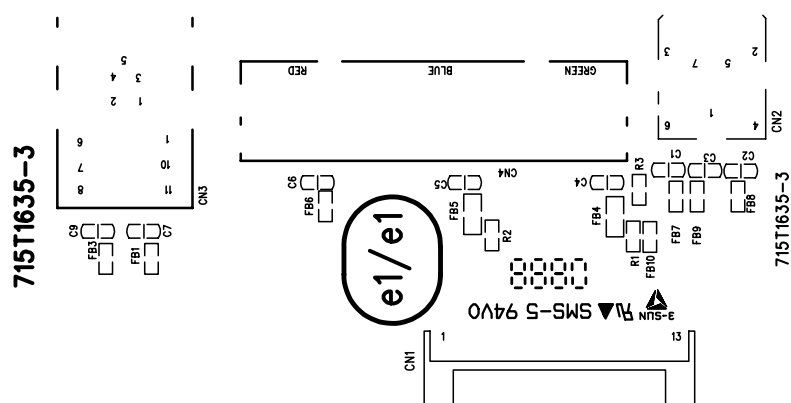



7.4 Tuner Board

715T1769-1

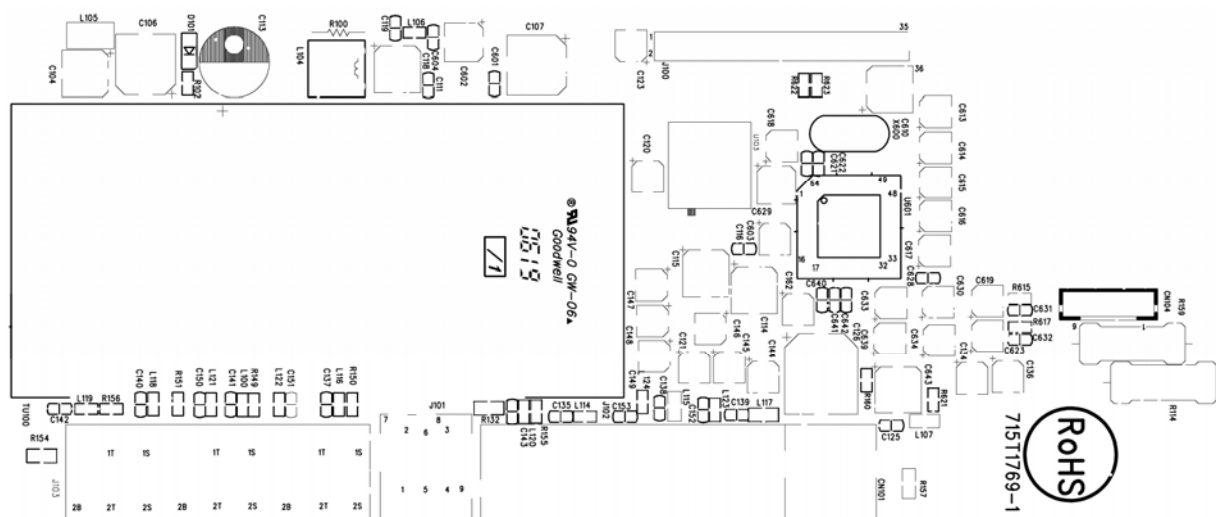




7.5 Key Board

715T1886-1

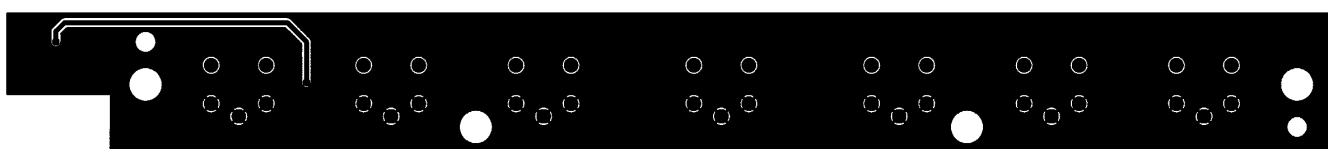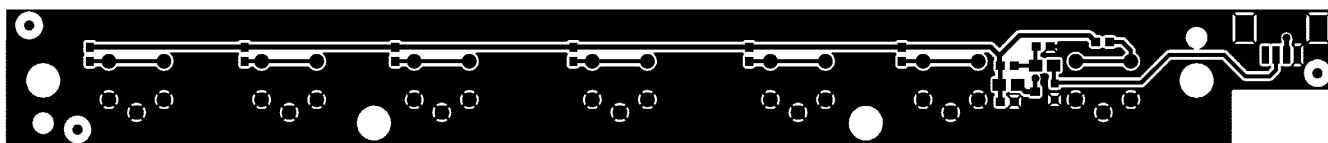


7.6 IR Board

715T1836 1 3

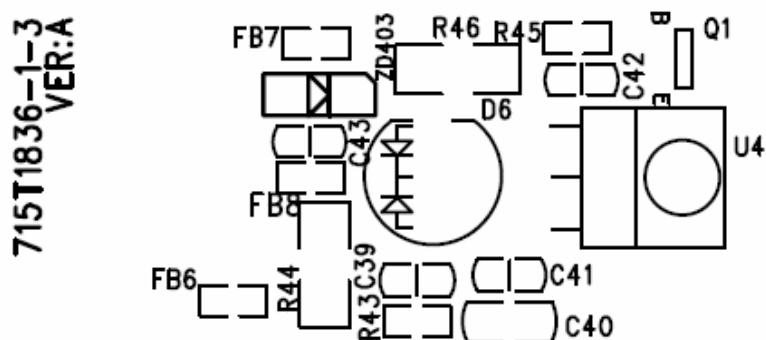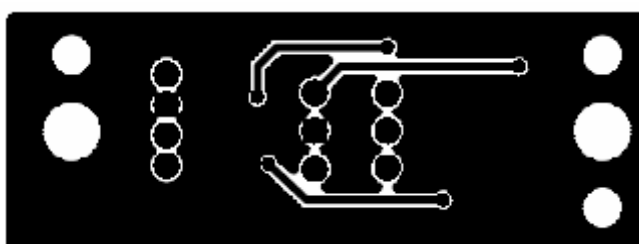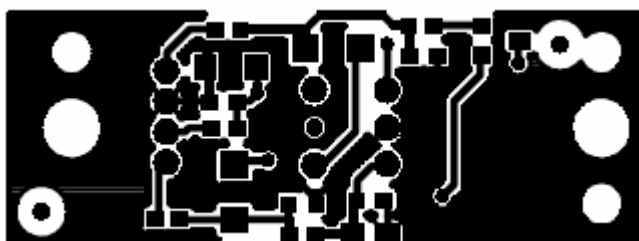


8. Block Diagram

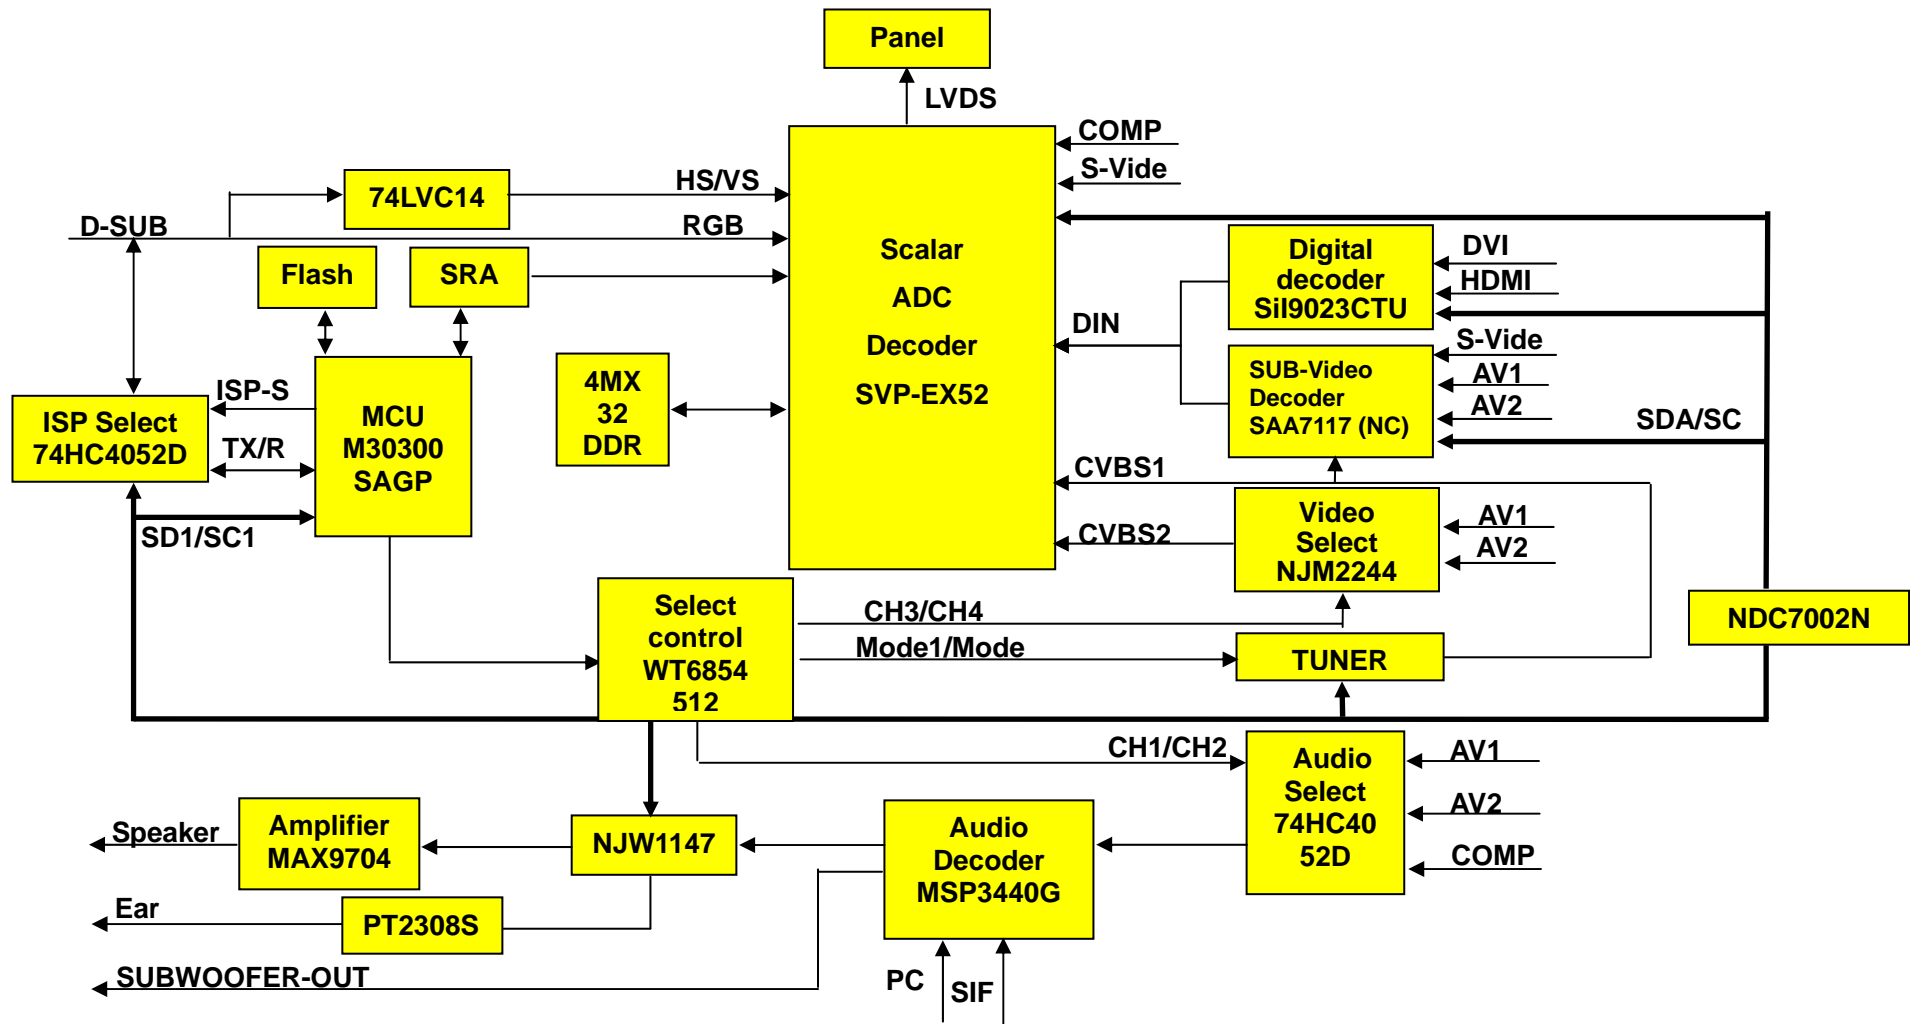


9. Schematic

9.1 Main Board


715T1814-1

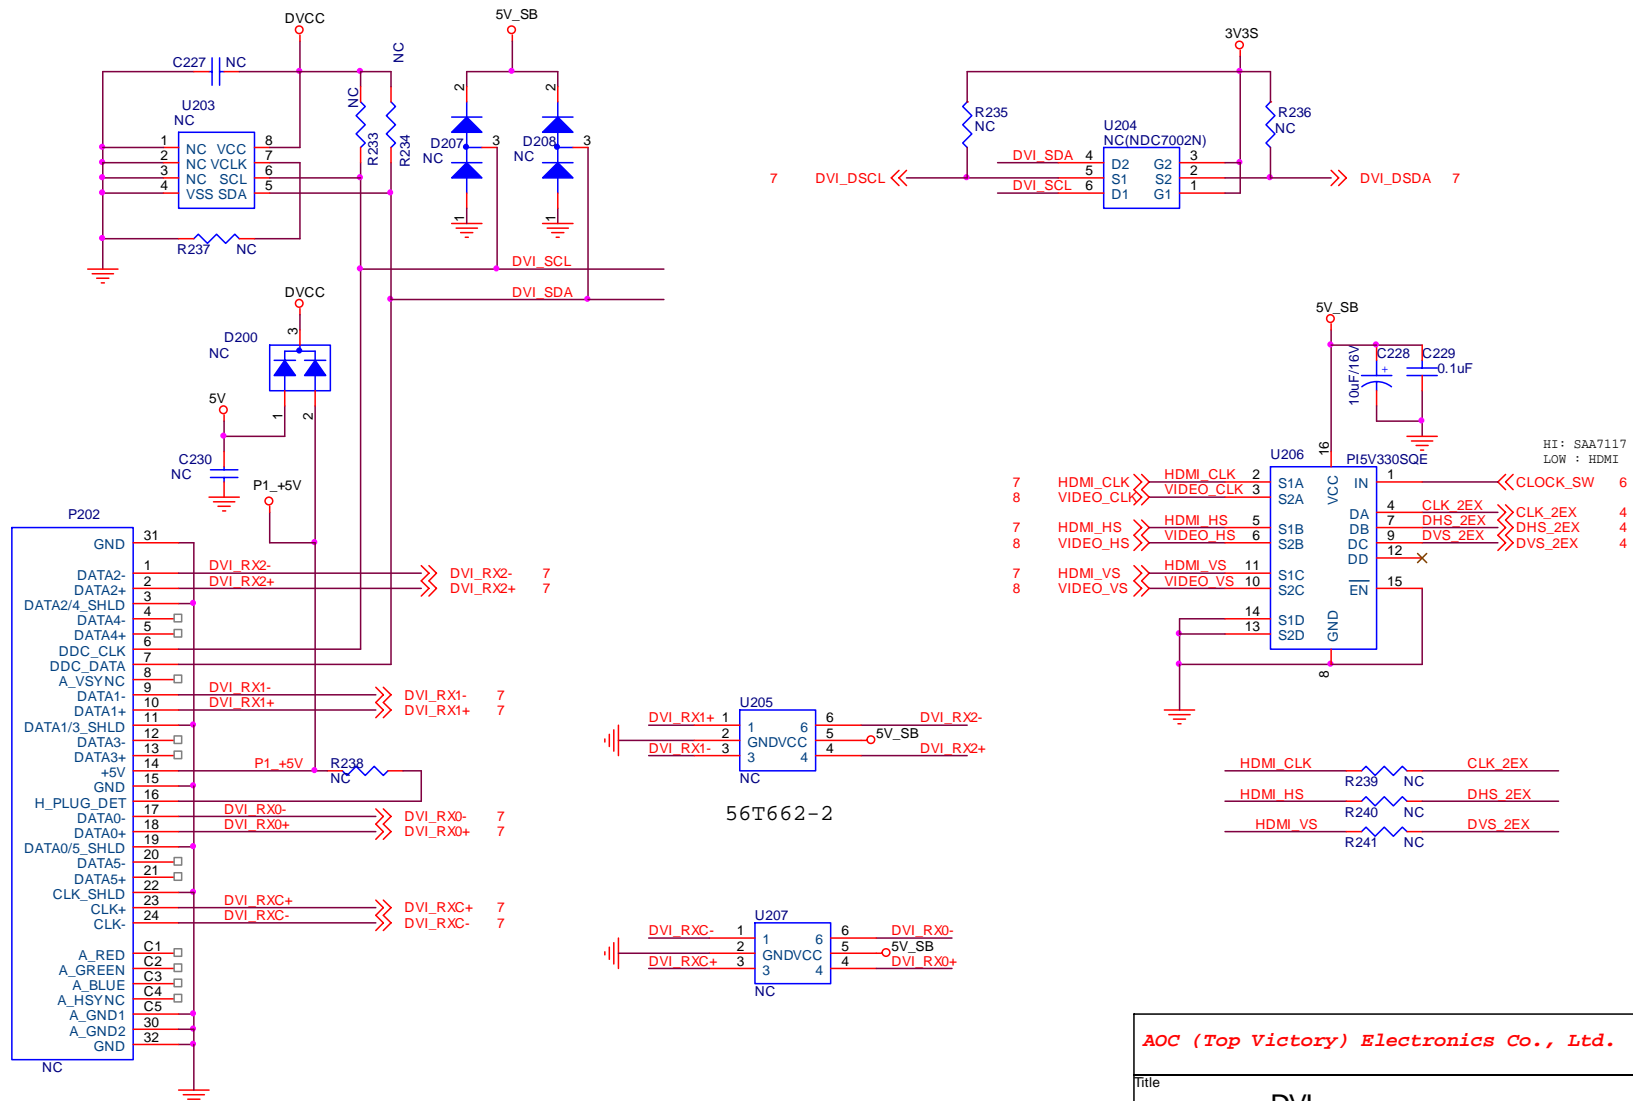


AOC (Top Victory) Electronics Co., Ltd.			
Title			
DVI			
Size	Document Number		Rev
A4	715T1814-1		8
Date:	Thursday, September 14, 2006	Sheet	1 of 11


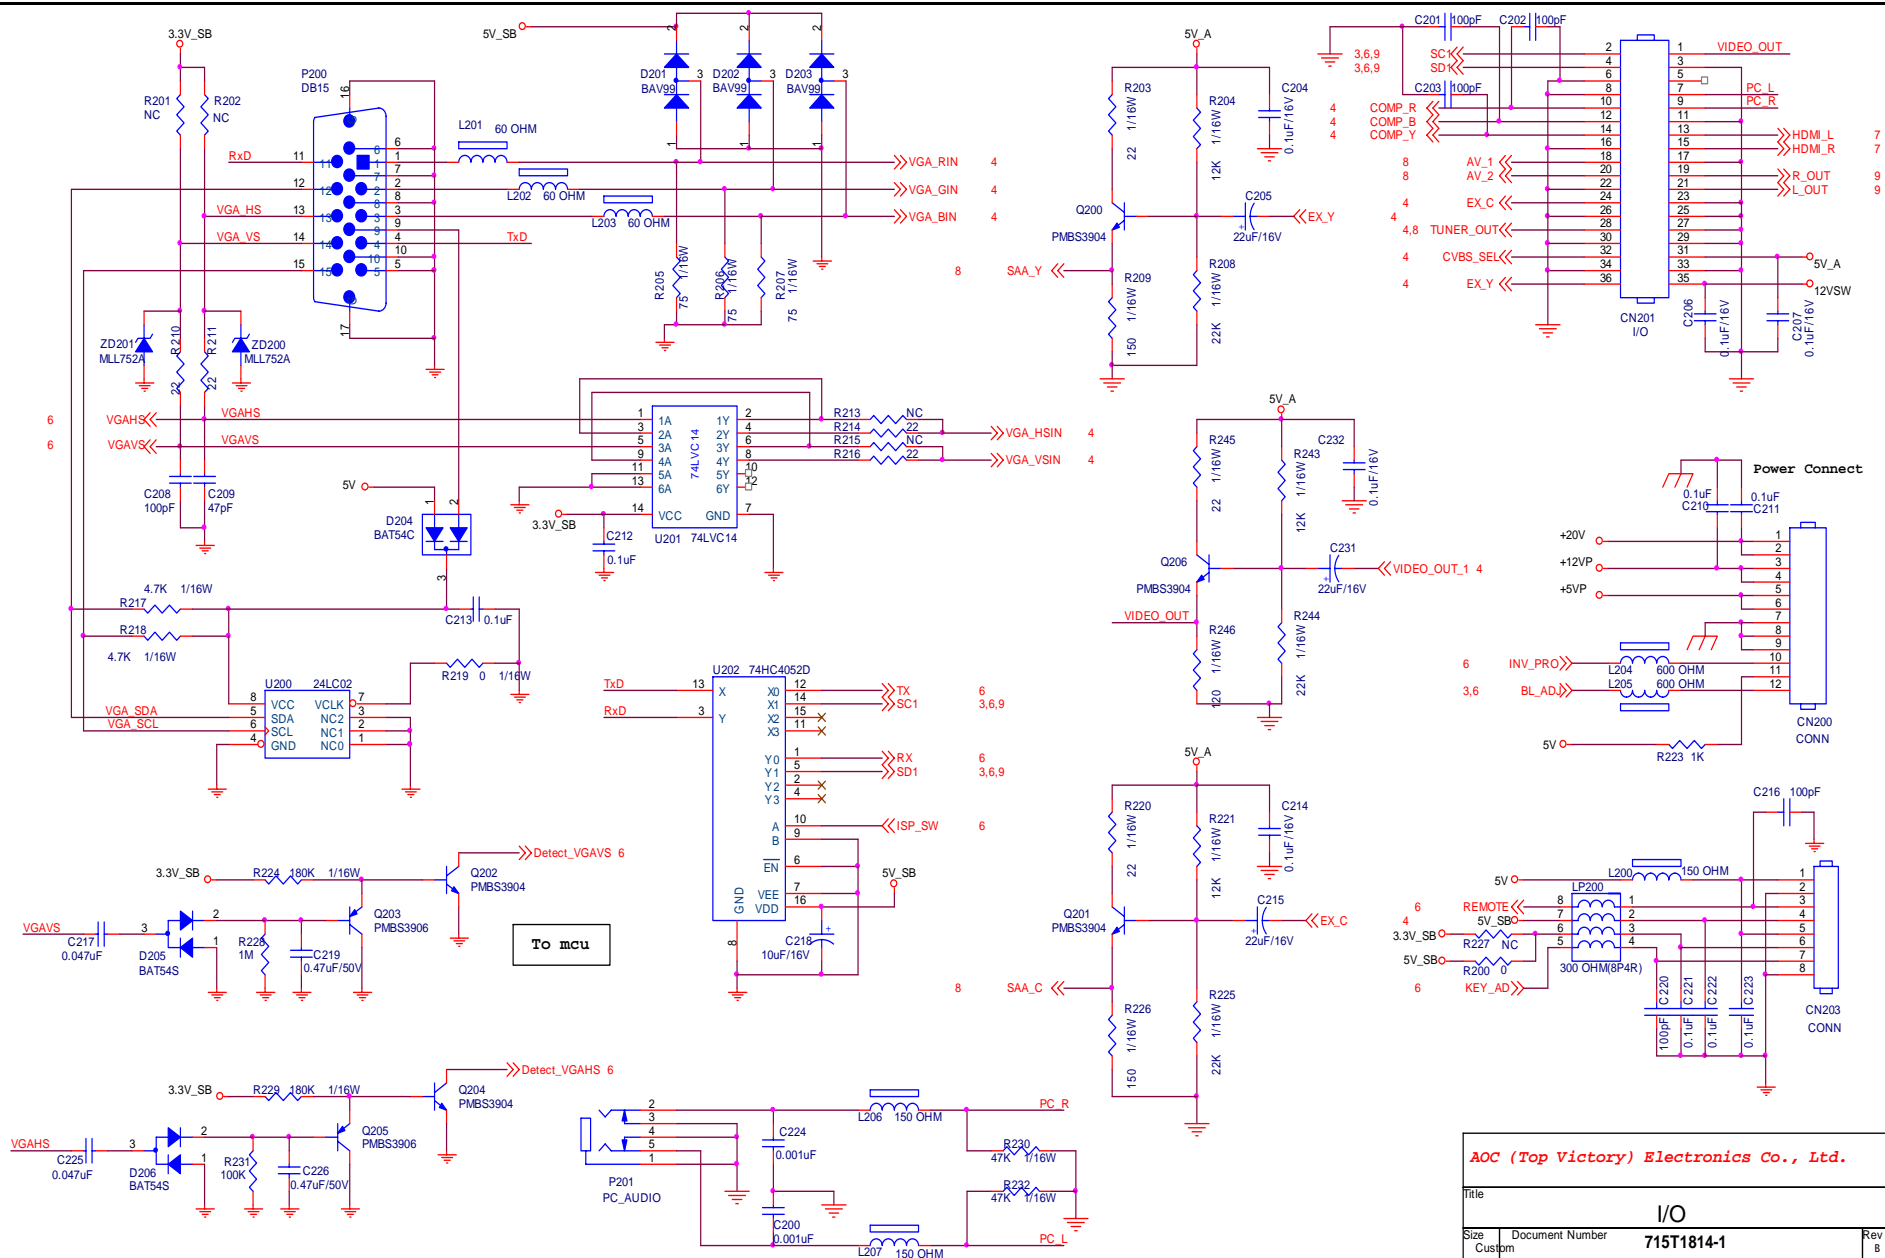


AOC (Top Victory) Electronics Co., Ltd.			
Title	I/O		
Size	Custom	Document Number	715T1814-1
Date:	Thursday, September 14, 2006	Sheet	2 of 11

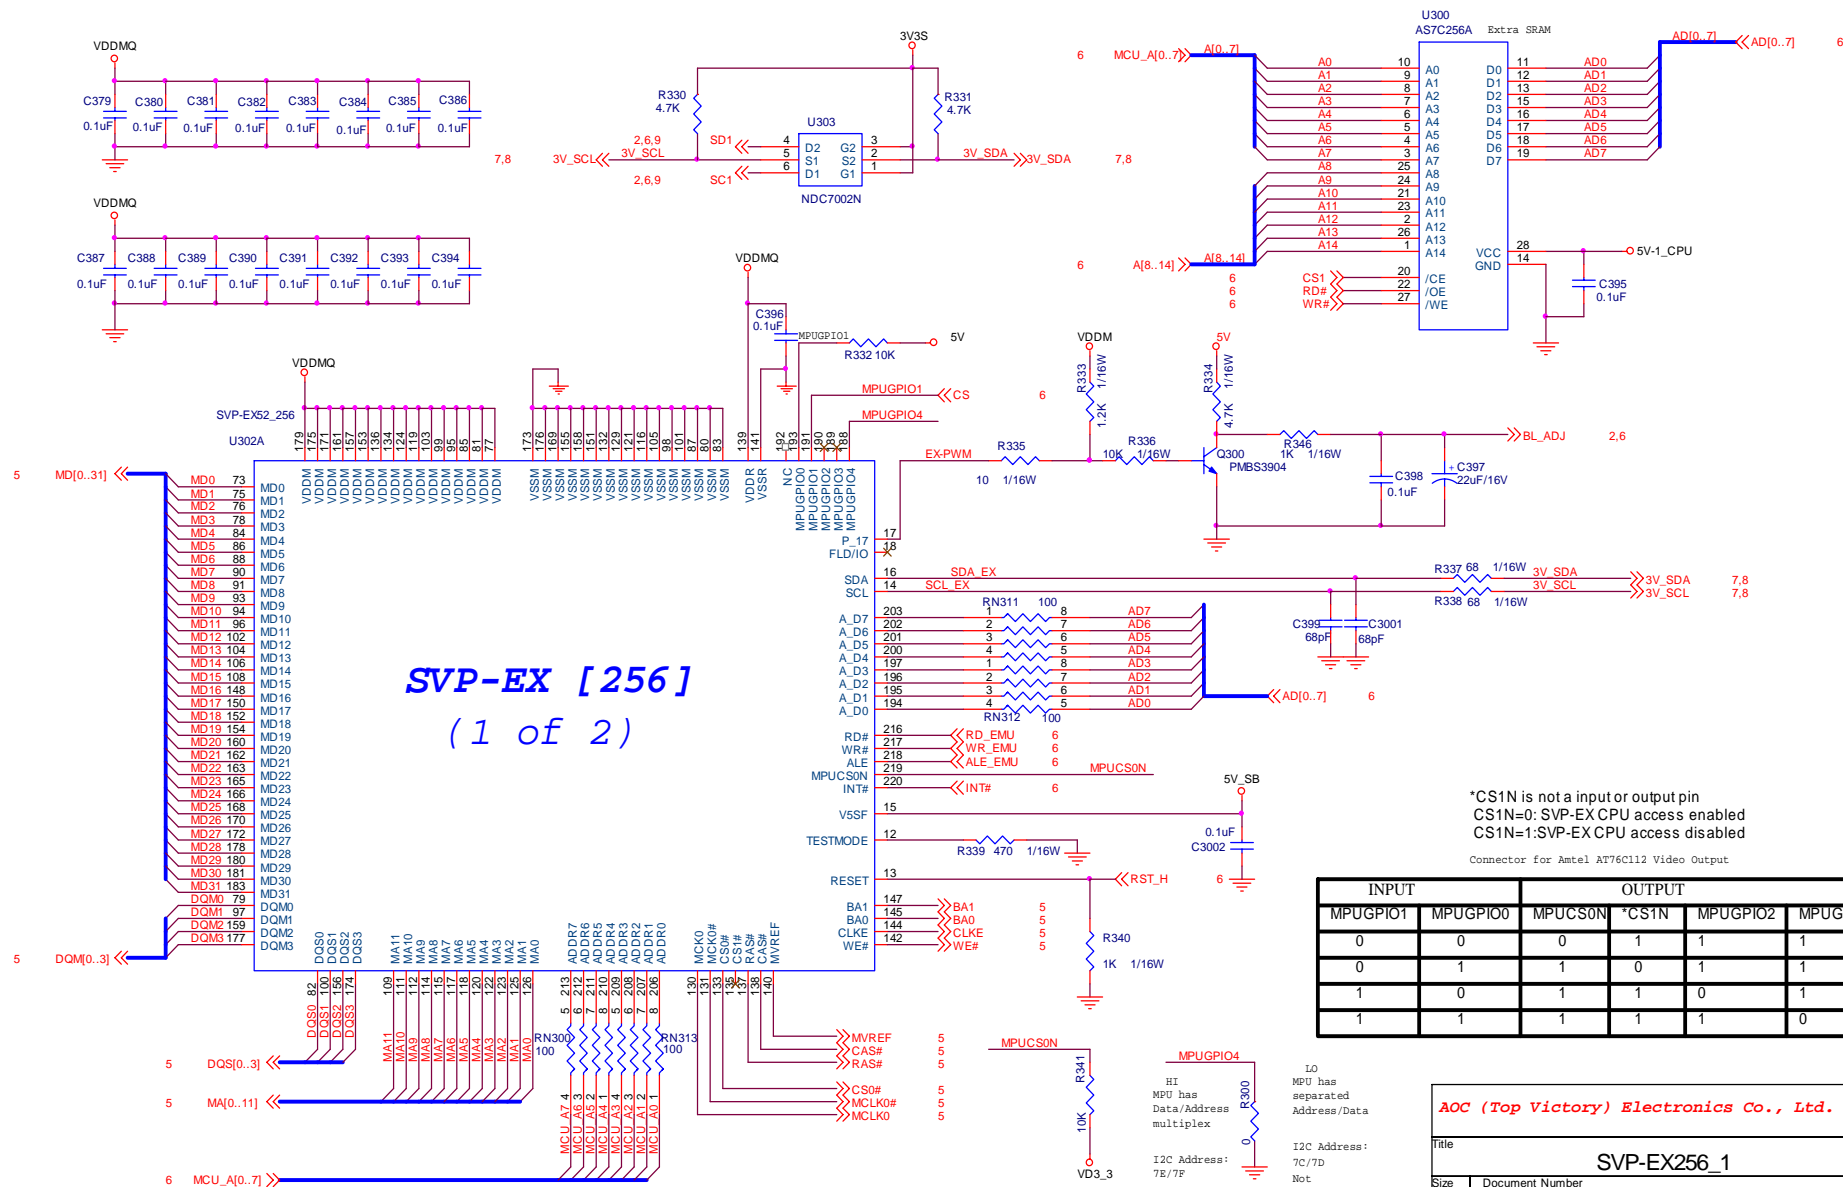


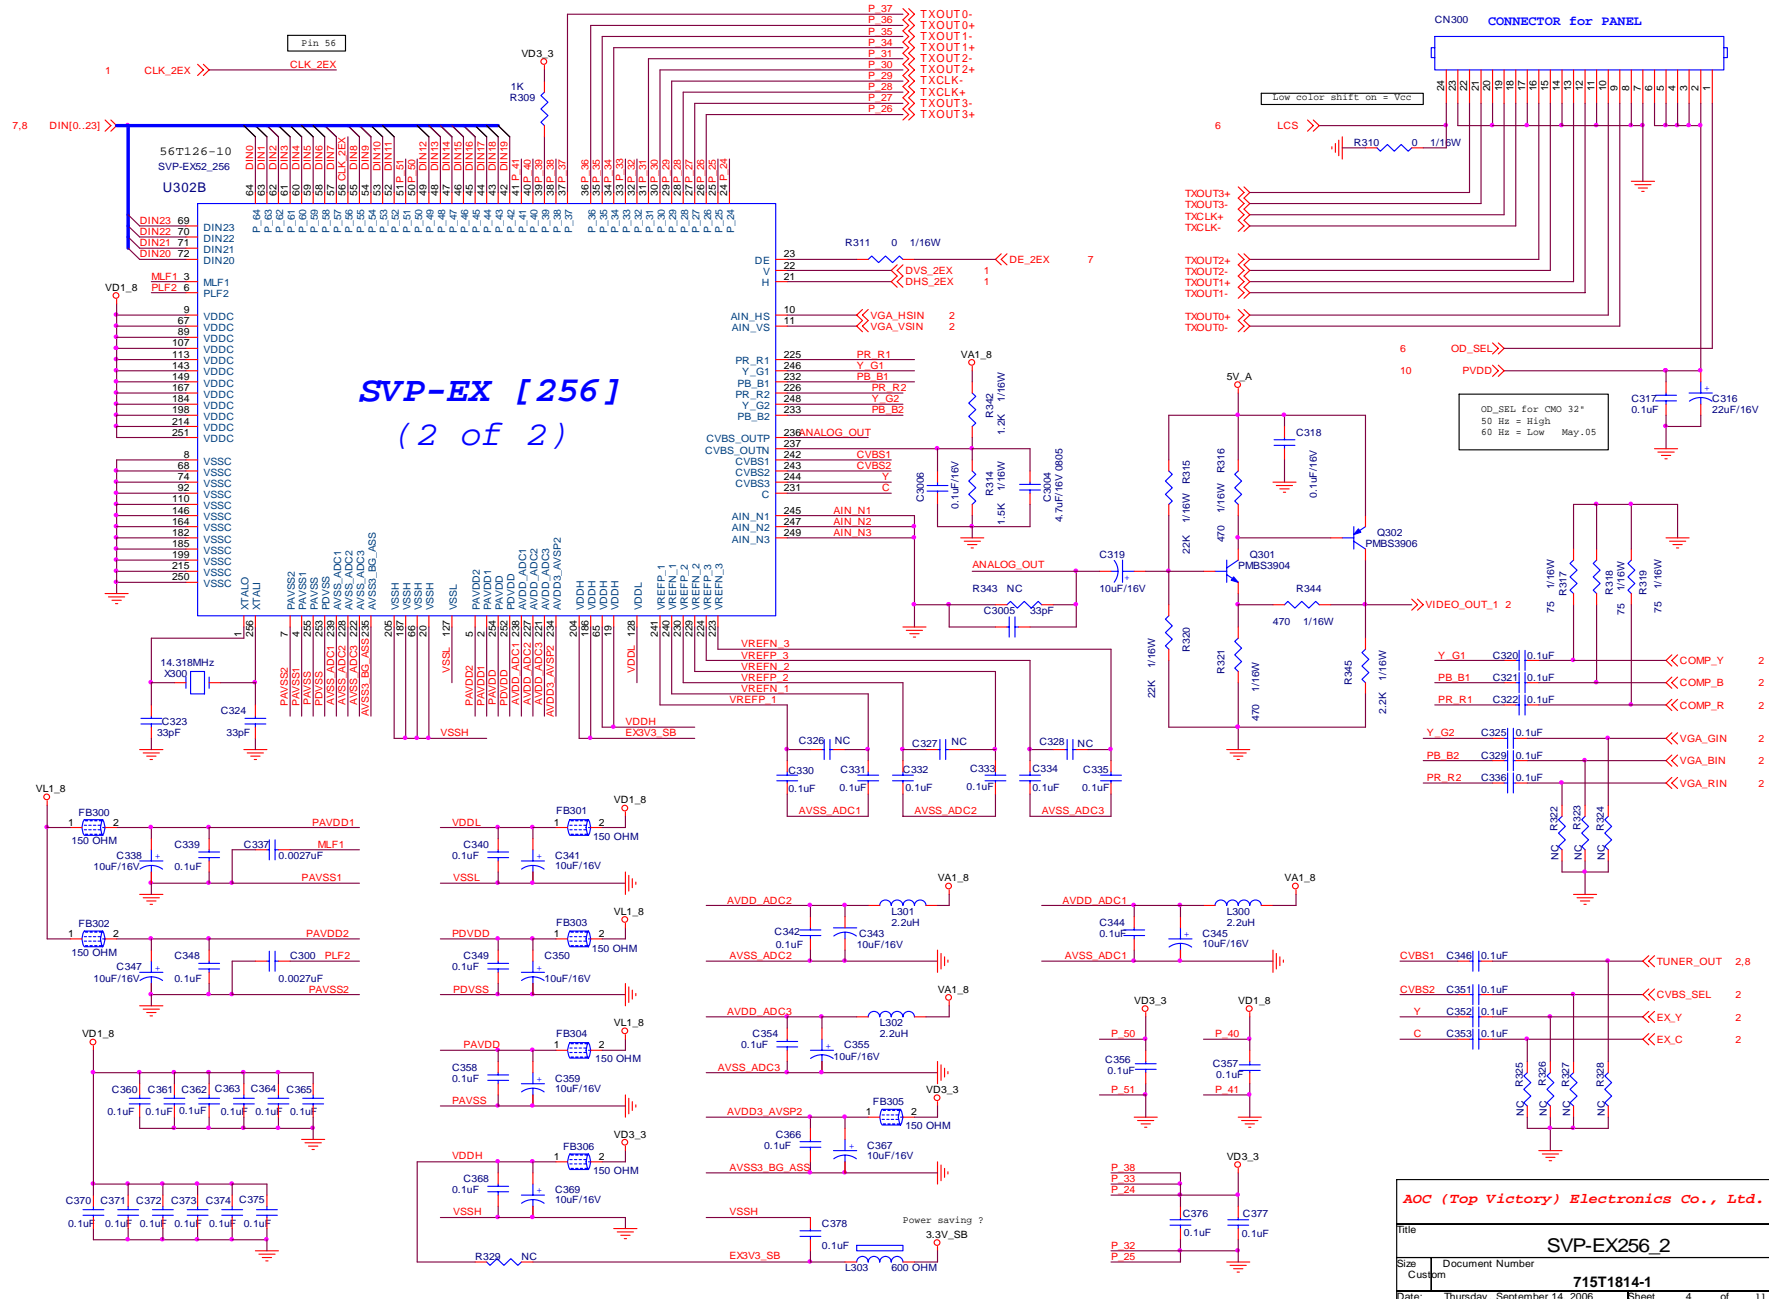



Test pads for DDR

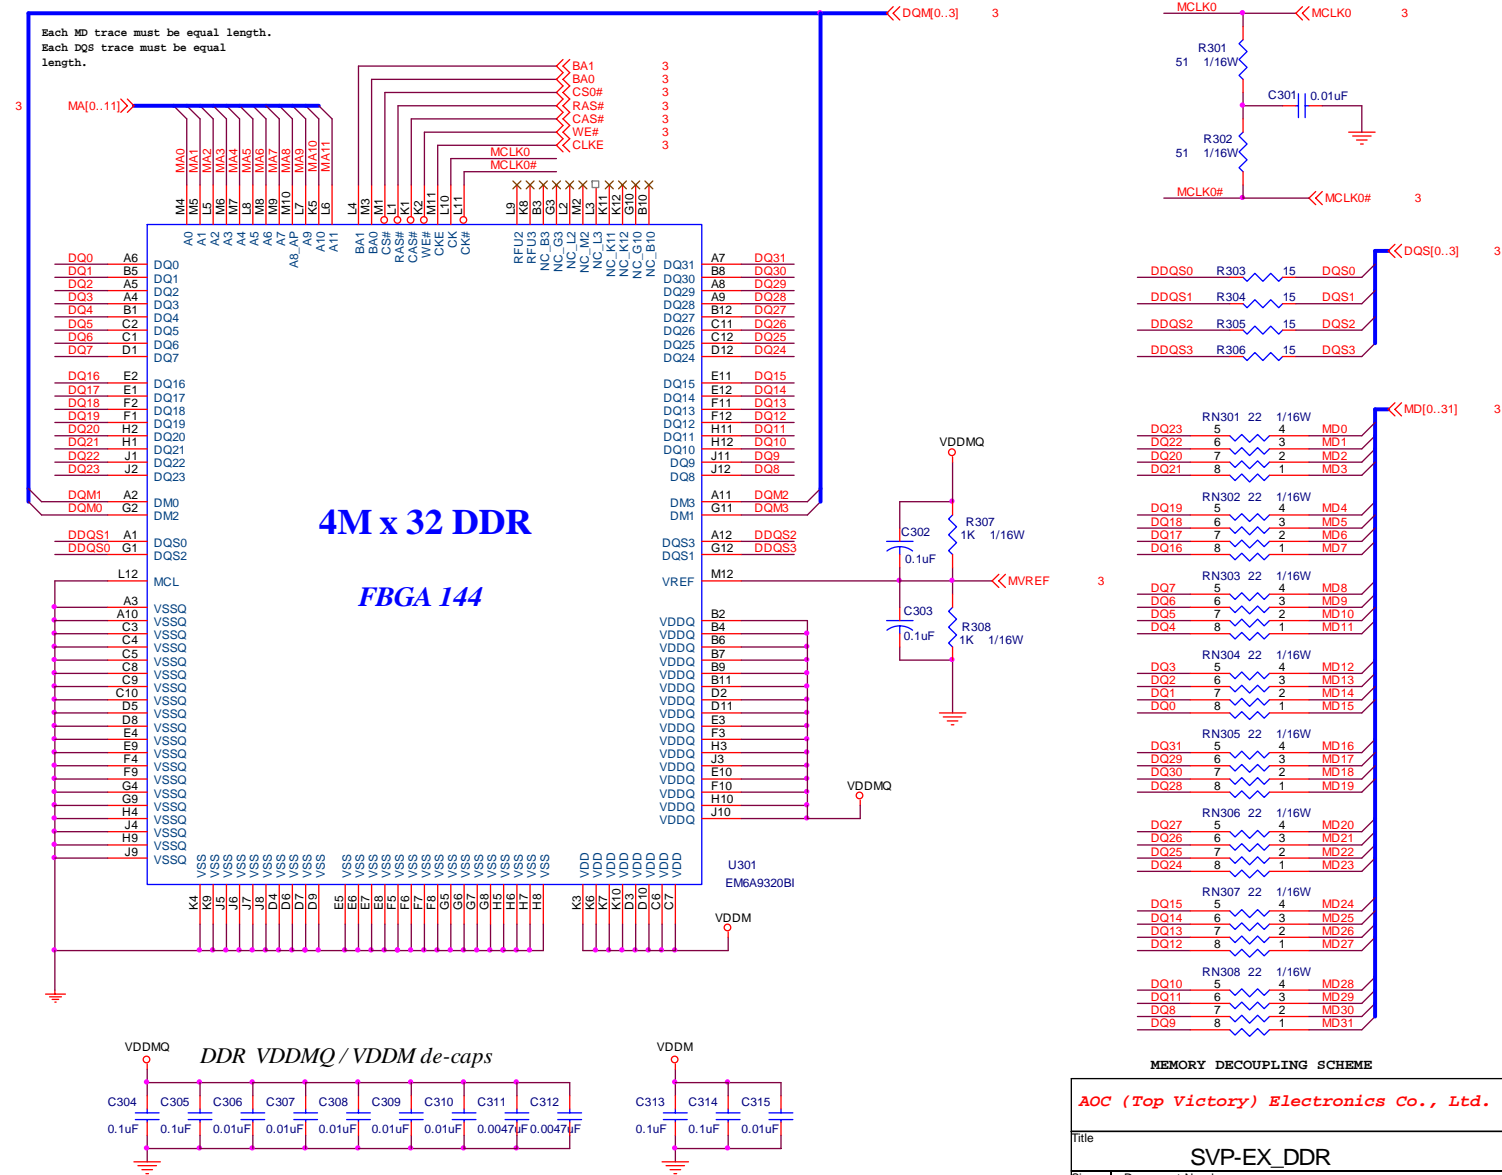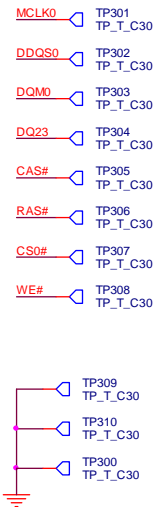



AOC (Top Victory) Electronics Co., Ltd.			
Title			
SVP-EX_DDR			
Size B	Document Number		Rev B
Date: Thursday, September 14, 2006		715T1814-1	
Sheet		5	of 11

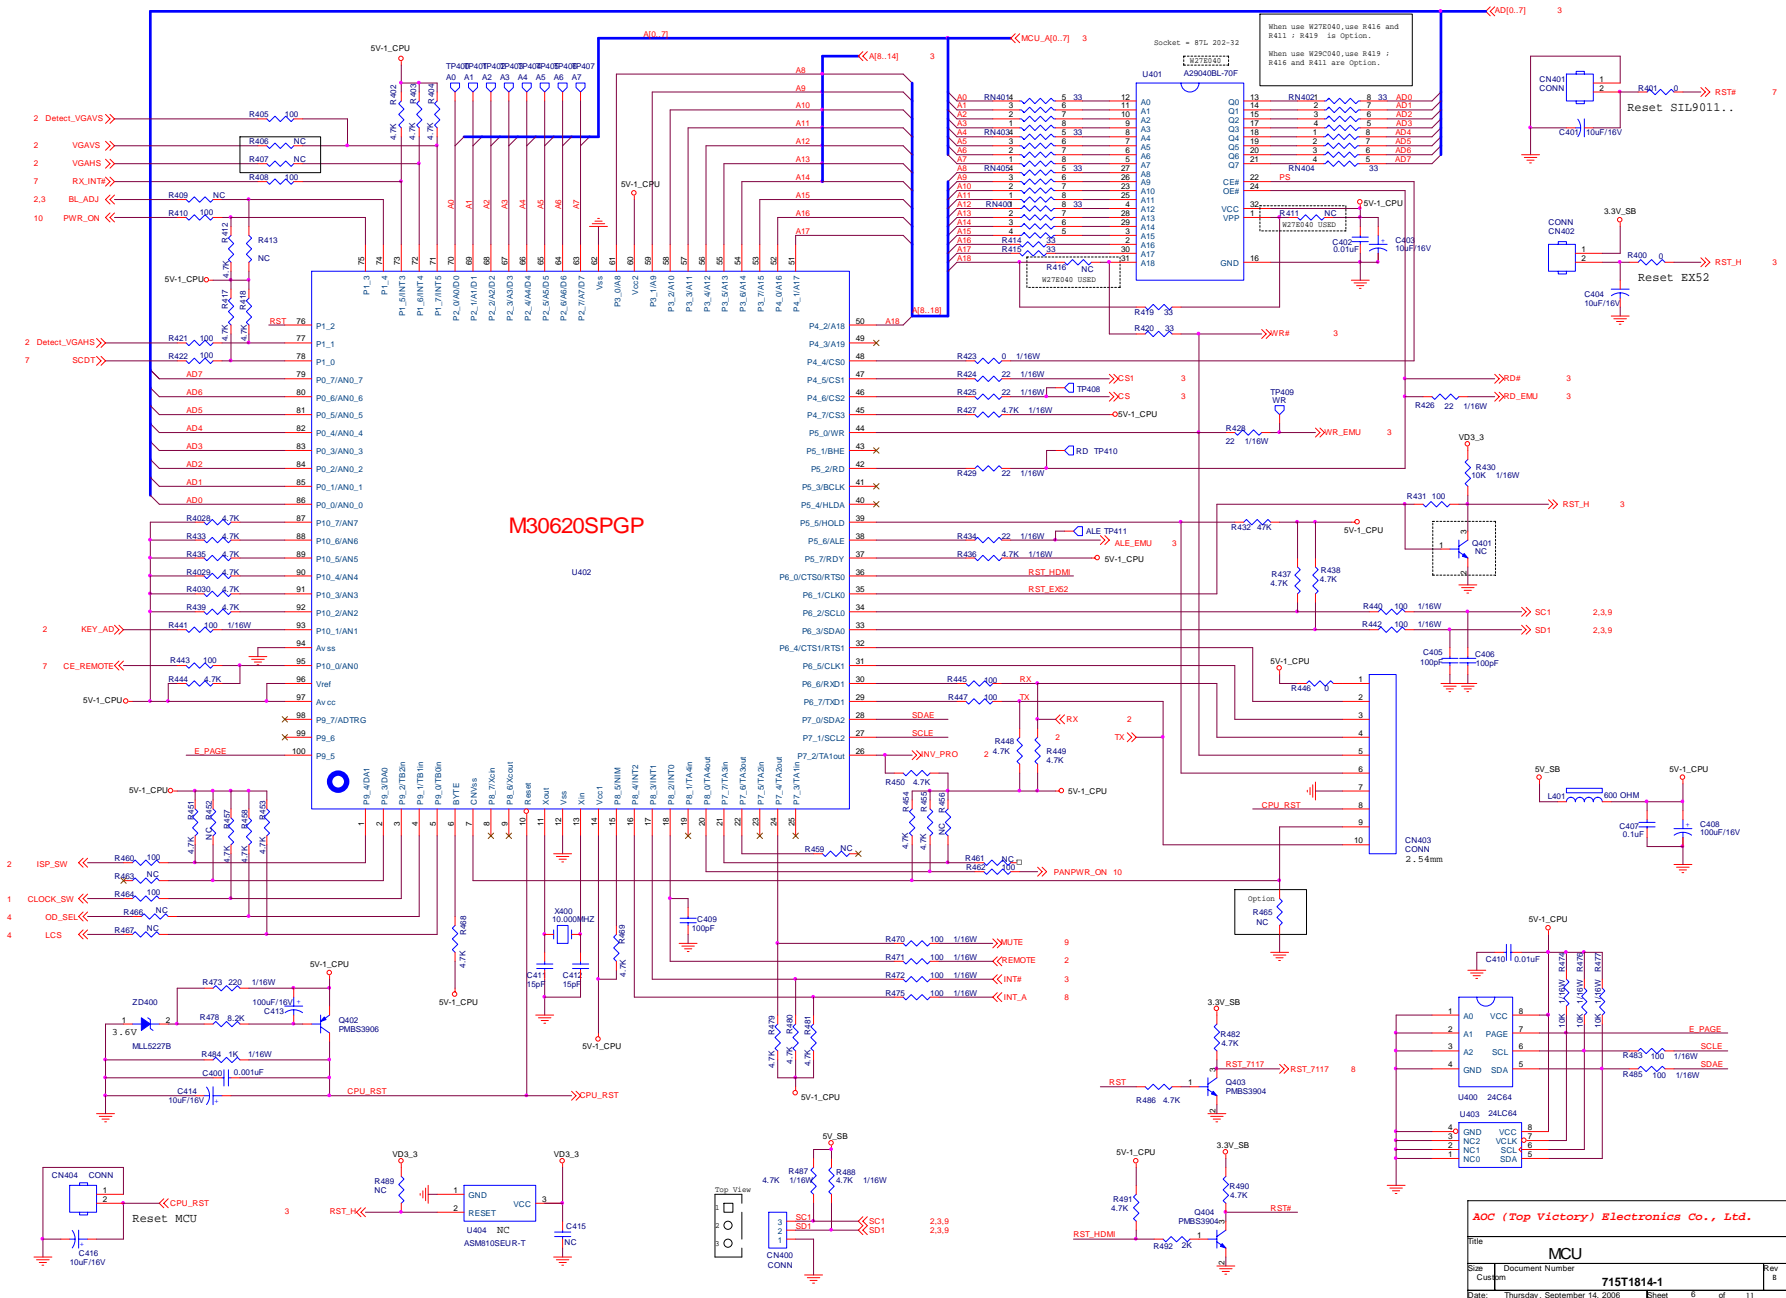




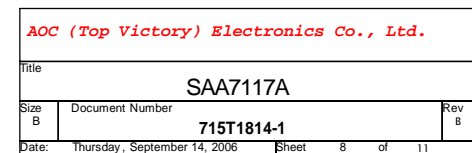

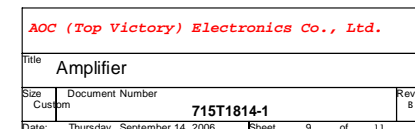

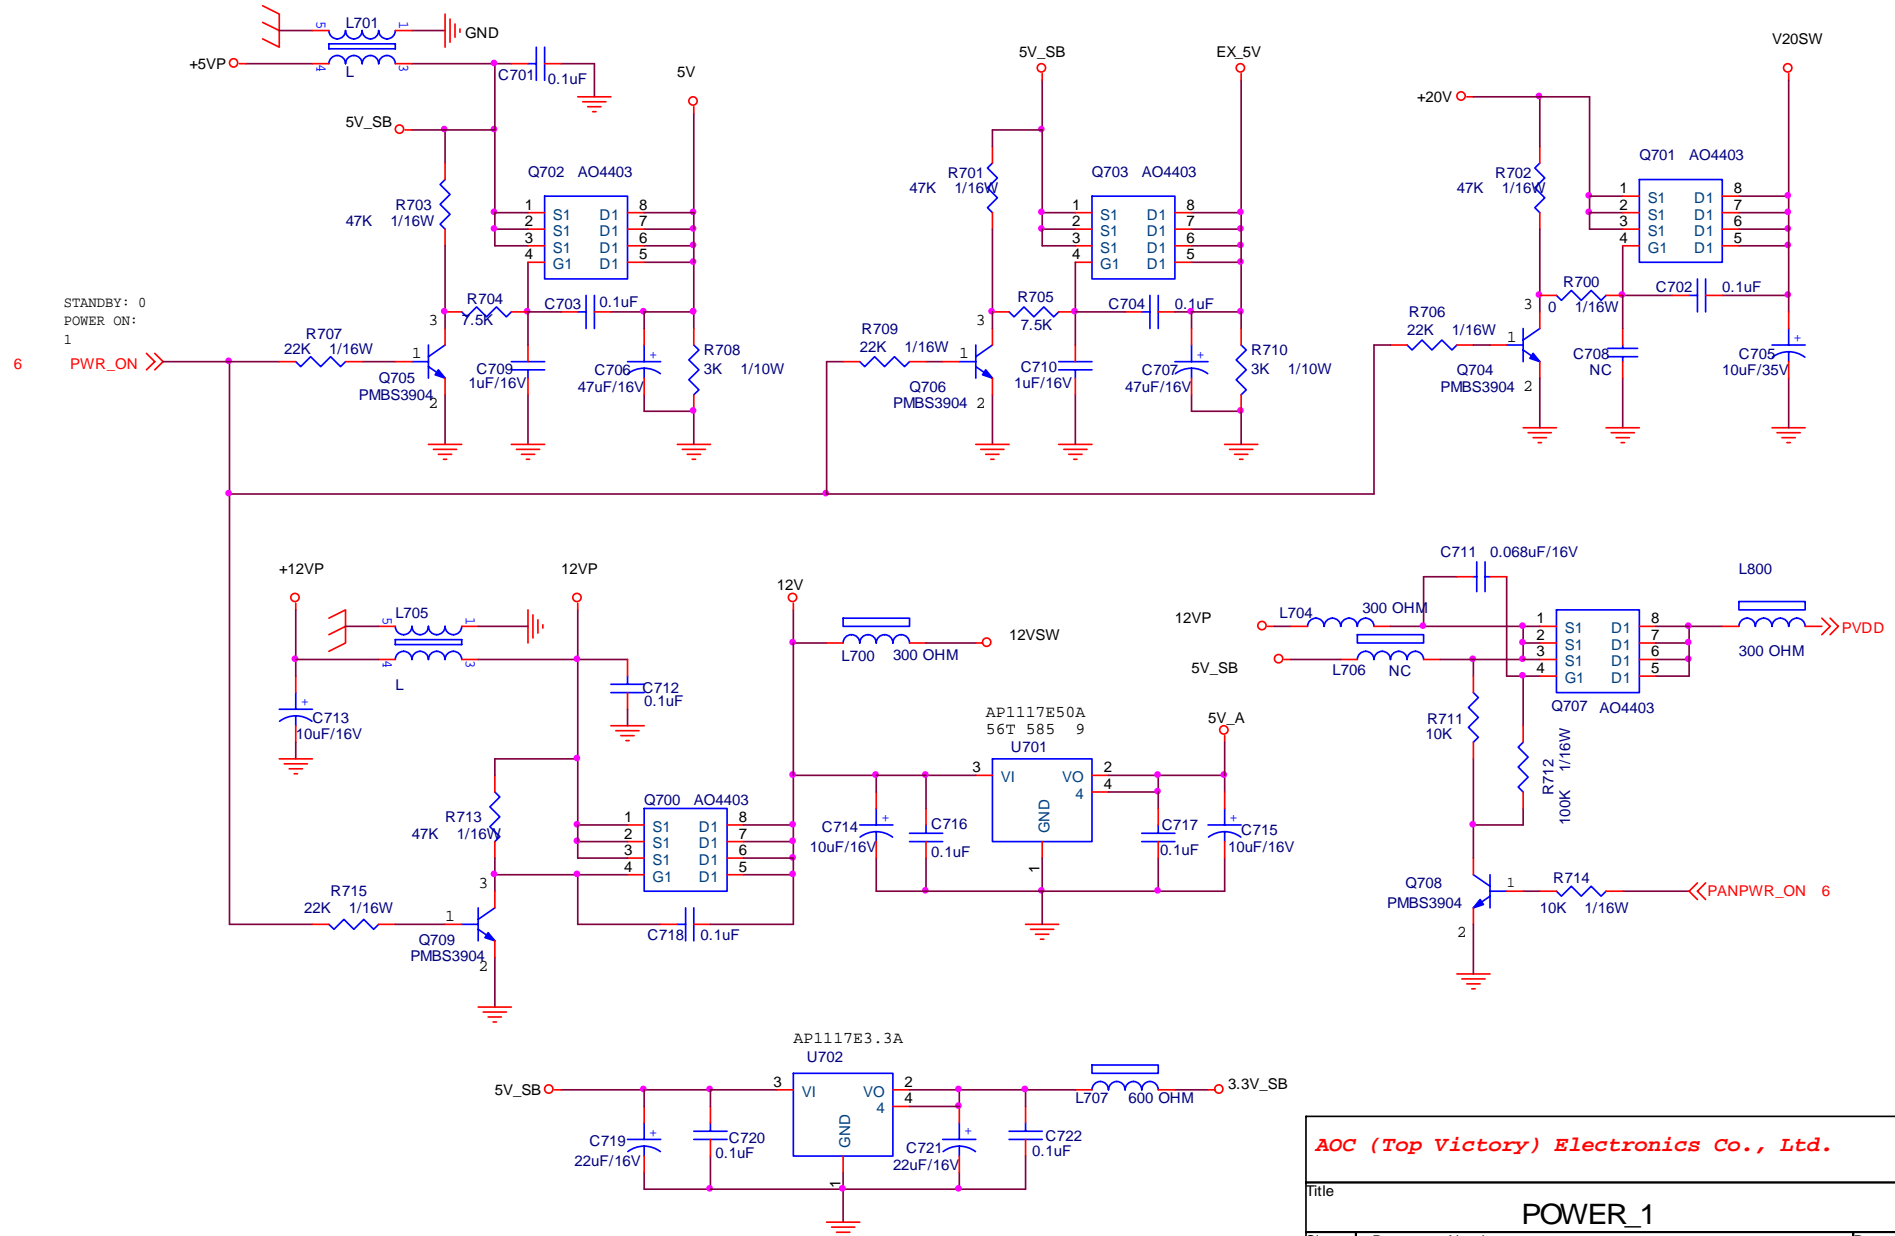


AOC (Top Victory) Electronics Co., Ltd.		
Title		
POWER_1		
Size	Document Number	Rev
A4	715T1814-1	B
Date:	Thursday, September 14, 2006	Sheet 10 of 11

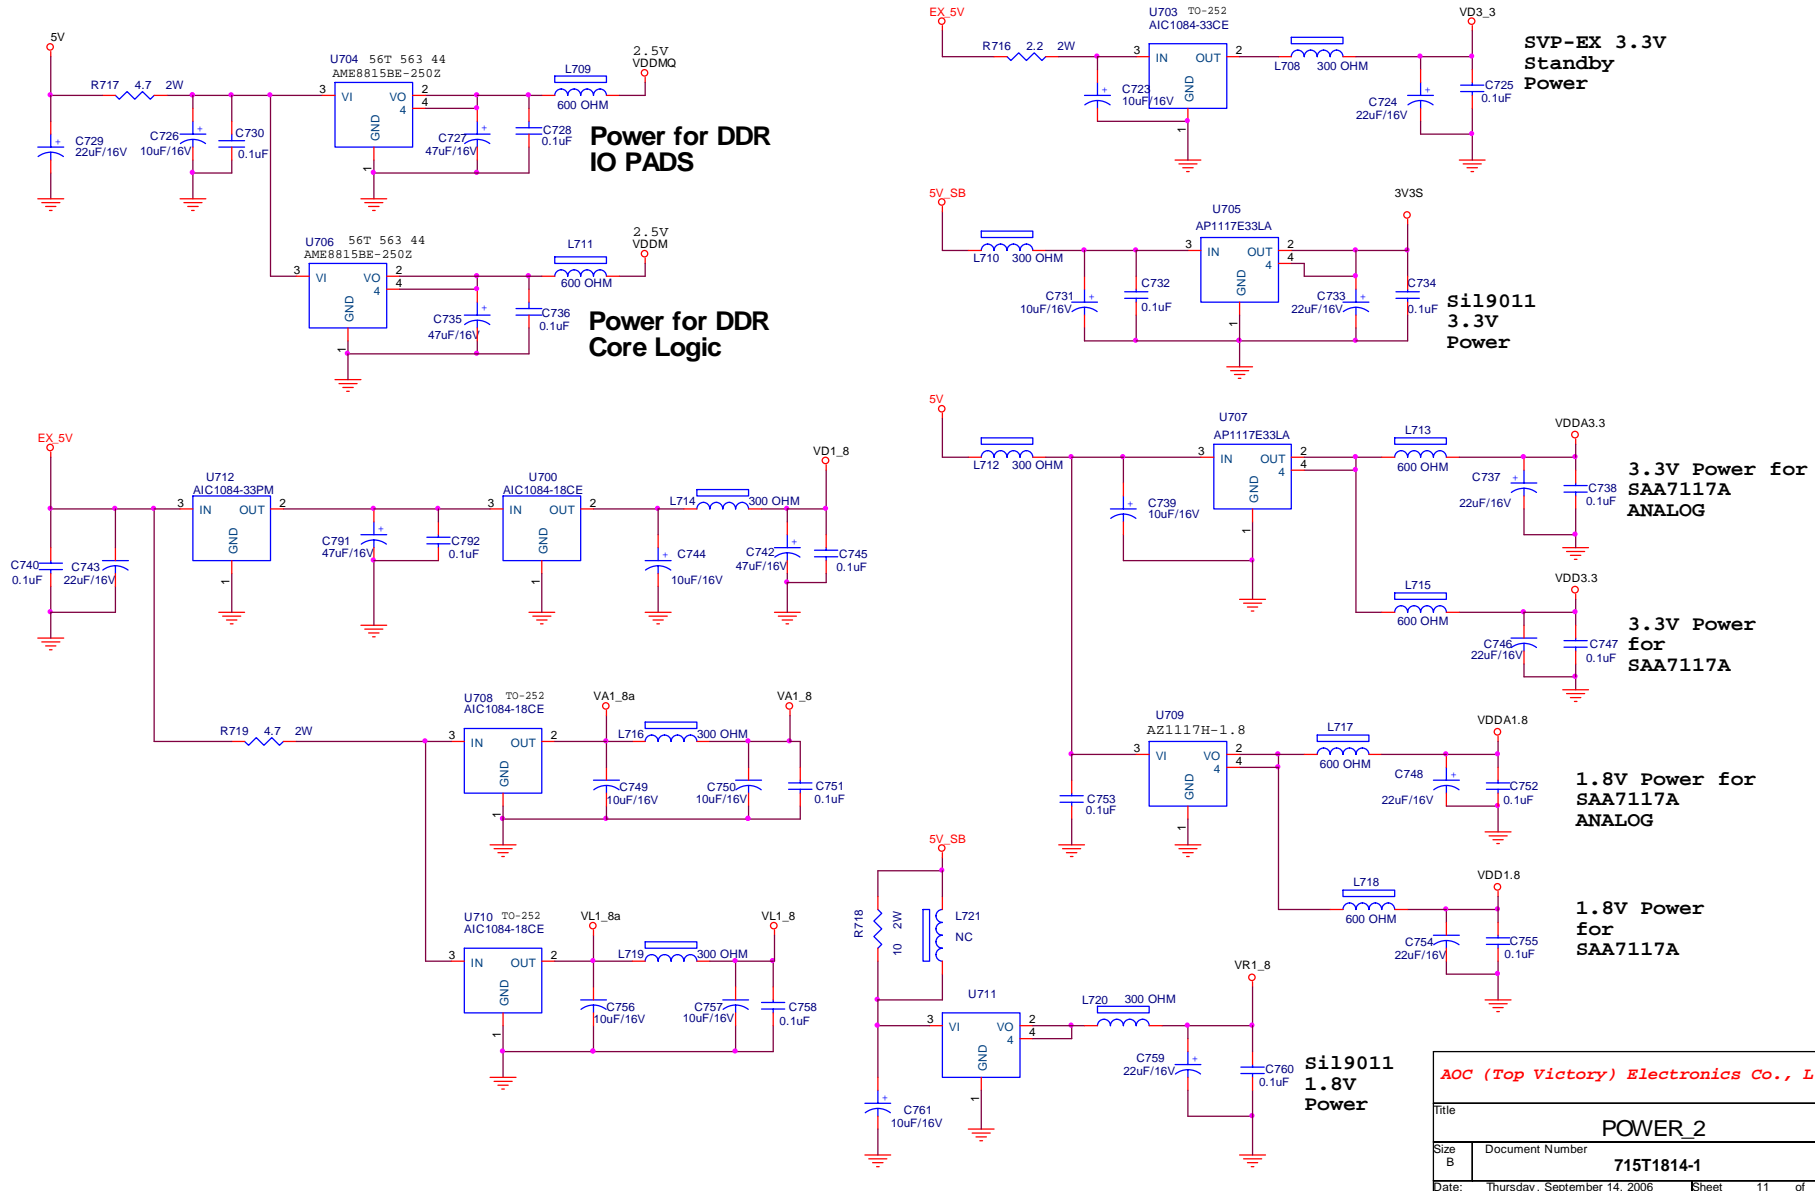

9.2 Power Board


715T1852-3


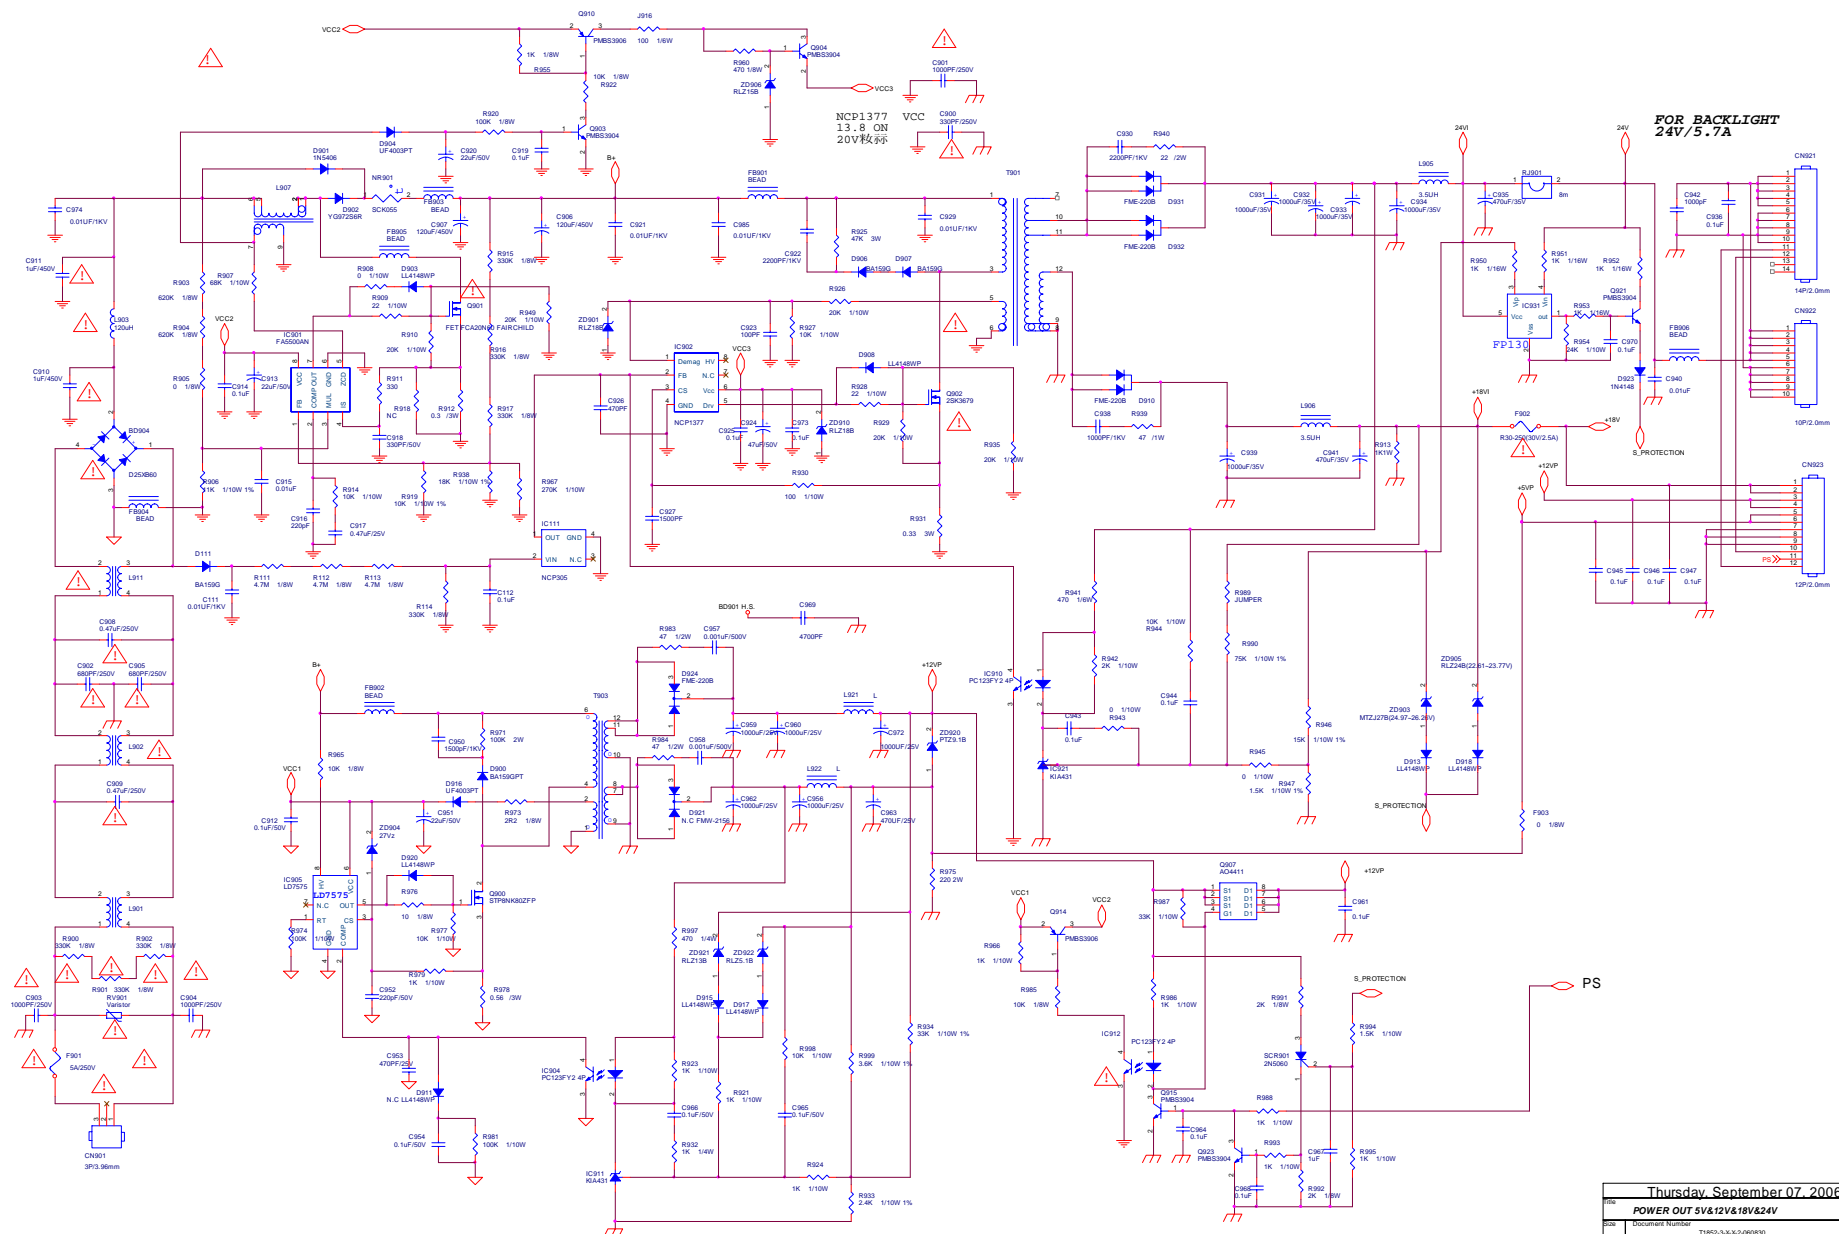


Thursday, September 07, 2006				
Title	POWER OUT 5V&12V&18V&24V			
Size	Document Number			Page 3
	T1852-3-X-X-2-060830			
Author	Project	1	ml	1


9.3 Tuner Board


715T1769-1

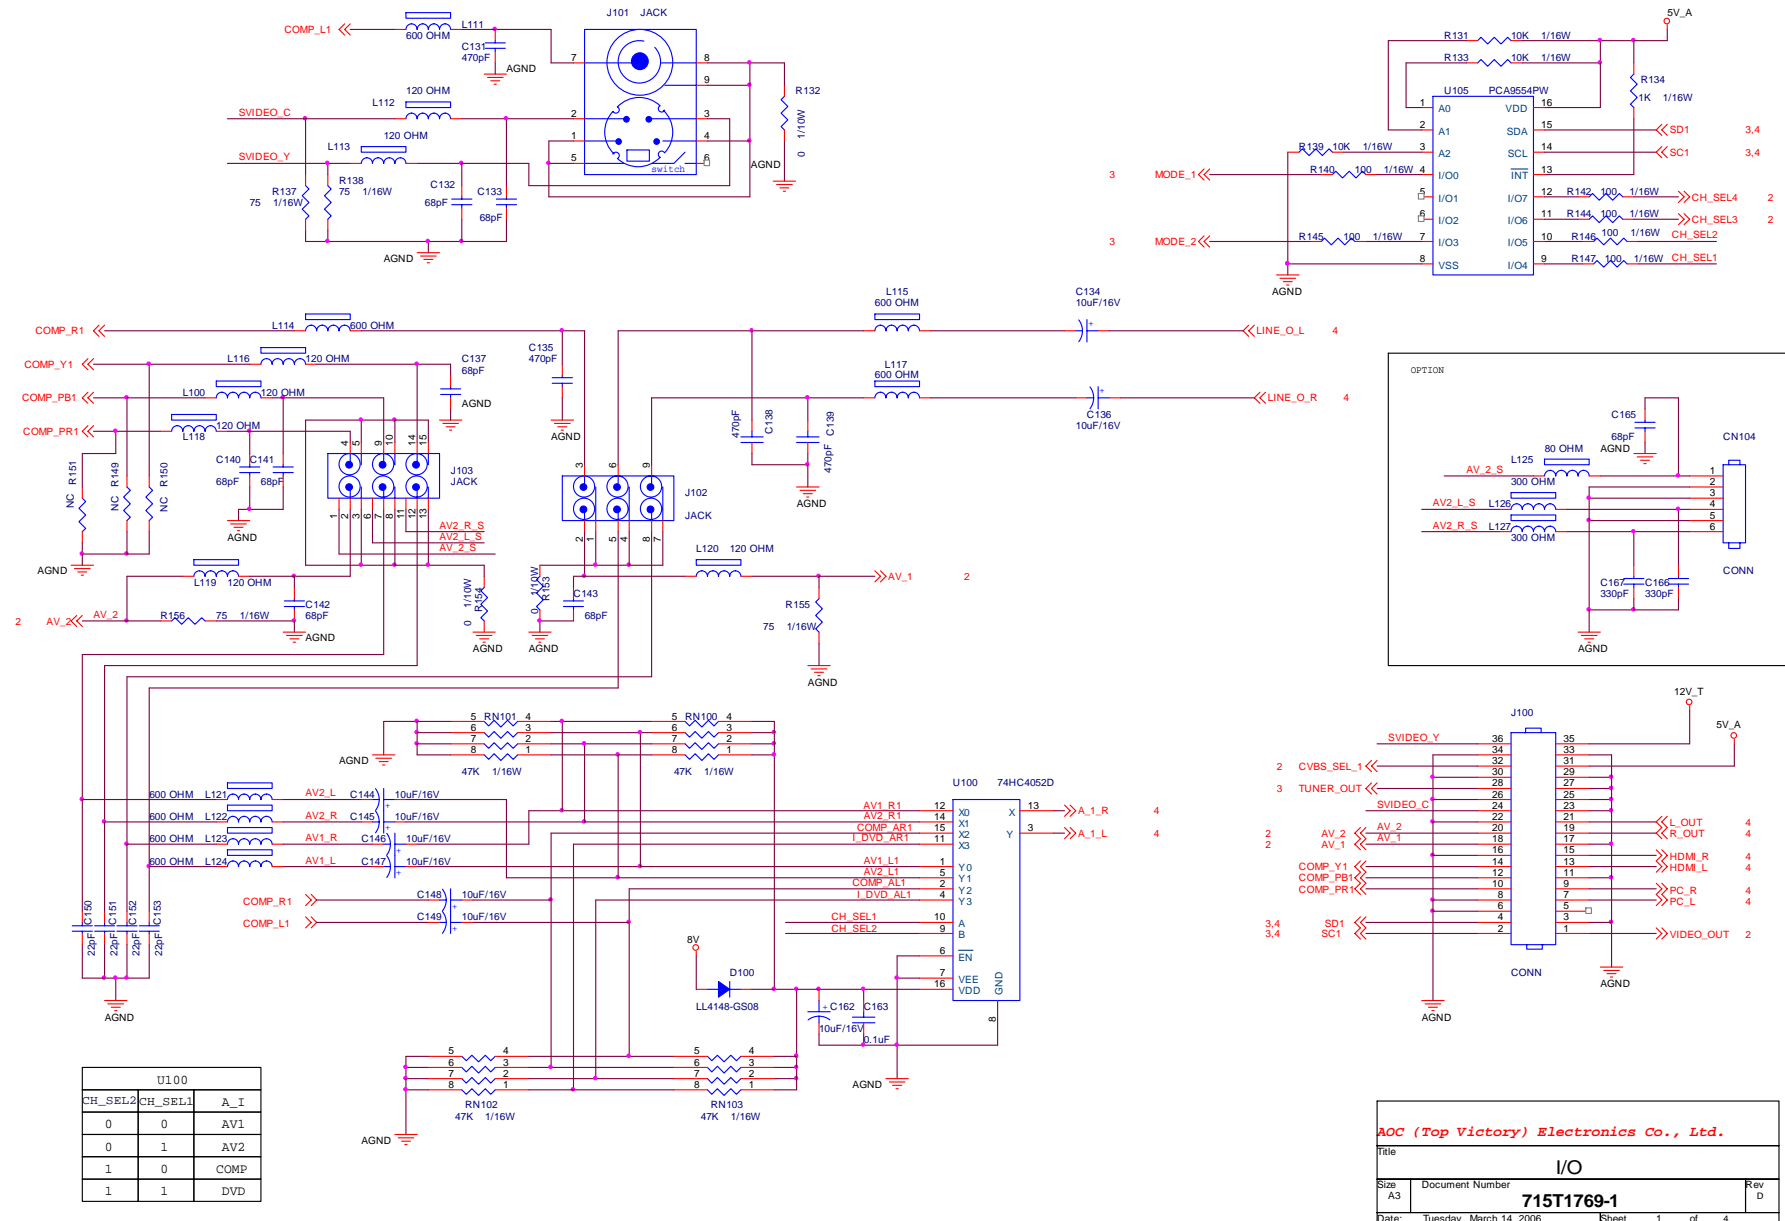

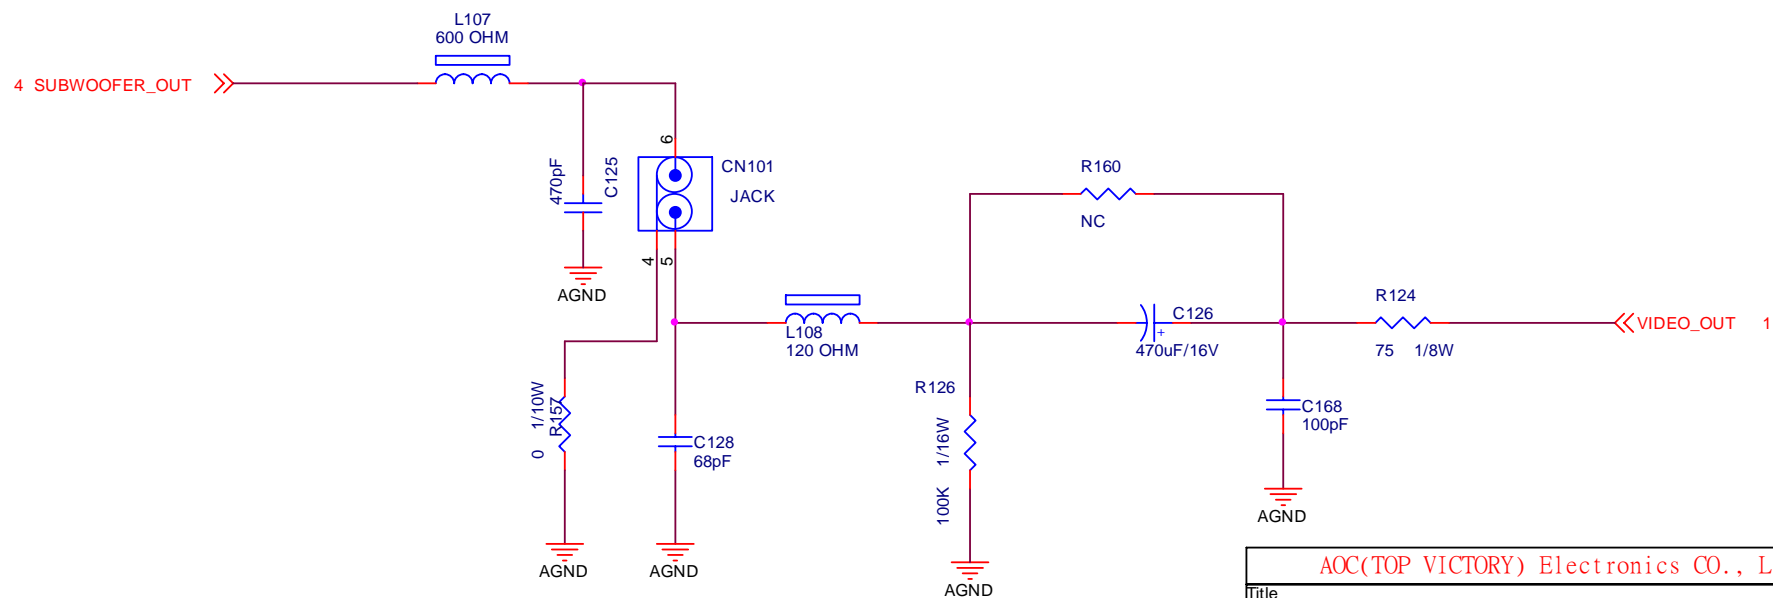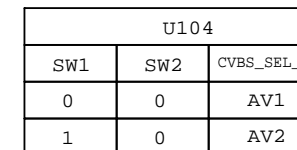

AOC(TOP VICTORY) Electronics CO., Ltd			
Title VIDEO SELECT			
Size A4	Document Number 715T1769-1		Rev D
Date:	Tuesday, March 14, 2006	Sheet	2 of 4

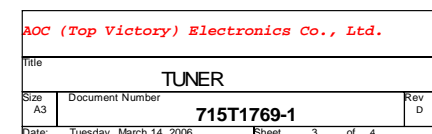


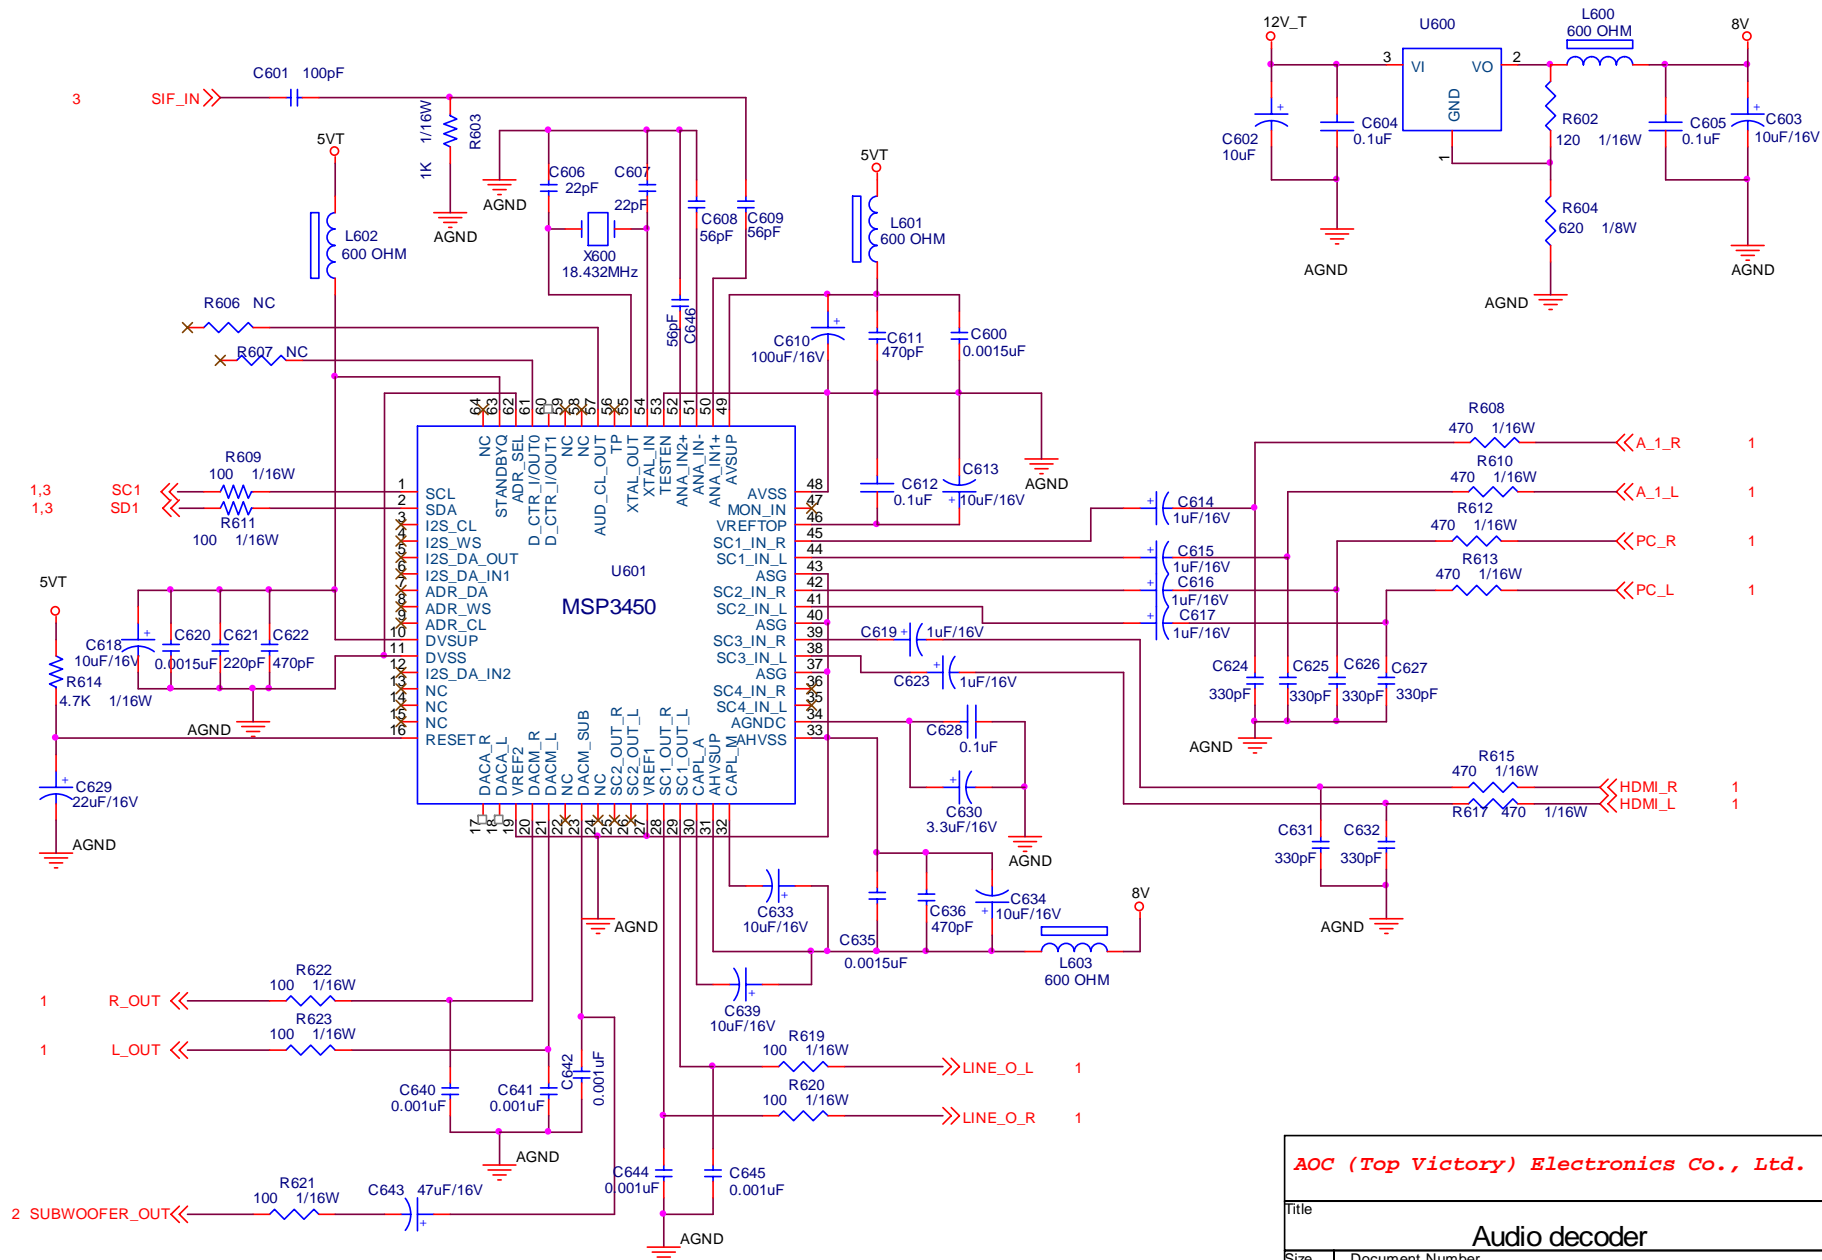

AOC (Top Victory) Electronics Co., Ltd.			
Title			
Audio decoder			
Size	Document Number	Rev	
A4	715T1769-1	D	
Date:	Tuesday, March 14, 2006	Sheet	4 of 4


9.4 Audio Board

715T1635-3

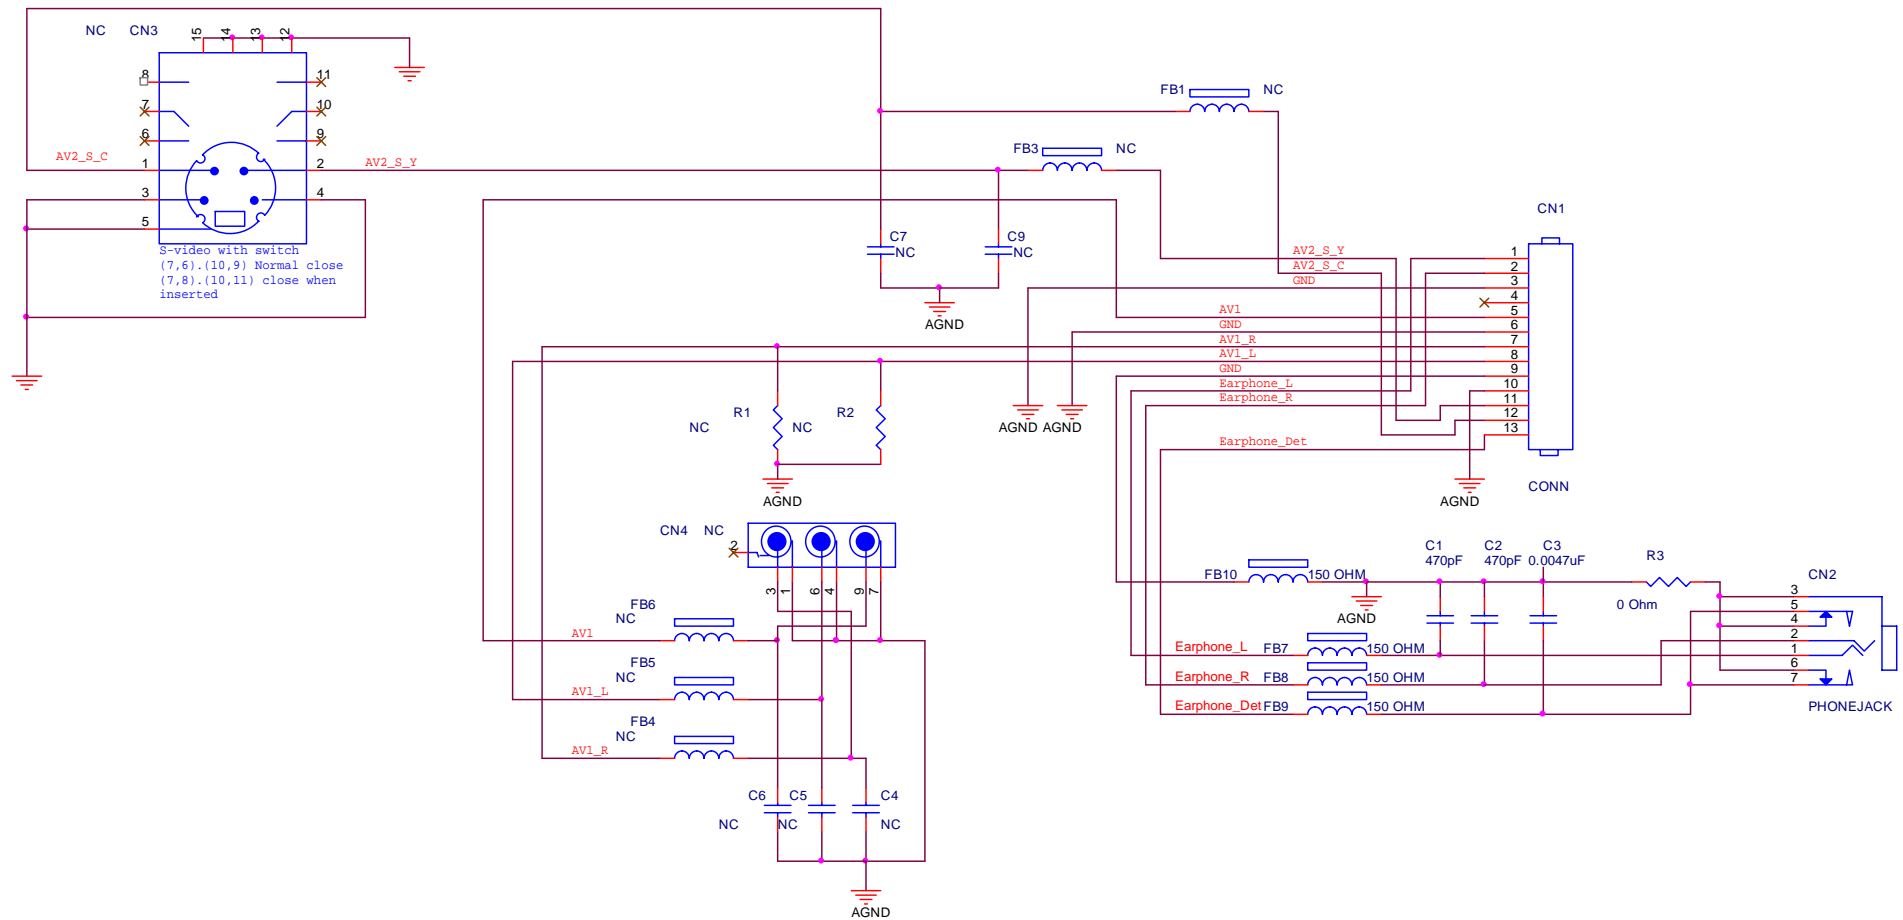

AOC (Top Victory) Electronics Co., Ltd.		
Title		
Side Board (New S-Video connector)		
Size B	Document Number 715T1635-3	Rev A
Date: Monday, January 09, 2006	Sheet 1 of 1	

10. Exploded View

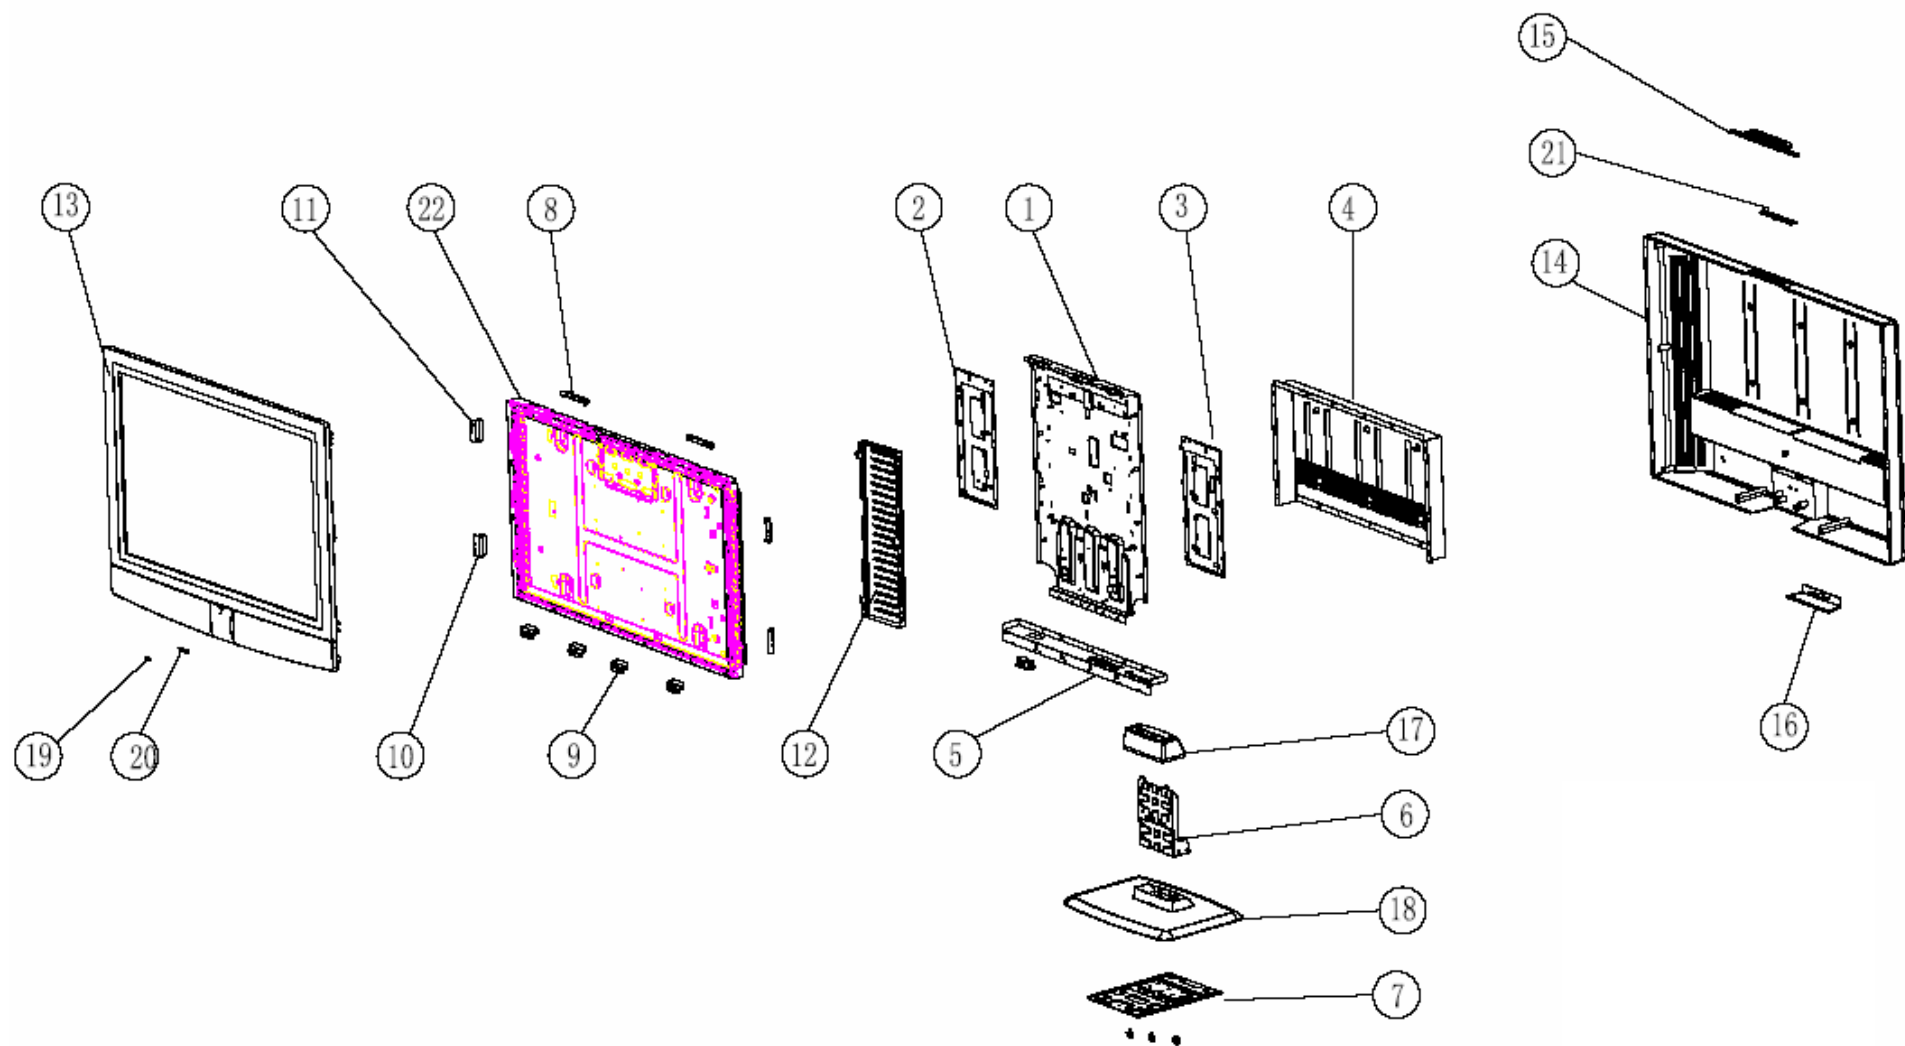

ITEM	PART NO	DESCRIPTION
1	Q15T8335 1	MAINFRAME
2	Q15T8336 2	PCB BKT RIGHT
3	Q15T8336 1	PCB BKT LEFT
4	Q85T 746 1	SHIELD COVER
5	Q15T8334B07	BKT CONNECTOR
6	Q15T8340 1	STAND-BKT
7	Q15T8341 1	BASE-BKT
8	Q15T8337 1	BKT_AU066_TOP
9	Q15T8339 1	BKT_AU066_BOTTOM
10	Q15T8338 2	BKT_AU066_LEFT_MID
11	Q15T8338 1	BKT_AU066_LEFT_UP_MID
12	Q85T 747 1	SHIELD COVER
13	Q34T1854AAZB1L	BEZEL
14	Q34T1855 GMC3L 30	REAR COVER
15	Q34T1859 GMB1L	BUTTON COVER
16	Q34T1856 GM 1L	REAR BOTTOM COVER
17	Q34T1857AAZ 1L	STAND
18	Q34T1858AAZ 1L 33	BASE
19	Q33T4978 1 C	LENS POWER
20	Q33T4979 ED C	LENS REMOTE
21	Q33T4977 PO 1L	BUTTON FUNCTION
22	750TVUQ0W11 11	LCD PANEL T370XW01 V137" BY A

11. BOM List

E376ATNCD1MRNP

Location	Part No.	Description
	034T1856 GM 1L	REAR BOTTOM COVER
	044T6002608 1A	PAPER BOARD
	044T6002608 7A	PAPER BOARD
	044T9003169	CORNER PAPER
	052T 1185	MIDDLE TAPE FOR CARTON
	052T 1186	SMALL TAPE
	052T 1210 A	ALUMINIUM TAPE
	052T6019 1	YELLOW TAPE
	078T 451 1 Y	SPK 8OHM 15W SU
	085T 583501504	GASKET
	089T 173 56 39	RF CABLE
	089T 17356G554	AUDIO CABLE
	089T 728GAA600	SIGNAL CABLE
	089T404A18N IS	POWER CORD
	092TB1JX1A21GM	BATTERY LR06 XINLI
	095T8013 2529	WIRE HARNESS
	095T8013 3533	WIRE HARNESS
	095T8014 8611	WIRE HARNESS
	095T8014 10 36	WIRE HARNESS
	095T8014 12562	WIRE HARNESS
	095T8014 13610	WIRE HARNESS
	095T8014 14 40	WIRE HARNESS
	095T8018 3514	LVDS CABLE
	098TRABD2NEACF	REMOTE FUHUA FQ FOR AOC
	0D1T 940 6120	SCREW
	0D1T 940 10 47 CR3	SCREW
	0D1T 940 10 47 CR3	SCREW
	0D1T 940 14 47 CR3	SCREW
	0D1T1140 8128 CR3	SCREW
	0D1T1730 8128 CR3	SCREW
	0M1T 850 15128 CR3	SCREW
	0M1T 940 12120	SCREW
	0M1T 940 16120	SCREW
	0M1T1740 18128 CR3	SCREW
	0Q1T 330 6128 CR3	SCREW
	0Q1T 340 10 47 CR3	SCREW
	0Q1T1030 10128 CR3	SCREW
	0Q1T1840 10120	SCREW
	705TQLK0B34013	BACK COVER ASS'Y
	033T4980 GM 1L	CABLE CLIP
	EFPFLA1P	E-FRAME BOARD
CN1	033T380213H	WAFER 13P RIGHT ANGLE PITCH
CN2	088T 30231T CJ	PHONE JACK
R3	061T0603000	CHIP 0OHM 1/16W
C1	065T0603471 32	CHIP 470PF 50V NPO
C2	065T0603471 32	CHIP 470PF 50V NPO
C3	065T0603472 32	CHIP 4700PF 50V X7R
FB8	071T 56G151 A	CHIOP BEAD 150 OHM

FB9	071T 56G151 A	CHIOP BEAD 150 OHM
FB7	071T 56G151 A	CHIOP BEAD 150 OHM
	715T1635 3	AUDIO BOARD PCB
	Q34T1855 GMC3L 30	REAR COVER
	705TQLK0F34020	BEZEL ASS'Y
	033T4977 PO 1L	BUTTON FUNCTION
	033T4978 1 C	LENS POWER
	0Q1T 330 6128 CR3	SCREW
	IRPF6AA5P	IR BOARD
CN2	033T3802 4	WAFER PH-4
U4	056T 627 7	FM-6038TM2-5AN
D6	081T 12 1 GP	LED GP32032M/R003-ZY-33
Q1	057T 417 6	PMBS3906/PHILIPS-SMT
R43	061T0603101	CHIP 100OHM 1/16W
R45	061T0603103	CHIP 10KOHM 1/16W
R44	061T1206301	RST CHIPR 300 OHM +-5% 1/4W
R46	061T1206331	RST CHIPR 330 OHM +-5% 1/4W
C43	065T0603102 32 GP	CHIP 1000PF 50V X7R
C39	065T0603104 32	CHIP 0.1UF 50V X7R
C41	065T0603104 32	CHIP 0.1UF 50V X7R
C42	065T0603104 32	CHIP 0.1UF 50V X7R
C40	065T0805475 A5	CHIP 4.7UF 10V X5R
FB8	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
FB7	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
FB6	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
	715T1836 1 3	IR BOARD PCB
	KEPFL60KA2P	KEY BOARD
S6	077T 600 1GCJ	TACT SWITCH TSPB-2 -NP
S7	077T 600 1GCJ	TACT SWITCH TSPB-2 -NP
S3	077T 600 1GCJ	TACT SWITCH TSPB-2 -NP
S1	077T 600 1GCJ	TACT SWITCH TSPB-2 -NP
S2	077T 600 1GCJ	TACT SWITCH TSPB-2 -NP
S4	077T 600 1GCJ	TACT SWITCH TSPB-2 -NP
S5	077T 600 1GCJ	TACT SWITCH TSPB-2 -NP
CN1	033T8032 4C	WAFER 1.25MM SMT 4P
R5	061T0603000	CHIP 0OHM 1/16W
R4	061T0603100 1F	RST CHIPR 1 KOHM +-1% 1/10W
R2	061T0603180 1F	RST CHIPR 1.8 KOHM +-1% 1/10W
R1	061T0603220 1F	RST CHIPR 2.2 KOHM +-1% 1/10W
R8	061T0603220 2F	RST CHIPR 22 KOHM +-1% 1/10W
R6	061T0603330 1F	RST CHIPR 3.3 KOHM +-1% 1/10W
R3	061T0603390 0F	RST CHIPR 390 OHM +-1% 1/10W
R7	061T0603680 1F	RST CHIPR 6.8 KOHM +-1% 1/10W
C2	065T0603101 32	CHIP 100PF 50V X7R
C1	065T0603101 32	CHIP 100PF 50V X7R
L2	071T 56U601 MA	0805 600 OHM
L1	071T 56U601 MA	0805 600 OHM
D1	093T 6433P	BAV99
	715T1886 1	KEY BOARD PCB
	Q33T4979 ED C	LENS REMOTE
	Q34T1854AAZB1L	BEZEL

	Q34T1859 GMB1L	BUTTON COVER
	Q44T3121510524	SPONGE
	Q44T3231 21 21	CR WASHER
	Q44T3231 21 22	CR WASHER
	705TQLK0K34006	SOCKECT ASS'Y
	002T6022 1	SCREW NUTS
	077T 306 26 RF	ROCKER SWICH+SOCKET
	088T 303 6A 1	PALL+RCA CONN
	095T 900 76	WIRE
	095T 900 81	WIRE HARNESS
	095T8021 3 28	WIRE HARNESS
	Q15T8334B07	BKT CONNECTOR
	705TQLK0P34017	STAND ASS'Y
	012T 394 4	RUBBER FOOT
	012T6099 1	RUBBER FOOT
	0D1T 940 6120	SCREW
	0D1T 940 10 47 CR3	SCREW
	0Q1T 140 10120	SCREW
	Q15T8340 1	STAND-BKT
	Q15T8341 1	BASE-BKT
	Q34T1857AAZ 1L	STAND
	Q34T1858AAZ 1L 33	BASE
	750TVUQ0W11 11	LCD PANEL T370XW01 V137" BY A
	ADPC24240A1P	ADAPTOR BOARD
CN922	033T3802 10	PLUG
CN923	033T3802 12	WAFER PH-12
CN921	033T3802 14	CONN
CN901	033T8029 3A	WAFER 2P 3.96MM
	040G 45762420A	LABEL 25X6MM
IC912	056T 139 3A	PC123Y22FZOF
IC910	056T 139 3A	PC123Y22FZOF
IC904	056T 139 3A	PC123Y22FZOF
R913	061T 208102 64	1KOHM 5% 1W
R971	061T152M10458F	100K OHM 5%2W
R940	061T152M220 64	22 OHM 5% 2W
R975	061T152M22158F	RST MOFR 220 OHM +-5% 2WS
R956	061T153M308 59	RST MOFR 0.3OHM +-5% 3WS
R925	061T153M47358F	47K OHM 5% 3W
C939	067G215L102 6N	KY35VB1000M-L 5*25MM
C934	067G215L102 6N	KY35VB1000M-L 5*25MM
C933	067G215L102 6N	KY35VB1000M-L 5*25MM
C932	067G215L102 6N	KY35VB1000M-L 5*25MM
C931	067G215L102 6N	KY35VB1000M-L 5*25MM
C907	067T 4012115K	105℃ 120UF M 450V KINGNICH
C906	067T 4012115K	105℃ 120UF M 450V KINGNICH
FB906	071G 55 21	FERRITE BEAD
	071T 55 30	FERRITE BEAD 4.0*2*3
L903	073T 174 70 L	120UH
L907	073T 174 83 T	LINE FILTER TDK
L902	073T 174 86 T	LINE FILTER 7MH TDK
L911	073T 174 86 T	LINE FILTER 7MH TDK

L901	073T 174 86 T	LINE FILTER 7MH TDK
L921	073T 253 91 LS	CHOKE BY LI SHIN
L922	073T 253 91 LS	CHOKE BY LI SHIN
L905	073T 253150 L	CHOCK
L906	073T 253155 L	CHOKE
T903	080TL37T 1 T	XFMR FOR POWER TDK
T901	080TL37T 2 T	XFMR FOR POWER TDK
RJ901	095T 90 26	WIRE HARNESS
	705T3724057001	37" LCD TV POWER ASS'Y
Q900	057T 667 21	STP10NK70ZFP
	090T 426501	HEAT SINK
	0M1T1730 8128 CR3	SCREW
	705T3724057002	37" LCD TV POWER ASS'Y
Q902	057T 600 35	STP8NK80ZFP BY ST TO-220FP
	0M1T1730 8128 CR3	SCREW
	Q90T0126 1	HEAT SINK
	705T3724057093	37" LCD TV POWER ASS'Y
	012T 372 5	SILICON
Q901	057T 611 5	FET FCA20N60 FAIRCHILD
D902	093T 220 23	DIODE FMX-G26S TO-220 SANKEN
	0M1T1730 12128 CR3	SCREW
	Q90T6321A01	HEAT SINK
	705T3724061030	0.3OHM/3W ASS'Y
R912	061T153M308 59	RST MOFR 0.3OHM +-5% 3WS
	096T 29 1	SHRINK TUBE UL/CSA
	705T3724061033	0.33OHM/3W ASS'Y
R931	061T153M338 59	RST MOFR 0.33OHM +-5% 3WS
	096T 29 1	SHRINK TUBE UL/CSA
	705T3724061056	0.56OHM/3W ASS'Y
R978	061T153M568 59	RST MOFR 0.56 OHM +-5% 3WS
	096T 29 1	SHRINK TUBE UL/CSA
	705T3724061470	47OHM/1W ASS'Y
R939	061T 20847058F GP	47 OHM 1W
	096T 29 6	SHRINK TUBE UL/CSA
	705T3724093001	37" LCD TV POWER ASS'Y
D932	093T 60258	FME-220B TO-220 SANKEN
D931	093T 60258	FME-220B TO-220 SANKEN
D910	093T 60258	FME-220B TO-220 SANKEN
	0M1T1730 8128 CR3	SCREW
	Q90T6321A01	HEAT SINK
	705T3724093002	37" LCD TV POWER ASS'Y
D924	093T 60258	FME-220B TO-220 SANKEN
D921	093T1506 2	FMW-2156
	0M1T1730 8128 CR3	SCREW
	Q90T0127 1	HEAT SINK
	705T3724093003	ASS'Y
	090T 426500	HEAT SINK
BD901	093T 50460 19	BRIDGE D25XB60 25A 600V
	0M1T1730 8128 CR3	SCREW
	705TQLK0C65001	A4 FOR ADAPTER ASS'Y
RV901	061T 46 12 GP	VARISTOR 680V TNR15G681K

NR901	061T 58050 WT GP	NTCR 5 OHM
C908	063T107K474 HS	X2 CAP 0.47UF K 275VAC
C909	063T107K474 HS	X2 CAP 0.47UF K 275VAC
C910	063T213J105GFA	MPF CAP
C911	063T213J105GFA	MPF CAP
C900	065T306K3312F2	Y1 330PF K 250VAC
C902	065T306K6812F2	Y1 680PF K 250VAC
C905	065T306K6812F2	Y1 680PF K 250VAC
C901	065T306M1022F2	Y1 1000PF M 250VAC
C903	065T306M1022F2	Y1 1000PF M 250VAC
C904	065T306M1022F2	Y1 1000PF M 250VAC
C969	065T306M4722F2	Y1 4700PF M 250VAC
C972	067G215L102 4N GP	KY25VB1000M-L 12.5*20
C962	067G215L102 4N GP	KY25VB1000M-L 12.5*20
C956	067G215L102 4N GP	KY25VB1000M-L 12.5*20
C960	067G215L102 4N GP	KY25VB1000M-L 12.5*20
C959	067G215L102 4N GP	KY25VB1000M-L 12.5*20
C963	067T215L471 4N	KY25VB470M-L10*16
C935	067T215L471 6N	KY35VB470M-L 10*20MM
C941	067T215L471 6N	KY35VB470M-L 10*20MM
FB904	071T 55 29	BEAD
FB903	071T 55 29	BEAD
D901	093T 5241T52T	1N5406
D904	093T1020 752T	UF4003PT
D916	093T1020 752T	UF4003PT
D906	093T1100 1052T	BA159GPT
D907	093T1100 1052T	BA159GPT
IC931	056T 192 16	FP130KR-LF
IC902	056T 379 57	NCP1377BDR2G S0IC-8
IC905	056T 379 61	IC LD7575PS SOP-8 LEADTREND
IC901	056T 538 6	FA5500AN
IC111	056T 643 14	NCP305
Q903	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q904	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q915	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q921	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q923	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q914	057T 417 6	PMBS3906/PHILIPS-SMT
Q910	057T 417 6	PMBS3906/PHILIPS-SMT
Q907	057T 763 3	AO4411L SO-8 BY AOS SMT
R953	061T0603102	CHIP 1K OHM 1/16W
R952	061T0603102	CHIP 1K OHM 1/16W
R951	061T0603102	CHIP 1K OHM 1/16W
R950	061T0603102	CHIP 1K OHM 1/16W
R908	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R945	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R906	061T0805100 2F	RST CHIPR 10 KOHM +-1% 1/8W
R919	061T0805100 2F	RST CHIPR 10 KOHM +-1% 1/8W
R930	061T0805101	RST CHIPR 100 OHM +-5% 1/8W
R921	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R923	061T0805102	RST CHIPR 1KOHM +-5% 1/4W

R924	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R966	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R979	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R986	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R988	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R993	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R995	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R998	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R977	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R944	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R927	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R914	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R974	061T0805104	RST CHIPR 100 KOHM +-5% 1/8W
R981	061T0805104	RST CHIPR 100 KOHM +-5% 1/8W
R947	061T0805150 1F	RST CHIPR 1.5 KOHM +-1% 1/8W
R946	061T0805150 2F	RST CHIPR 15 KOHM +-1% 1/8W
R938	061T0805180 2F	RST CHIPR 18 KOHM +-1% 1/8W
R942	061T0805202	RST CHIPR 2 KOHM +-5% 1/8W
R910	061T0805203	RST CHIPR 20 KOHM +-5% 1/8W
R929	061T0805203	RST CHIPR 20 KOHM +-5% 1/8W
R935	061T0805203	RST CHIPR 20 KOHM +-5% 1/8W
R949	061T0805203	RST CHIPR 20 KOHM +-5% 1/8W
R909	061T0805220	RST CHIPR 22 OHM +-5% 1/8W
R928	061T0805220	RST CHIPR 22 OHM +-5% 1/8W
R933	061T0805240 1F	RST CHIPR 2.4 KOHM +-1% 1/8W
R954	061T0805243	RST CHIPR 24 KOHM +-5% 1/8W
R967	061T0805274	RST CHIPR 270 KOHM +-5% 1/8W
R934	061T0805330 2F	RST CHIPR 33 KOHM +-1% 1/8W
R987	061T0805333	RST CHIPR 33 KOHM +-5% 1/8W
R114	061T0805334	RST CHIPR 330 KOHM +-5% 1/8W
R999	061T0805360 1F	RST CHIPR 3.6 KOHM +-1% 1/8W
R907	061T0805683	RST CHIPR 68 KOHM +-5% 1/8W
R990	061T0805753	RST CHIPR 75 KOHM +-5% 1/8W
F903	061T1206000	RST CHIPR 0 OHM +-5% 1/4W
R905	061T1206000	RST CHIPR 0 OHM +-5% 1/4W
ZD909	061T1206000	RST CHIPR 0 OHM +-5% 1/4W
J944	061T1206000 4	RST CHIPR 0 OHM +-5% 1/4W
R976	061T1206100	RST CHIPR 10 OHM +-5% 1/4W
J916	061T1206101	RST CHIPR 100 OHM +-5% 1/4W
R955	061T1206102	RST CHIPR 1 KOHM +-5% 1/4W
R922	061T1206103	RST CHIPR 10 KOHM +-5% 1/4W
R965	061T1206103	RST CHIPR 10 KOHM +-5% 1/4W
R985	061T1206103	RST CHIPR 10 KOHM +-5% 1/4W
R920	061T1206104	RST CHIPR 100 KOHM +-5% 1/4W
R992	061T1206202	RST CHIPR 2 KOHM +-5% 1/4W
R991	061T1206202	RST CHIPR 2 KOHM +-5% 1/4W
R973	061T1206229	RST CHIPR 2.2 OHM +-5% 1/4W
R902	061T1206334	RST CHIPR 330 KOHM +-5% 1/4W
R901	061T1206334	RST CHIPR 330 KOHM +-5% 1/4W
R900	061T1206334	RST CHIPR 330 KOHM +-5% 1/4W
R917	061T1206334	RST CHIPR 330 KOHM +-5% 1/4W

R916	061T1206334	RST CHIPR 330 KOHM +-5% 1/4W
R915	061T1206334	RST CHIPR 330 KOHM +-5% 1/4W
R960	061T1206471	RST CHIPR 470 OHM +-5% 1/4W
R113	061T1206475	RST CHIPR 4.7 MOHM +-5% 1/4W
R112	061T1206475	RST CHIPR 4.7 MOHM +-5% 1/4W
R111	061T1206475	RST CHIPR 4.7 MOHM +-5% 1/4W
R904	061T1206624	RST CHIPR 620 KOHM +-5% 1/4W
R903	061T1206624	RST CHIPR 620 KOHM +-5% 1/4W
C970	065T0603104 32	CHIP 0.1UF 50V X7R
C923	065T0805101 31	CHIP 100PF 50V NPD 0805
C942	065T0805102 31	1000PF 50V NPO
C940	065T0805103 32	10NF/50V/0805/X7R
C915	065T0805103 32	10NF/50V/0805/X7R
C973	065T0805104 32	CHIP 0.1UF 50V X7R
C968	065T0805104 32	CHIP 0.1UF 50V X7R
C966	065T0805104 32	CHIP 0.1UF 50V X7R
C965	065T0805104 32	CHIP 0.1UF 50V X7R
C964	065T0805104 32	CHIP 0.1UF 50V X7R
C961	065T0805104 32	CHIP 0.1UF 50V X7R
C954	065T0805104 32	CHIP 0.1UF 50V X7R
C947	065T0805104 32	CHIP 0.1UF 50V X7R
C946	065T0805104 32	CHIP 0.1UF 50V X7R
C112	065T0805104 32	CHIP 0.1UF 50V X7R
C912	065T0805104 32	CHIP 0.1UF 50V X7R
C914	065T0805104 32	CHIP 0.1UF 50V X7R
C919	065T0805104 32	CHIP 0.1UF 50V X7R
C925	065T0805104 32	CHIP 0.1UF 50V X7R
C936	065T0805104 32	CHIP 0.1UF 50V X7R
C943	065T0805104 32	CHIP 0.1UF 50V X7R
C944	065T0805104 32	CHIP 0.1UF 50V X7R
C945	065T0805104 32	CHIP 0.1UF 50V X7R
C967	065T0805105 22	CHIP 1UF 25V X7R 0805
C927	065T0805152 22	CHIP 1500PF 25V X7R 0805
C916	065T0805221 31	220PF 50V NPO
C952	065T0805221 32	CHIP 220PF 50V X7R 0805
C918	065T0805331 32	CHIP 330PF 50V X7R 0805
C953	065T0805471 22	CER 470PF K 25V X7R
C926	065T0805471 31	CHIP 470PF 50V NPO
C917	065T0805474 22	CHIP 0.47UF 25V X7R
D920	093T 64 44 S	LL4148WP
D918	093T 64 44 S	LL4148WP
D917	093T 64 44 S	LL4148WP
D915	093T 64 44 S	LL4148WP
D913	093T 64 44 S	LL4148WP
D911	093T 64 44 S	LL4148WP
D908	093T 64 44 S	LL4148WP
D903	093T 64 44 S	LL4148WP
ZD906	093T 39S 15 T	RLZ15B
ZD922	093T 39S 25 T	RLZ5.1B LLDS
ZD920	093T 39S 38 T	PTZ 9.1B
ZD921	093T 39S 40 T	RLZ 13B LLDS

ZD905	093T 39S 41 T	RLZ24B LLDS
ZD910	093T 39S 44 T	RLZ18B
ZD901	093T 39S 44 T	RLZ18B
L903	006T 31 4	1.7MM RIVET
BD901	006T 31 4	1.7MM RIVET
L907	006T 31 4	1.7MM RIVET
T901	006T 31 4	1.7MM RIVET
CN901	006T 31500	EYELET
D901	006T 31500	EYELET
L905	006T 31500	EYELET
C907	006T 31500	EYELET
C906	006T 31500	EYELET
RV901	006T 31502	1.5MM RIVET
L901	006T 31502	1.5MM RIVET
NR901	006T 31502	1.5MM RIVET
C910	006T 31502	1.5MM RIVET
C911	006T 31502	1.5MM RIVET
L902	006T 31502	1.5MM RIVET
L911	006T 31502	1.5MM RIVET
T903	006T 31502	1.5MM RIVET
IC911	056T 158 12	KIA431A-AT/P
IC921	056T 158 12	KIA431A-AT/P
SCR901	057T 566 1	2N5060RLRAG TO-92 BY ON
R932	061T 17210252T	RST CFR 1KOHM +-5% 1/4W
R997	061T 17247152T	470OHM 5% 1/4W
R994	061T 60215252T	CFR 1.5K OHM+-5% 1/6W
R926	061T 60220352T	CFR 20K OHM+-5% 1/6W
R911	061T 60233152T	330 OHM +-5% 1/6W
R941	061T 60247152T	470OHM +-5% 1/6W
R983	061T175L47052T	47OHM +-5% 1/2W
R984	061T175L47052T	47OHM +-5% 1/2W
C938	065T 1K102 5T6921	1000PF/1KV
C950	065T 1K152 1T	1.5NF/1KV Z5F+-10%
C922	065T 1K222 2T6921	0.0022UF 1KV +-10%
C930	065T 1K222 2T6921	0.0022UF 1KV +-10%
C111	065T 1M103 3T6921	0.01UF 20% 1000V Y5V
C974	065T 1M103 3T6921	0.01UF 20% 1000V Y5V
C921	065T 1M103 3T6921	0.01UF 20% 1000V Y5V
C929	065T 1M103 3T6921	0.01UF 20% 1000V Y5V
C985	065T 1M103 3T6921	0.01UF 20% 1000V Y5V
C957	065T517K102 5T	1000PF 10% Y5P 500V
C958	065T517K102 5T	1000PF 10% Y5P 500V
C951	067T 2152207NT	KY50VB22M-TP5 5*11
C913	067T 2152207NT	KY50VB22M-TP5 5*11
C920	067T 2152207NT	KY50VB22M-TP5 5*11
C924	067T 2154707NT	47UF 50V NCC 5*11MM
FB905	071T 55 29	BEAD
FB902	071T 55 29	BEAD
FB901	071T 55 29	BEAD
F902	084T 55 2	FUSE
F901	084T 55 4	FUSE 382-5A 250V WICKMANN

ZD903	093T 3917052T	MTZJT-72 27B
ZD904	093T 3917052T	MTZJT-72 27B
D923	093T 64 1152T	1N4148
D900	093T1100 1052T	BA159GPT
D111	093T1100 1052T	BA159GPT
J926	095T 90 23	JUMP WIRE
J925	095T 90 23	JUMP WIRE
J924	095T 90 23	JUMP WIRE
J923	095T 90 23	JUMP WIRE
J922	095T 90 23	JUMP WIRE
J921	095T 90 23	JUMP WIRE
J920	095T 90 23	JUMP WIRE
J919	095T 90 23	JUMP WIRE
J915	095T 90 23	JUMP WIRE
J914	095T 90 23	JUMP WIRE
J913	095T 90 23	JUMP WIRE
J912	095T 90 23	JUMP WIRE
J911	095T 90 23	JUMP WIRE
J910	095T 90 23	JUMP WIRE
J908	095T 90 23	JUMP WIRE
J907	095T 90 23	JUMP WIRE
J906	095T 90 23	JUMP WIRE
J905	095T 90 23	JUMP WIRE
J904	095T 90 23	JUMP WIRE
J903	095T 90 23	JUMP WIRE
J902	095T 90 23	JUMP WIRE
J947	095T 90 23	JUMP WIRE
J946	095T 90 23	JUMP WIRE
R989	095T 90 23	JUMP WIRE
R943	095T 90 23	JUMP WIRE
J945	095T 90 23	JUMP WIRE
J943	095T 90 23	JUMP WIRE
J942	095T 90 23	JUMP WIRE
J941	095T 90 23	JUMP WIRE
J940	095T 90 23	JUMP WIRE
J939	095T 90 23	JUMP WIRE
J938	095T 90 23	JUMP WIRE
J937	095T 90 23	JUMP WIRE
J936	095T 90 23	JUMP WIRE
J935	095T 90 23	JUMP WIRE
J933	095T 90 23	JUMP WIRE
J932	095T 90 23	JUMP WIRE
J931	095T 90 23	JUMP WIRE
J930	095T 90 23	JUMP WIRE
J929	095T 90 23	JUMP WIRE
J928	095T 90 23	JUMP WIRE
J927	095T 90 23	JUMP WIRE
PCB	715T1852 3	POWER BOARD PCB
	CBPF6T1QA2	MAIN BOARD
CN500	033T3278 2 H	WAFER 2P RIGHT ANGLE
CN501	033T3278 3 H	WAFER 3P RIGHT ANGLE

CN200	033T3278 12	12P PLUG B12B-XHA/JS B12B-XHA/
CN502	033T3802 5H	WAFER 5P RIGHT ANELE PI
CN203	033T3802 8H	WAFER 8P RIGHT ANGLE PITCH 2.0
CN404	033T8017 2	PIN HEADER 2P 2.0MM
CN201	033T801736A H	PIN HEADER 36P 2.0MM
CN300	033T802724D H	24PIN
	040T 457624 1B	CPU LABEL
	040T 45762412B	CBPC LABEL
U401	056T1133 77	EN29F040A-70JCP
R718	061T152M100 64	10OHM 5% 2W
R716	061T152M229 64	2.2 OHM 2W 5% MOF
R717	061T152M479 64	4.7 OHM +-5% 2W
R719	061T152M479 64	4.7 OHM +-5% 2W
R524	061T153M109 59	MOFR 1 OHM +-5% 3W
R525	061T153M109 59	MOFR 1 OHM +-5% 3W
C548	067T215C1024KV	EC 105°C CAP 1000UF M 25V
L701	073T 253137 ER	CHOKO COIL BY EROCORE SCB-03
L705	073T 253137 ER	CHOKO COIL BY EROCORE SCB-03
L500	073T 253158 H	CHOKO COIL 22UH+/-25%
L504	073T 253158 H	CHOKO COIL 22UH+/-25%
L506	073T 253158 H	CHOKO COIL 22UH+/-25%
L505	073T 253158 H	CHOKO COIL 22UH+/-25%
P201	088T 30214K	PHONE JACK
P200	088T 35315F HA	D-SU13 15PIN
U302	090T 372 2	HEAT SINK
U503	090T6068 2	HEAT SINK
X300	093T 2253B J	14.31818MHZ/85C
X500	093T 2258B J	24.576MHZ/20PF/49US
X401	093T 2279B	CRYSTAL 28.322MHZ 49U/S
X400	093T 2281B	10.000MHZ/30PF/49US
U500	056T 133 30AAC	AZ1117H-ADJ-E1
U709	056T 133 33AAC	IC AZ1117-1.8-E1
U711	056T 133 33AAC	IC AZ1117-1.8-E1
U503	056T 535 8	MAX9704
U302	056T 562600	IC SVP-EX52-LF TRIDENT
U712	056T 563 7	AIC1084-33PM TO-263 AIC
U703	056T 563 25	AIC1084-33PE
U710	056T 563 31	AZ1117D-1.8E1 TO-252
U708	056T 563 31	AZ1117D-1.8E1 TO-252
U700	056T 563 34	A1C1084-18PM
U704	056T 563 44	AME8815BEGT 250Z SOP-223
U706	056T 563 44	AME8815BEGT 250Z SOP-223
U701	056T 585 9	IC AP1117E50LA ANACHIP
U707	056T 585 4A	AP1117E33LA
U705	056T 585 4A	AP1117E33LA
U702	056T 585 4A	AP1117E33LA
U407	056T 586 6	IC SII9023CTU TQFP-144 SILICON IMAGE
U202	056T 614 1	IC 74HC4052D PHILIPS
U301	056T 615 9 1	IC EM6A9320BI-5MG 0.11UM"M" FBGA-144
U300	056T 615104	LY61256RL-12E TSOP-1
U504	056T 616 3	PT2308S SO-8 PTC

U501	056T 623 11	SAA7117AE/V2/G BGA-156
U502	056T 628 4	NJW1147M-PF
U206	056T 634 2 1	PI5V330SSQE PERICOMQSOP-16
U408	056T 638601	CS4344-CZZ
U406	056T 662 4	RCLAMP0514M.TBT
U410	056T 662 4	RCLAMP0514M.TBT
U402	056T1125182	IC M30300SAGP RENESAS
U200	056T1133 34	M24C02-WMN6TP
U405	056T1133 34	M24C02-WMN6TP
U403	056T1133 78	24LC64 ISNG SOIC(150MIL)
U201	056T4LVC 14 P	74LVC14ADT
U303	056T566N600	NDC7002N SOT-6 FAIRCHILD
Q206	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q709	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q708	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q706	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q705	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q704	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q502	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q500	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q404	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q403	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q301	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q300	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q204	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q202	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q201	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q200	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q501	057T 417 6	PMBS3906/PHILIPS-SMT
Q402	057T 417 6	PMBS3906/PHILIPS-SMT
Q302	057T 417 6	PMBS3906/PHILIPS-SMT
Q205	057T 417 6	PMBS3906/PHILIPS-SMT
Q203	057T 417 6	PMBS3906/PHILIPS-SMT
Q400	057T 600 54	FET BSN20 SOT-23 PHILIPS
Q405	057T 600 54	FET BSN20 SOT-23 PHILIPS
U409	057T 763 15	FDC6301N SSOT-6
Q707	057T 763 3B	AM9435P.T1-PF SO-8
Q703	057T 763 3B	AM9435P.T1-PF SO-8
Q702	057T 763 3B	AM9435P.T1-PF SO-8
Q701	057T 763 3B	AM9435P.T1-PF SO-8
Q700	057T 763 3B	AM9435P.T1-PF SO-8
RN300	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RN311	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RN312	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RN313	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RP400	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RP401	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RP402	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RP403	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RP404	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W
RP405	061T 125101 8	RST CHIP AR 8P4R 100 OHM +-5% 1/16W

RN308	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN307	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN306	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN305	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN304	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN303	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN302	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN301	061T 125220 8	CHIP ARRAY 220HM 1/16W 8P4R
RN503	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN502	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN501	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN405	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN404	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN403	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN402	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN401	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RN400	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP406	061T 125470 8	RST CHIP AR 8P4R 47 OHM +-5% 1/16W
R502	061T0603000	CHIP 0OHM 1/16W
R503	061T0603000	CHIP 0OHM 1/16W
R504	061T0603000	CHIP 0OHM 1/16W
R505	061T0603000	CHIP 0OHM 1/16W
R511	061T0603000	CHIP 0OHM 1/16W
R536	061T0603000	CHIP 0OHM 1/16W
R700	061T0603000	CHIP 0OHM 1/16W
R780	061T0603000	CHIP 0OHM 1/16W
R501	061T0603000	CHIP 0OHM 1/16W
R500	061T0603000	CHIP 0OHM 1/16W
R423	061T0603000	CHIP 0OHM 1/16W
R4004	061T0603000	CHIP 0OHM 1/16W
R311	061T0603000	CHIP 0OHM 1/16W
R310	061T0603000	CHIP 0OHM 1/16W
R300	061T0603000	CHIP 0OHM 1/16W
R219	061T0603000	CHIP 0OHM 1/16W
R200	061T0603000	CHIP 0OHM 1/16W
R335	061T0603100	CHIP 100OHM 1/16W
R441	061T0603101	CHIP 100OHM 1/16W
R442	061T0603101	CHIP 100OHM 1/16W
R443	061T0603101	CHIP 100OHM 1/16W
R445	061T0603101	CHIP 100OHM 1/16W
R447	061T0603101	CHIP 100OHM 1/16W
R460	061T0603101	CHIP 100OHM 1/16W
R462	061T0603101	CHIP 100OHM 1/16W
R464	061T0603101	CHIP 100OHM 1/16W
R470	061T0603101	CHIP 100OHM 1/16W
R471	061T0603101	CHIP 100OHM 1/16W
R472	061T0603101	CHIP 100OHM 1/16W
R440	061T0603101	CHIP 100OHM 1/16W
R431	061T0603101	CHIP 100OHM 1/16W
R422	061T0603101	CHIP 100OHM 1/16W
R421	061T0603101	CHIP 100OHM 1/16W

R410	061T0603101	CHIP 100OHM 1/16W
R408	061T0603101	CHIP 100OHM 1/16W
R405	061T0603101	CHIP 100OHM 1/16W
R4007	061T0603101	CHIP 100OHM 1/16W
R4008	061T0603101	CHIP 100OHM 1/16W
R4020	061T0603101	CHIP 100OHM 1/16W
R4021	061T0603101	CHIP 100OHM 1/16W
R544	061T0603101	CHIP 100OHM 1/16W
R543	061T0603101	CHIP 100OHM 1/16W
R541	061T0603101	CHIP 100OHM 1/16W
R540	061T0603101	CHIP 100OHM 1/16W
R539	061T0603101	CHIP 100OHM 1/16W
R537	061T0603101	CHIP 100OHM 1/16W
R534	061T0603101	CHIP 100OHM 1/16W
R497	061T0603101	CHIP 100OHM 1/16W
R494	061T0603101	CHIP 100OHM 1/16W
R485	061T0603101	CHIP 100OHM 1/16W
R483	061T0603101	CHIP 100OHM 1/16W
R475	061T0603101	CHIP 100OHM 1/16W
R223	061T0603102	CHIP 1K OHM 1/16W
R307	061T0603102	CHIP 1K OHM 1/16W
R308	061T0603102	CHIP 1K OHM 1/16W
R309	061T0603102	CHIP 1K OHM 1/16W
R340	061T0603102	CHIP 1K OHM 1/16W
R346	061T0603102	CHIP 1K OHM 1/16W
R484	061T0603102	CHIP 1K OHM 1/16W
R498	061T0603102	CHIP 1K OHM 1/16W
R521	061T0603102	CHIP 1K OHM 1/16W
R533	061T0603102	CHIP 1K OHM 1/16W
R538	061T0603102	CHIP 1K OHM 1/16W
R476	061T0603103	CHIP 10KOHM 1/16W
R474	061T0603103	CHIP 10KOHM 1/16W
R430	061T0603103	CHIP 10KOHM 1/16W
R4027	061T0603103	CHIP 10KOHM 1/16W
R4026	061T0603103	CHIP 10KOHM 1/16W
R4025	061T0603103	CHIP 10KOHM 1/16W
R4024	061T0603103	CHIP 10KOHM 1/16W
R4023	061T0603103	CHIP 10KOHM 1/16W
R4022	061T0603103	CHIP 10KOHM 1/16W
R341	061T0603103	CHIP 10KOHM 1/16W
R336	061T0603103	CHIP 10KOHM 1/16W
R332	061T0603103	CHIP 10KOHM 1/16W
R711	061T0603103	CHIP 10KOHM 1/16W
R558	061T0603103	CHIP 10KOHM 1/16W
R555	061T0603103	CHIP 10KOHM 1/16W
R554	061T0603103	CHIP 10KOHM 1/16W
R546	061T0603103	CHIP 10KOHM 1/16W
R527	061T0603103	CHIP 10KOHM 1/16W
R477	061T0603103	CHIP 10KOHM 1/16W
R231	061T0603104	CHIP 100K OHM 1/16W
R548	061T0603104	CHIP 100K OHM 1/16W

R712	061T0603104	CHIP 100K OHM 1/16W
R228	061T0603105	CHIP 1MOHM 1/16W
R4019	061T0603105	CHIP 1MOHM 1/16W
R547	061T0603120 0F	RST CHIPR 120 OHM +-1% 1/10W
R246	061T0603121	RST CHIPR 120 OHM +-5% 1/10W
R333	061T0603122	RST CHIPR 1.2 KOHM +-5% 1/10W
R342	061T0603122	RST CHIPR 1.2 KOHM +-5% 1/10W
R204	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R221	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R243	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R508	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R303	061T0603150	RST CHIPR 15 OHM +-5% 1/10W
R304	061T0603150	RST CHIPR 15 OHM +-5% 1/10W
R305	061T0603150	RST CHIPR 15 OHM +-5% 1/10W
R306	061T0603150	RST CHIPR 15 OHM +-5% 1/10W
R209	061T0603151	RST CHIPR 150 OHM +-5% 1/10W
R226	061T0603151	RST CHIPR 150 OHM +-5% 1/10W
R512	061T0603151	RST CHIPR 150 OHM +-5% 1/10W
R314	061T0603152	CHIP 1.5KOHM 1/16W
R4017	061T0603181	RST CHIPR 180 OHM +-5% 1/10W
R224	061T0603184	RST CHIPR 180 KOHM +-5% 1/10W
R229	061T0603184	RST CHIPR 180 KOHM +-5% 1/10W
R492	061T0603202	RST CHIPR 2 KOHM +-5% 1/10W
R203	061T0603220	CHIP 22OHM 1/16W
R210	061T0603220	CHIP 22OHM 1/16W
R211	061T0603220	CHIP 22OHM 1/16W
R214	061T0603220	CHIP 22OHM 1/16W
R216	061T0603220	CHIP 22OHM 1/16W
R220	061T0603220	CHIP 22OHM 1/16W
R245	061T0603220	CHIP 22OHM 1/16W
R424	061T0603220	CHIP 22OHM 1/16W
R425	061T0603220	CHIP 22OHM 1/16W
R426	061T0603220	CHIP 22OHM 1/16W
R428	061T0603220	CHIP 22OHM 1/16W
R429	061T0603220	CHIP 22OHM 1/16W
R434	061T0603220	CHIP 22OHM 1/16W
R507	061T0603220	CHIP 22OHM 1/16W
R473	061T0603221	CHIP 220OHM 1/16W
R345	061T0603222	CHIP 2.2K OHM 1/16W
R715	061T0603223	CHIP 22KOHM 1/16W
R709	061T0603223	CHIP 22KOHM 1/16W
R707	061T0603223	CHIP 22KOHM 1/16W
R706	061T0603223	CHIP 22KOHM 1/16W
R513	061T0603223	CHIP 22KOHM 1/16W
R320	061T0603223	CHIP 22KOHM 1/16W
R315	061T0603223	CHIP 22KOHM 1/16W
R244	061T0603223	CHIP 22KOHM 1/16W
R225	061T0603223	CHIP 22KOHM 1/16W
R208	061T0603223	CHIP 22KOHM 1/16W
R420	061T0603330	CHIP 33OHM 1/16W
R419	061T0603330	CHIP 33OHM 1/16W

R415	061T0603330	CHIP 33OHM 1/16W
R414	061T0603330	CHIP 33OHM 1/16W
R4016	061T0603330	CHIP 33OHM 1/16W
R4009	061T0603330	CHIP 33OHM 1/16W
R559	061T0603331	RST CHIPR 330 OHM +-5% 1/10W
R560	061T0603331	RST CHIPR 330 OHM +-5% 1/10W
R550	061T0603392	CHIP 3.9KOHM 1/16W
R551	061T0603392	CHIP 3.9KOHM 1/16W
R552	061T0603392	CHIP 3.9KOHM 1/16W
R553	061T0603392	CHIP 3.9KOHM 1/16W
R556	061T0603392	CHIP 3.9KOHM 1/16W
R557	061T0603392	CHIP 3.9KOHM 1/16W
R531	061T0603432	RST CHIPR 4.3 KOHM +-5% 1/10W
R535	061T0603432	RST CHIPR 4.3 KOHM +-5% 1/10W
R499	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R4006	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R4005	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R4001	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R316	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R321	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R339	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R344	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R331	061T0603472	CHIP 4.7KOHM 1/16W
R330	061T0603472	CHIP 4.7KOHM 1/16W
R437	061T0603472	CHIP 4.7KOHM 1/16W
R438	061T0603472	CHIP 4.7KOHM 1/16W
R4028	061T0603472	CHIP 4.7KOHM 1/16W
R4029	061T0603472	CHIP 4.7KOHM 1/16W
R403	061T0603472	CHIP 4.7KOHM 1/16W
R4030	061T0603472	CHIP 4.7KOHM 1/16W
R404	061T0603472	CHIP 4.7KOHM 1/16W
R412	061T0603472	CHIP 4.7KOHM 1/16W
R417	061T0603472	CHIP 4.7KOHM 1/16W
R418	061T0603472	CHIP 4.7KOHM 1/16W
R427	061T0603472	CHIP 4.7KOHM 1/16W
R433	061T0603472	CHIP 4.7KOHM 1/16W
R435	061T0603472	CHIP 4.7KOHM 1/16W
R436	061T0603472	CHIP 4.7KOHM 1/16W
R532	061T0603472	CHIP 4.7KOHM 1/16W
R522	061T0603472	CHIP 4.7KOHM 1/16W
R518	061T0603472	CHIP 4.7KOHM 1/16W
R495	061T0603472	CHIP 4.7KOHM 1/16W
R491	061T0603472	CHIP 4.7KOHM 1/16W
R490	061T0603472	CHIP 4.7KOHM 1/16W
R486	061T0603472	CHIP 4.7KOHM 1/16W
R402	061T0603472	CHIP 4.7KOHM 1/16W
R439	061T0603472	CHIP 4.7KOHM 1/16W
R444	061T0603472	CHIP 4.7KOHM 1/16W
R448	061T0603472	CHIP 4.7KOHM 1/16W
R449	061T0603472	CHIP 4.7KOHM 1/16W
R450	061T0603472	CHIP 4.7KOHM 1/16W

R451	061T0603472	CHIP 4.7KOHM 1/16W
R453	061T0603472	CHIP 4.7KOHM 1/16W
R454	061T0603472	CHIP 4.7KOHM 1/16W
R457	061T0603472	CHIP 4.7KOHM 1/16W
R458	061T0603472	CHIP 4.7KOHM 1/16W
R468	061T0603472	CHIP 4.7KOHM 1/16W
R469	061T0603472	CHIP 4.7KOHM 1/16W
R479	061T0603472	CHIP 4.7KOHM 1/16W
R480	061T0603472	CHIP 4.7KOHM 1/16W
R481	061T0603472	CHIP 4.7KOHM 1/16W
R482	061T0603472	CHIP 4.7KOHM 1/16W
R334	061T0603472	CHIP 4.7KOHM 1/16W
R4013	061T0603472	CHIP 4.7KOHM 1/16W
R4018	061T0603472	CHIP 4.7KOHM 1/16W
R218	061T0603472	CHIP 4.7KOHM 1/16W
R217	061T0603472	CHIP 4.7KOHM 1/16W
R713	061T0603473	CHIP 47KOHM 1/16W
R703	061T0603473	CHIP 47KOHM 1/16W
R702	061T0603473	CHIP 47KOHM 1/16W
R701	061T0603473	CHIP 47KOHM 1/16W
R496	061T0603473	CHIP 47KOHM 1/16W
R432	061T0603473	CHIP 47KOHM 1/16W
R232	061T0603473	CHIP 47KOHM 1/16W
R230	061T0603473	CHIP 47KOHM 1/16W
R4014	061T0603474	RST CHIPR 470 KOHM +-5% 1/10W
R4015	061T0603474	RST CHIPR 470 KOHM +-5% 1/10W
R301	061T0603510	RST CHIPR 51 OHM +-5% 1/10W
R302	061T0603510	RST CHIPR 51 OHM +-5% 1/10W
R542	061T0603512	RST CHIPR 5.1 KOHM +-5% 1/10W
R337	061T0603680	RST CHIPR 68 OHM +-5% 1/10W
R338	061T0603680	RST CHIPR 68 OHM +-5% 1/10W
R516	061T0603680	RST CHIPR 68 OHM +-5% 1/10W
R517	061T0603680	RST CHIPR 68 OHM +-5% 1/10W
R205	061T0603750	75OHM
R206	061T0603750	75OHM
R207	061T0603750	75OHM
R506	061T0603750	75OHM
R509	061T0603750	75OHM
R510	061T0603750	75OHM
R514	061T0603750	75OHM
R317	061T0603750 9F	CHIP 75OHM 1/16W 1%
R318	061T0603750 9F	CHIP 75OHM 1/16W 1%
R319	061T0603750 9F	CHIP 75OHM 1/16W 1%
R704	061T0603752	RST CHIPR 7.5 KOHM +-5% 1/10W
R705	061T0603752	RST CHIPR 7.5 KOHM +-5% 1/10W
R545	061T0603820 1F	RST CHIPR 8.2 KOHM +-1% 1/10W
R478	061T0603822	RST CHIPR 8.2 KOHM +-5% 1/10W
R714	061T0603822	RST CHIPR 8.2 KOHM +-5% 1/10W
R526	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R528	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R529	061T0805000	RST CHIPR 0 OHM +-5% 1/8W

L709	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
L711	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R708	061T0805302	RST CHIPR 3 KOHM +-5% 1/8W
R710	061T0805302	RST CHIPR 3 KOHM +-5% 1/8W
R549	061T1206620 0F	RST CHIPR 620 OHM +-1% 1/4W
C576	065T0603101 31	CHIP 100PF 50V NPO
C565	065T0603101 31	CHIP 100PF 50V NPO
C409	065T0603101 31	CHIP 100PF 50V NPO
C406	065T0603101 31	CHIP 100PF 50V NPO
C405	065T0603101 31	CHIP 100PF 50V NPO
C201	065T0603101 32	CHIP 100PF 50V X7R
C202	065T0603101 32	CHIP 100PF 50V X7R
C203	065T0603101 32	CHIP 100PF 50V X7R
C208	065T0603101 32	CHIP 100PF 50V X7R
C216	065T0603101 32	CHIP 100PF 50V X7R
C220	065T0603101 32	CHIP 100PF 50V X7R
C200	065T0603102 32	CHIP 1000PF 50V X7R
C224	065T0603102 32	CHIP 1000PF 50V X7R
C400	065T0603102 32	CHIP 1000PF 50V X7R
C500	065T0603102 32	CHIP 1000PF 50V X7R
C596	065T0603102 32	CHIP 1000PF 50V X7R
C790	065T0603102 32	CHIP 1000PF 50V X7R
C457	065T0603103 12	CHIP 0.01UF 16V X7R
C428	065T0603103 32	CHIP 0.01UF 50V X7R
C427	065T0603103 32	CHIP 0.01UF 50V X7R
C426	065T0603103 32	CHIP 0.01UF 50V X7R
C425	065T0603103 32	CHIP 0.01UF 50V X7R
C424	065T0603103 32	CHIP 0.01UF 50V X7R
C582	065T0603103 32	CHIP 0.01UF 50V X7R
C588	065T0603103 32	CHIP 0.01UF 50V X7R
C456	065T0603103 32	CHIP 0.01UF 50V X7R
C410	065T0603103 32	CHIP 0.01UF 50V X7R
C402	065T0603103 32	CHIP 0.01UF 50V X7R
C315	065T0603103 32	CHIP 0.01UF 50V X7R
C310	065T0603103 32	CHIP 0.01UF 50V X7R
C309	065T0603103 32	CHIP 0.01UF 50V X7R
C308	065T0603103 32	CHIP 0.01UF 50V X7R
C307	065T0603103 32	CHIP 0.01UF 50V X7R
C306	065T0603103 32	CHIP 0.01UF 50V X7R
C301	065T0603103 32	CHIP 0.01UF 50V X7R
C429	065T0603103 32	CHIP 0.01UF 50V X7R
C465	065T0603103 32	CHIP 0.01UF 50V X7R
C466	065T0603103 32	CHIP 0.01UF 50V X7R
C467	065T0603103 32	CHIP 0.01UF 50V X7R
C472	065T0603103 32	CHIP 0.01UF 50V X7R
C475	065T0603103 32	CHIP 0.01UF 50V X7R
C477	065T0603103 32	CHIP 0.01UF 50V X7R
C489	065T0603103 32	CHIP 0.01UF 50V X7R
C490	065T0603103 32	CHIP 0.01UF 50V X7R
C491	065T0603103 32	CHIP 0.01UF 50V X7R
C492	065T0603103 32	CHIP 0.01UF 50V X7R

C493	065T0603103 32	CHIP 0.01UF 50V X7R
C494	065T0603103 32	CHIP 0.01UF 50V X7R
C495	065T0603103 32	CHIP 0.01UF 50V X7R
C568	065T0603103 32	CHIP 0.01UF 50V X7R
C572	065T0603103 32	CHIP 0.01UF 50V X7R
C430	065T0603103 32	CHIP 0.01UF 50V X7R
C431	065T0603103 32	CHIP 0.01UF 50V X7R
C442	065T0603103 32	CHIP 0.01UF 50V X7R
C443	065T0603103 32	CHIP 0.01UF 50V X7R
C444	065T0603103 32	CHIP 0.01UF 50V X7R
C445	065T0603103 32	CHIP 0.01UF 50V X7R
C446	065T0603103 32	CHIP 0.01UF 50V X7R
C447	065T0603103 32	CHIP 0.01UF 50V X7R
C448	065T0603103 32	CHIP 0.01UF 50V X7R
C449	065T0603103 32	CHIP 0.01UF 50V X7R
C454	065T0603103 32	CHIP 0.01UF 50V X7R
C455	065T0603103 32	CHIP 0.01UF 50V X7R
C461	065T0603103 32	CHIP 0.01UF 50V X7R
C462	065T0603103 32	CHIP 0.01UF 50V X7R
C464	065T0603103 32	CHIP 0.01UF 50V X7R
C513	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C342	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C339	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C318	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C223	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C222	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C221	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C214	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C213	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C211	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C210	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C207	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C206	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C747	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C738	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C722	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C204	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C232	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C590	065T0603104 22	CHIP 0.1UF 25V
C395	065T0603104 32	CHIP 0.1UF 50V X7R
C396	065T0603104 32	CHIP 0.1UF 50V X7R
C398	065T0603104 32	CHIP 0.1UF 50V X7R
C4001	065T0603104 32	CHIP 0.1UF 50V X7R
C407	065T0603104 32	CHIP 0.1UF 50V X7R
C417	065T0603104 32	CHIP 0.1UF 50V X7R
C420	065T0603104 32	CHIP 0.1UF 50V X7R
C421	065T0603104 32	CHIP 0.1UF 50V X7R
C422	065T0603104 32	CHIP 0.1UF 50V X7R
C423	065T0603104 32	CHIP 0.1UF 50V X7R
C436	065T0603104 32	CHIP 0.1UF 50V X7R
C438	065T0603104 32	CHIP 0.1UF 50V X7R

C439	065T0603104 32	CHIP 0.1UF 50V X7R
C440	065T0603104 32	CHIP 0.1UF 50V X7R
C441	065T0603104 32	CHIP 0.1UF 50V X7R
C451	065T0603104 32	CHIP 0.1UF 50V X7R
C452	065T0603104 32	CHIP 0.1UF 50V X7R
C453	065T0603104 32	CHIP 0.1UF 50V X7R
C459	065T0603104 32	CHIP 0.1UF 50V X7R
C460	065T0603104 32	CHIP 0.1UF 50V X7R
C468	065T0603104 32	CHIP 0.1UF 50V X7R
C373	065T0603104 32	CHIP 0.1UF 50V X7R
C374	065T0603104 32	CHIP 0.1UF 50V X7R
C375	065T0603104 32	CHIP 0.1UF 50V X7R
C376	065T0603104 32	CHIP 0.1UF 50V X7R
C377	065T0603104 32	CHIP 0.1UF 50V X7R
C378	065T0603104 32	CHIP 0.1UF 50V X7R
C379	065T0603104 32	CHIP 0.1UF 50V X7R
C380	065T0603104 32	CHIP 0.1UF 50V X7R
C381	065T0603104 32	CHIP 0.1UF 50V X7R
C382	065T0603104 32	CHIP 0.1UF 50V X7R
C383	065T0603104 32	CHIP 0.1UF 50V X7R
C384	065T0603104 32	CHIP 0.1UF 50V X7R
C385	065T0603104 32	CHIP 0.1UF 50V X7R
C386	065T0603104 32	CHIP 0.1UF 50V X7R
C387	065T0603104 32	CHIP 0.1UF 50V X7R
C388	065T0603104 32	CHIP 0.1UF 50V X7R
C389	065T0603104 32	CHIP 0.1UF 50V X7R
C390	065T0603104 32	CHIP 0.1UF 50V X7R
C391	065T0603104 32	CHIP 0.1UF 50V X7R
C392	065T0603104 32	CHIP 0.1UF 50V X7R
C393	065T0603104 32	CHIP 0.1UF 50V X7R
C394	065T0603104 32	CHIP 0.1UF 50V X7R
C564	065T0603104 32	CHIP 0.1UF 50V X7R
C569	065T0603104 32	CHIP 0.1UF 50V X7R
C585	065T0603104 32	CHIP 0.1UF 50V X7R
C593	065T0603104 32	CHIP 0.1UF 50V X7R
C594	065T0603104 32	CHIP 0.1UF 50V X7R
C701	065T0603104 32	CHIP 0.1UF 50V X7R
C702	065T0603104 32	CHIP 0.1UF 50V X7R
C703	065T0603104 32	CHIP 0.1UF 50V X7R
C704	065T0603104 32	CHIP 0.1UF 50V X7R
C712	065T0603104 32	CHIP 0.1UF 50V X7R
C716	065T0603104 32	CHIP 0.1UF 50V X7R
C717	065T0603104 32	CHIP 0.1UF 50V X7R
C718	065T0603104 32	CHIP 0.1UF 50V X7R
C720	065T0603104 32	CHIP 0.1UF 50V X7R
C725	065T0603104 32	CHIP 0.1UF 50V X7R
C728	065T0603104 32	CHIP 0.1UF 50V X7R
C730	065T0603104 32	CHIP 0.1UF 50V X7R
C732	065T0603104 32	CHIP 0.1UF 50V X7R
C734	065T0603104 32	CHIP 0.1UF 50V X7R
C736	065T0603104 32	CHIP 0.1UF 50V X7R

C740	065T0603104 32	CHIP 0.1UF 50V X7R
C558	065T0603104 32	CHIP 0.1UF 50V X7R
C469	065T0603104 32	CHIP 0.1UF 50V X7R
C471	065T0603104 32	CHIP 0.1UF 50V X7R
C474	065T0603104 32	CHIP 0.1UF 50V X7R
C476	065T0603104 32	CHIP 0.1UF 50V X7R
C478	065T0603104 32	CHIP 0.1UF 50V X7R
C479	065T0603104 32	CHIP 0.1UF 50V X7R
C484	065T0603104 32	CHIP 0.1UF 50V X7R
C485	065T0603104 32	CHIP 0.1UF 50V X7R
C486	065T0603104 32	CHIP 0.1UF 50V X7R
C487	065T0603104 32	CHIP 0.1UF 50V X7R
C488	065T0603104 32	CHIP 0.1UF 50V X7R
C498	065T0603104 32	CHIP 0.1UF 50V X7R
C506	065T0603104 32	CHIP 0.1UF 50V X7R
C508	065T0603104 32	CHIP 0.1UF 50V X7R
C534	065T0603104 32	CHIP 0.1UF 50V X7R
C541	065T0603104 32	CHIP 0.1UF 50V X7R
C549	065T0603104 32	CHIP 0.1UF 50V X7R
C550	065T0603104 32	CHIP 0.1UF 50V X7R
C551	065T0603104 32	CHIP 0.1UF 50V X7R
C552	065T0603104 32	CHIP 0.1UF 50V X7R
C557	065T0603104 32	CHIP 0.1UF 50V X7R
C372	065T0603104 32	CHIP 0.1UF 50V X7R
C303	065T0603104 32	CHIP 0.1UF 50V X7R
C304	065T0603104 32	CHIP 0.1UF 50V X7R
C305	065T0603104 32	CHIP 0.1UF 50V X7R
C313	065T0603104 32	CHIP 0.1UF 50V X7R
C314	065T0603104 32	CHIP 0.1UF 50V X7R
C317	065T0603104 32	CHIP 0.1UF 50V X7R
C320	065T0603104 32	CHIP 0.1UF 50V X7R
C321	065T0603104 32	CHIP 0.1UF 50V X7R
C322	065T0603104 32	CHIP 0.1UF 50V X7R
C325	065T0603104 32	CHIP 0.1UF 50V X7R
C329	065T0603104 32	CHIP 0.1UF 50V X7R
C330	065T0603104 32	CHIP 0.1UF 50V X7R
C331	065T0603104 32	CHIP 0.1UF 50V X7R
C745	065T0603104 32	CHIP 0.1UF 50V X7R
C751	065T0603104 32	CHIP 0.1UF 50V X7R
C752	065T0603104 32	CHIP 0.1UF 50V X7R
C753	065T0603104 32	CHIP 0.1UF 50V X7R
C755	065T0603104 32	CHIP 0.1UF 50V X7R
C758	065T0603104 32	CHIP 0.1UF 50V X7R
C760	065T0603104 32	CHIP 0.1UF 50V X7R
C792	065T0603104 32	CHIP 0.1UF 50V X7R
C212	065T0603104 32	CHIP 0.1UF 50V X7R
C229	065T0603104 32	CHIP 0.1UF 50V X7R
C3002	065T0603104 32	CHIP 0.1UF 50V X7R
C3006	065T0603104 32	CHIP 0.1UF 50V X7R
C302	065T0603104 32	CHIP 0.1UF 50V X7R
C332	065T0603104 32	CHIP 0.1UF 50V X7R

C356	065T0603104 32	CHIP 0.1UF 50V X7R
C357	065T0603104 32	CHIP 0.1UF 50V X7R
C358	065T0603104 32	CHIP 0.1UF 50V X7R
C360	065T0603104 32	CHIP 0.1UF 50V X7R
C361	065T0603104 32	CHIP 0.1UF 50V X7R
C371	065T0603104 32	CHIP 0.1UF 50V X7R
C370	065T0603104 32	CHIP 0.1UF 50V X7R
C368	065T0603104 32	CHIP 0.1UF 50V X7R
C366	065T0603104 32	CHIP 0.1UF 50V X7R
C365	065T0603104 32	CHIP 0.1UF 50V X7R
C364	065T0603104 32	CHIP 0.1UF 50V X7R
C363	065T0603104 32	CHIP 0.1UF 50V X7R
C362	065T0603104 32	CHIP 0.1UF 50V X7R
C333	065T0603104 32	CHIP 0.1UF 50V X7R
C334	065T0603104 32	CHIP 0.1UF 50V X7R
C335	065T0603104 32	CHIP 0.1UF 50V X7R
C336	065T0603104 32	CHIP 0.1UF 50V X7R
C340	065T0603104 32	CHIP 0.1UF 50V X7R
C344	065T0603104 32	CHIP 0.1UF 50V X7R
C346	065T0603104 32	CHIP 0.1UF 50V X7R
C348	065T0603104 32	CHIP 0.1UF 50V X7R
C349	065T0603104 32	CHIP 0.1UF 50V X7R
C351	065T0603104 32	CHIP 0.1UF 50V X7R
C352	065T0603104 32	CHIP 0.1UF 50V X7R
C353	065T0603104 32	CHIP 0.1UF 50V X7R
C354	065T0603104 32	CHIP 0.1UF 50V X7R
C780	065T0603150 31	CHIP 15PF 50V NPO
C481	065T0603180 31	CHIP 18PF 50V NPO
C480	065T0603180 31	CHIP 18PF 50V NPO
C501	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C502	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C503	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C509	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C510	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C511	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C512	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C514	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C515	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C516	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C527	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C526	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C525	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C524	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C523	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C522	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C521	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C520	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C518	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C517	065T0603223 32	CHIP 0.022UF 50V X7R 0603
C538	065T0603271 31	CHIP 270PF 50V NPO
C535	065T0603271 31	CHIP 270PF 50V NPO

C531	065T0603271 31	CHIP 270PF 50V NPO
C504	065T0603271 31	CHIP 270PF 50V NPO
C300	065T0603272 32	CHIP 2700PF 50V X7R
C337	065T0603272 32	CHIP 2700PF 50V X7R
C507	065T0603272 32	CHIP 2700PF 50V X7R
C533	065T0603272 32	CHIP 2700PF 50V X7R
C537	065T0603272 32	CHIP 2700PF 50V X7R
C540	065T0603272 32	CHIP 2700PF 50V X7R
C3005	065T0603330 31	CHIP 33PF 50V NPO
C323	065T0603330 31	CHIP 33PF 50V NPO
C324	065T0603330 31	CHIP 33PF 50V NPO
C528	065T0603330 31	CHIP 33PF 50V NPO
C529	065T0603330 31	CHIP 33PF 50V NPO
C411	065T0603330 31	CHIP 33PF 50V NPO
C412	065T0603330 31	CHIP 33PF 50V NPO
C544	065T0603332 32	CHIP 3300PF 50V X7R
C545	065T0603332 32	CHIP 3300PF 50V X7R
C546	065T0603333 32	CHIP 0.033UF 50V X7R
C547	065T0603333 32	CHIP 0.033UF 50V X7R
C209	065T0603470 32	CHIP 47PF 50V X7R
C5000	065T0603471 31	CHIP 470PF 50V NPO
C5001	065T0603471 31	CHIP 470PF 50V NPO
C598	065T0603471 31	CHIP 470PF 50V NPO
C599	065T0603471 31	CHIP 470PF 50V NPO
C311	065T0603472 32	CHIP 4700PF 50V X7R
C312	065T0603472 32	CHIP 4700PF 50V X7R
C555	065T0603472 32	CHIP 4700PF 50V X7R
C556	065T0603472 32	CHIP 4700PF 50V X7R
C217	065T0603473 32	CHIP 0.047UF 50V X7R
C225	065T0603473 32	CHIP 0.047UF 50V X7R
C589	065T0603474 17	CHIP 0.47UF 16V Y5V
C587	065T0603474 17	CHIP 0.47UF 16V Y5V
C580	065T0603474 17	CHIP 0.47UF 16V Y5V
C579	065T0603474 17	CHIP 0.47UF 16V Y5V
C566	065T0603474 17	CHIP 0.47UF 16V Y5V
C562	065T0603474 17	CHIP 0.47UF 16V Y5V
C226	065T0603474 17	CHIP 0.47UF 16V Y5V
C219	065T0603474 17	CHIP 0.47UF 16V Y5V
C399	065T0603680 31	CHIP 68PF 50V NPO
C3001	065T0603680 31	CHIP 68PF 50V NPO
C539	065T0603681 31	CHIP 680PF 50V NPO
C536	065T0603681 31	CHIP 680PF 50V NPO
C532	065T0603681 31	CHIP 680PF 50V NPO
C505	065T0603681 31	CHIP 680PF 50V NPO
C711	065T0603683 12	CHIP 0.68UF 16V X7R
C584	065T0805103 22	CHIP 0.01UF 25V X7R 0805
C581	065T0805103 22	CHIP 0.01UF 25V X7R 0805
C575	065T0805103 22	CHIP 0.01UF 25V X7R 0805
C567	065T0805103 22	CHIP 0.01UF 25V X7R 0805
C571	065T0805104 22	0.1UF +-10% 25V X7R 0805
C583	065T0805104 22	0.1UF +-10% 25V X7R 0805

C709	065T0805105 12	1UF +-10% 16V X7R
C710	065T0805105 12	1UF +-10% 16V X7R
C559	065T0805105 22	CHIP 1UF 25V X7R 0805
C563	065T0805225 12	CHIP 2.2UF 16V X7R 0805
C560	065T0805475 A5	CHIP 4.7UF 10V X5R
C561	065T0805475 A5	CHIP 4.7UF 10V X5R
C570	065T0805475 A5	CHIP 4.7UF 10V X5R
C573	065T0805475 A5	CHIP 4.7UF 10V X5R
C574	065T0805475 A5	CHIP 4.7UF 10V X5R
C577	065T0805475 A5	CHIP 4.7UF 10V X5R
C578	065T0805475 A5	CHIP 4.7UF 10V X5R
C554	065T0805475 A5	CHIP 4.7UF 10V X5R
C553	065T0805475 A5	CHIP 4.7UF 10V X5R
C543	065T0805475 A5	CHIP 4.7UF 10V X5R
C542	065T0805475 A5	CHIP 4.7UF 10V X5R
C5005	065T0805475 A5	CHIP 4.7UF 10V X5R
C5004	065T0805475 A5	CHIP 4.7UF 10V X5R
C3004	065T0805475 A5	CHIP 4.7UF 10V X5R
CP500	065T600M471 8T	CHIP ARRAY 470PF 8P
C231	067T 312220 3	SMD EC 22UF 16V 85C
C759	067T 312220 3	SMD EC 22UF 16V 85C
C754	067T 312220 3	SMD EC 22UF 16V 85C
C748	067T 312220 3	SMD EC 22UF 16V 85C
C746	067T 312220 3	SMD EC 22UF 16V 85C
C743	067T 312220 3	SMD EC 22UF 16V 85C
C737	067T 312220 3	SMD EC 22UF 16V 85C
C733	067T 312220 3	SMD EC 22UF 16V 85C
C729	067T 312220 3	SMD EC 22UF 16V 85C
C724	067T 312220 3	SMD EC 22UF 16V 85C
C721	067T 312220 3	SMD EC 22UF 16V 85C
C719	067T 312220 3	SMD EC 22UF 16V 85C
C519	067T 312220 3	SMD EC 22UF 16V 85C
C397	067T 312220 3	SMD EC 22UF 16V 85C
C316	067T 312220 3	SMD EC 22UF 16V 85C
C215	067T 312220 3	SMD EC 22UF 16V 85C
C205	067T 312220 3	SMD EC 22UF 16V 85C
C343	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C341	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C338	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C756	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C750	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C749	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C744	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C739	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C731	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C726	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C723	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C715	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C714	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C713	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C592	067T 4121003XT	EC 85°C CHIP 10UF M 16V

C591	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C586	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C5003	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C499	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C497	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C496	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C483	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C482	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C757	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C355	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C350	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C347	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C345	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C403	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C4000	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C369	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C367	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C359	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C473	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C470	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C463	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C458	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C450	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C437	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C419	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C418	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C416	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C414	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C761	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C319	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C228	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C218	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C705	067T 4121006XT	CAP S85°C 10UF M 35V XINDECO
C408	067T 4121013XT	EC 85°C SMD CAP 100UF M 16V
C413	067T 4121013XT	EC 85°C SMD CAP 100UF M 16V
C791	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C742	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C735	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C727	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C707	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C706	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C597	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C595	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
C5002	067T 4124703XT	EC 85°C SMD CAP 47UF M 16V
LP200	071T 56A301 8M	CHIP BEAD
L400	071T 56B221	CHIP BEAD 220 OHM
L406	071T 56B221	CHIP BEAD 220 OHM
L407	071T 56B221	CHIP BEAD 220 OHM
L408	071T 56B221	CHIP BEAD 220 OHM
L409	071T 56B221	CHIP BEAD 220 OHM
FB306	071T 56G151 A	CHIOP BEAD 150 OHM

FB305	071T 56G151 A	CHIOP BEAD 150 OHM
FB304	071T 56G151 A	CHIOP BEAD 150 OHM
FB303	071T 56G151 A	CHIOP BEAD 150 OHM
FB302	071T 56G151 A	CHIOP BEAD 150 OHM
FB301	071T 56G151 A	CHIOP BEAD 150 OHM
FB300	071T 56G151 A	CHIOP BEAD 150 OHM
L200	071T 56G151 B	BEAD 0805 150 OHM
L206	071T 56G151 B	BEAD 0805 150 OHM
L207	071T 56G151 B	BEAD 0805 150 OHM
L410	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L502	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L503	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L508	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L509	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L510	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L511	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L700	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L704	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L708	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L710	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L712	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L714	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L716	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L719	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L720	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L800	071T 56G301 EA	CHIP BEAD 300 OHM 0805
L201	071T 56U600	CHIP BEAD 60 OHM 0805
L202	071T 56U600	CHIP BEAD 60 OHM 0805
L203	071T 56U600	CHIP BEAD 60 OHM 0805
L204	071T 56Z601	CHIP BEAD 600 OHM
L205	071T 56Z601	CHIP BEAD 600 OHM
L303	071T 56Z601	CHIP BEAD 600 OHM
L401	071T 56Z601	CHIP BEAD 600 OHM
L507	071T 56Z601	CHIP BEAD 600 OHM
L707	071T 56Z601	CHIP BEAD 600 OHM
L713	071T 56Z601	CHIP BEAD 600 OHM
L715	071T 56Z601	CHIP BEAD 600 OHM
L717	071T 56Z601	CHIP BEAD 600 OHM
L718	071T 56Z601	CHIP BEAD 600 OHM
LP500	071T 57G601TSB	IND CHIP BEAD 1206 600OHM TECSTAR
L300	073T 12622910K	CHIP INDUCTOR 2.2UH 10% 1206
L301	073T 12622910K	CHIP INDUCTOR 2.2UH 10% 1206
L302	073T 12622910K	CHIP INDUCTOR 2.2UH 10% 1206
L405	073T253S 6 K	SMD CHOKE 90 OHM WCM2012D-900T
L404	073T253S 6 K	SMD CHOKE 90 OHM WCM2012D-900T
L403	073T253S 6 K	SMD CHOKE 90 OHM WCM2012D-900T
L402	073T253S 6 K	SMD CHOKE 90 OHM WCM2012D-900T
U401	087T 202 32 NY	IC SOCKET 32PIN PLCC
P400	088T 340 19 H	HDMI HEADER
ZD200	093T 39147SEM	ZMM5V6
ZD201	093T 39147SEM	ZMM5V6

D205	093T 60231	NO APP BAT54S SOT-23
D206	093T 60231	NO APP BAT54S SOT-23
D204	093T 60505	BAT54C PHILIPS
D400	093T 60505	BAT54C PHILIPS
D500	093T 64 42 P	BAV70 SOT23
D201	093T 6433P	BAV99
D202	093T 6433P	BAV99
D203	093T 6433P	BAV99
D501	093T 6433P	BAV99
D502	093T 6433P	BAV99
ZD400	093T 39S 60 T	MLL5227B
	715T1814 1	MAIN BOARD PCB
	PTPFLA1P	OPTION BOARD
J100	033T802436C H	HEADER FEMALE 36P 2.0MM
J101	033T802436C H	HEADER FEMALE 36P 2.0MM
	715T1837 1	MAIN BOARD PCB
	Q07T 7 T 84	COMPOUND PALLET
	Q07T 7 T 85	COMPOUND PALLET
	Q15T8335 1	MAINFRAME
	Q15T8336 1	PCB BKT LEFT
	Q15T8336 2	PCB BKT RIGHT
	Q15T8337 1	BKT_AU066_TOP
	Q15T8338 1	BKT_AU066_LEFT_UP_MID
	Q15T8338 2	BKT_AU066_LEFT_MID
	Q15T8339 1	BKT_AU066_BOTTOM
	Q26T 800504 2	BARCODE
	Q40T 37V615 3B	RATING LABEL
	Q40T0002654 5B	I/O LABEL
	Q40T0002654 6A	I/O LABEL
	Q44T3121510520	PU FOAM
	Q44T3121510522	SPONGE
	Q44T3121510523	SPONGE
	Q44T3121510525	SPONGE
	Q44T3B01 1	EPS
	Q44T3B01 2	EPS
	Q44T3B01 3	EPS
	Q44T3B01 4	EPS
	Q44T3B01 6 1A	U TYPE BOX
	Q44T3B01615 3A	CARTON
	Q45T 99606 2 R	PE BAG FOR BASE
	Q45T 99609 3 R	EPE COVER
	Q45T 99609 5 R	EPE COVER
	Q45T 99626 6 R	PE BAG FOR MONITOR
	Q52T6020506	PROTECT FILM
	Q85T 746 1	SHIELD COVER
	Q85T 747 1	SHIELD COVER
	TUPF6AA1	TUNER BOARD
J100	033T801736A H	PIN HEADER 36P 2.0MM
R100	061T 20062952T	6.2 OHM 1% 1/4W
R159	061T153M390 59	39 OHM 5% 3W
R114	061T153M390 59	39 OHM 5% 3W

C113	067T 309101 7T	100UF +-20% 50V
L104	073T 259 4	CHOKE COIL
J102	088T 78 13 1C	RCA JACK
J101	088T 78 13 3C	AV-S-01-W
CN101	088T 78 1315C	RCA JACK
J103	088T 78 1316C	RCA JACK2*3 R/BLU/G+Y/W/R
X600	093T 22D60 BH	CRYSTAL 18.432MHZ/12PF/49U
TU100	094TNPALALL 3C	TUNER TMI1-C23I4W CHANGHONG
U600	056T 133 30AAC	AZ1117H-ADJ-E1
U103	056T 13334AAAC	AZ1117S-5.0TRE1 3PIN
U102	056T 379 36	MC34063A
U601	056T 593504	MSP3450G-QI-B8-V3
U100	056T 614 1	IC 74HC4052D PHILIPS
U104	056T 625 1	NJM-2244M-TE1/JRC
U105	056T 652500	WT6854 512
Q101	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q103	057T 417 4	CHIP PMBS3904 BY PHILIPS
RN103	061T 125473 8	RST CHIP AR 8P4R 47 KOHM +-5% 1/16W
RN102	061T 125473 8	RST CHIP AR 8P4R 47 KOHM +-5% 1/16W
RN100	061T 125473 8	RST CHIP AR 8P4R 47 KOHM +-5% 1/16W
RN101	061T 125473 8	RST CHIP AR 8P4R 47 KOHM +-5% 1/16W
R102	061T0603000	CHIP 00HM 1/16W
R111	061T0603000	CHIP 00HM 1/16W
R160	061T0603000	CHIP 00HM 1/16W
R158	061T0603100	CHIP 100HM 1/16W
R623	061T0603101	CHIP 100OHM 1/16W
R622	061T0603101	CHIP 100OHM 1/16W
R621	061T0603101	CHIP 100OHM 1/16W
R620	061T0603101	CHIP 100OHM 1/16W
R619	061T0603101	CHIP 100OHM 1/16W
R611	061T0603101	CHIP 100OHM 1/16W
R609	061T0603101	CHIP 100OHM 1/16W
R147	061T0603101	CHIP 100OHM 1/16W
R146	061T0603101	CHIP 100OHM 1/16W
R145	061T0603101	CHIP 100OHM 1/16W
R144	061T0603101	CHIP 100OHM 1/16W
R142	061T0603101	CHIP 100OHM 1/16W
R140	061T0603101	CHIP 100OHM 1/16W
R107	061T0603101	CHIP 100OHM 1/16W
R106	061T0603101	CHIP 100OHM 1/16W
R603	061T0603102	CHIP 1K OHM 1/16W
R134	061T0603102	CHIP 1K OHM 1/16W
R105	061T0603103	CHIP 10KOHM 1/16W
R108	061T0603103	CHIP 10KOHM 1/16W
R110	061T0603103	CHIP 10KOHM 1/16W
R131	061T0603103	CHIP 10KOHM 1/16W
R133	061T0603103	CHIP 10KOHM 1/16W
R139	061T0603103	CHIP 10KOHM 1/16W
R101	061T0603103	CHIP 10KOHM 1/16W
R602	061T0603120 0F	RST CHIPR 120 OHM +-1% 1/10W
R117	061T0603150 0F	RST CHIPR 150 OHM +-1% 1/10W

R118	061T0603180 1F	RST CHIPR 1.8 KOHM +-1% 1/10W
R113	061T0603181	RST CHIPR 180 OHM +-5% 1/10W
R116	061T0603470 2F	RST CHIPR 47 KOHM +-1% 1/10W
R617	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R615	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R613	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R612	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R610	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R608	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R614	061T0603472	CHIP 4.7KOHM 1/16W
R156	061T0603750 9F	CHIP 75OHM 1/16W 1%
R137	061T0603750 9F	CHIP 75OHM 1/16W 1%
R138	061T0603750 9F	CHIP 75OHM 1/16W 1%
R155	061T0603750 9F	CHIP 75OHM 1/16W 1%
R157	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R154	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R153	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R132	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R124	061T0805750	RST CHIPR 75 OHM +-5% 1/8W
R604	061T1206620 0F	RST CHIPR 620 OHM +-1% 1/4W
C168	065T0603101 31	CHIP 100PF 50V NPO
C601	065T0603101 31	CHIP 100PF 50V NPO
C110	065T0603101 32	CHIP 100PF 50V X7R
C111	065T0603101 32	CHIP 100PF 50V X7R
C112	065T0603101 32	CHIP 100PF 50V X7R
C644	065T0603102 32	CHIP 1000PF 50V X7R
C642	065T0603102 32	CHIP 1000PF 50V X7R
C641	065T0603102 32	CHIP 1000PF 50V X7R
C640	065T0603102 32	CHIP 1000PF 50V X7R
C645	065T0603102 32	CHIP 1000PF 50V X7R
C612	065T0603104 32	CHIP 0.1UF 50V X7R
C605	065T0603104 32	CHIP 0.1UF 50V X7R
C604	065T0603104 32	CHIP 0.1UF 50V X7R
C163	065T0603104 32	CHIP 0.1UF 50V X7R
C124	065T0603104 32	CHIP 0.1UF 50V X7R
C119	065T0603104 32	CHIP 0.1UF 50V X7R
C117	065T0603104 32	CHIP 0.1UF 50V X7R
C116	065T0603104 32	CHIP 0.1UF 50V X7R
C109	065T0603104 32	CHIP 0.1UF 50V X7R
C108	065T0603104 32	CHIP 0.1UF 50V X7R
C105	065T0603104 32	CHIP 0.1UF 50V X7R
C101	065T0603104 32	CHIP 0.1UF 50V X7R
C628	065T0603104 32	CHIP 0.1UF 50V X7R
C635	065T0603152 31	CHIP 1500PF 50V NPO
C620	065T0603152 31	CHIP 1500PF 50V NPO
C600	065T0603152 31	CHIP 1500PF 50V NPO
C100	065T0603152 31	CHIP 1500PF 50V NPO
C150	065T0603220 31	CHIP 22PF 50V NPO
C151	065T0603220 31	CHIP 22PF 50V NPO
C152	065T0603220 31	CHIP 22PF 50V NPO
C153	065T0603220 31	CHIP 22PF 50V NPO

C621	065T0603221 31 GP	CHIP 220PF 50V NPO
C632	065T0603331 31	CHIP 330PF 50V NPO
C631	065T0603331 31	CHIP 330PF 50V NPO
C627	065T0603331 31	CHIP 330PF 50V NPO
C626	065T0603331 31	CHIP 330PF 50V NPO
C625	065T0603331 31	CHIP 330PF 50V NPO
C624	065T0603331 31	CHIP 330PF 50V NPO
C611	065T0603471 32	CHIP 470PF 50V NPO
C622	065T0603471 32	CHIP 470PF 50V NPO
C636	065T0603471 32	CHIP 470PF 50V NPO
C125	065T0603471 32	CHIP 470PF 50V NPO
C131	065T0603471 32	CHIP 470PF 50V NPO
C135	065T0603471 32	CHIP 470PF 50V NPO
C138	065T0603471 32	CHIP 470PF 50V NPO
C139	065T0603471 32	CHIP 470PF 50V NPO
C606	065T0603509 31	CHIP 5PF 50V NPO
C607	065T0603509 31	CHIP 5PF 50V NPO
C608	065T0603560 31	CHIP 56PF 50V NPO
C609	065T0603560 31	CHIP 56PF 50V NPO
C646	065T0603560 31	CHIP 56PF 50V NPO
C143	065T0603680 31	CHIP 68PF 50V NPO
C142	065T0603680 31	CHIP 68PF 50V NPO
C141	065T0603680 31	CHIP 68PF 50V NPO
C140	065T0603680 31	CHIP 68PF 50V NPO
C137	065T0603680 31	CHIP 68PF 50V NPO
C133	065T0603680 31	CHIP 68PF 50V NPO
C132	065T0603680 31	CHIP 68PF 50V NPO
C128	065T0603680 31	CHIP 68PF 50V NPO
C623	067T 312109 3	SMD EC 1UF 16V 85C
C619	067T 312109 3	SMD EC 1UF 16V 85C
C617	067T 312109 3	SMD EC 1UF 16V 85C
C616	067T 312109 3	SMD EC 1UF 16V 85C
C615	067T 312109 3	SMD EC 1UF 16V 85C
C614	067T 312109 3	SMD EC 1UF 16V 85C
C629	067T 312220 3	SMD EC 22UF 16V 85C
C630	067T 312339 3T	CHIP EC 3.3UF 16V 85C
C146	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C147	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C148	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C149	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C162	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C602	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C603	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C613	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C618	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C639	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C634	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C633	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C120	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C121	067T 4121003XT	EC 85°C CHIP 10UF M 16V
C123	067T 4121003XT	EC 85°C CHIP 10UF M 16V

C134	067T 4121003XT	EC 85℃ CHIP 10UF M 16V
C136	067T 4121003XT	EC 85℃ CHIP 10UF M 16V
C144	067T 4121003XT	EC 85℃ CHIP 10UF M 16V
C145	067T 4121003XT	EC 85℃ CHIP 10UF M 16V
C104	067T 4121007XT	CAP S85℃ 10UF M 50V XINDECO
C115	067T 4121013XT	EC 85℃ SMD CAP 100UF M 16V
C114	067T 4121013XT	EC 85℃ SMD CAP 100UF M 16V
C610	067T 4121013XT	EC 85℃ SMD CAP 100UF M 16V
C118	067T 4121013XT	EC 85℃ SMD CAP 100UF M 16V
C643	067T 4124703XT	EC 85℃ SMD CAP 47UF M 16V
C106	067T311F221 2	105 摄氏度 220UF M 10V SMD
C107	067T311F221 2	105 摄氏度 220UF M 10V SMD
L107	071T 56Z601	CHIP BEAD 600 OHM
L111	071T 56Z601	CHIP BEAD 600 OHM
L115	071T 56Z601	CHIP BEAD 600 OHM
L117	071T 56Z601	CHIP BEAD 600 OHM
L600	071T 56Z601	CHIP BEAD 600 OHM
L108	071T 59B121	BEAD 0603 120 OHM
L120	071T 59B121 K	CHIP BEAD
L119	071T 59B121 K	CHIP BEAD
L118	071T 59B121 K	CHIP BEAD
L116	071T 59B121 K	CHIP BEAD
L113	071T 59B121 K	CHIP BEAD
L112	071T 59B121 K	CHIP BEAD
L100	071T 59B121 K	CHIP BEAD
L123	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L124	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L601	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L602	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L603	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L122	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L121	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L114	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L106	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L102	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L101	071T 59B601 EA	CHIP BEAD 600OHM 0603 TB1608
L105	073T 62181	180UH +-10%
D101	093T 6432V	LL4148-GSO8 SMD BY VISHA
D100	093T 6432V	LL4148-GSO8 SMD BY VISHA
	715T1769 1	TUNER BOARD PCB
	001T6017 2 GP	SCREW
	040T 58162435A	LABEL
	045T 76 28 RN	PE BAG FOR MANUAL
	Q41T3701615 3A	MANUAL
	Q45T 76 28NV2 R	PE BAG FOR CLAMP